

# **MY18 TJ Trax**

## **Owner's Manual**



**Holden**



GM Holden Ltd, ABN 84 006 893 232, Holden New Zealand Ltd., Company Number 1602 (hereinafter Holden)

### **Change of name, address or ownership**

If you drive a pre-owned Holden, have moved house or changed any of your details, we'd like to hear from you!

Holden uses your details to keep your vehicle's factory provided Roadside Assistance and Warranty details up to date.

It also helps us let you know if there is an existing safety recall or rework on your vehicle. To update your details, please take a few minutes to fill in and mail the form at the back of the Service & Warranty Booklet or visit Holden's website at: [www.holden.com.au/forms/change-of-owner-details](http://www.holden.com.au/forms/change-of-owner-details)

GM Holden Ltd (Holden) is collecting the new owner's personal information in order to process the request for transfer for the specified vehicle. We may disclose your personal information to our related companies and third parties who provide us with (or help us provide) products and services, including to overseas locations such as the USA, and other countries in Europe, Oceania and Asia.

Holden's privacy policy (available at: [www.holden.com.au/privacypolicy](http://www.holden.com.au/privacypolicy)) states how you can seek to access or correct any personal information Holden holds about you, how to complain about a privacy breach by Holden and how Holden will deal with a privacy complaint.

You can contact Holden on 1800 033 349 or alternatively, you may prefer to email Holden at:

[holdencustomer care@gm.com](mailto:holdencustomer care@gm.com)

**Note:** Please refer to the inside front cover of the Service & Warranty Booklet for the Vehicle Identification Certificate.

Printed in Australia

**Part No. 92509100**

June 2017

(MY18 TJ Trax. Print 1)

© 2017 GM Holden Ltd.

© 2017 Holden New Zealand Ltd.

Reproduction in whole or part is  
prohibited without written approval from

GM Holden Ltd., ABN 84 006 893 232 (Australia) or

Holden New Zealand Ltd., Company Number 1602 (New Zealand)



---

Introduction.....	2
In brief.....	4
Keys, doors and windows.....	16
Storage.....	34
Seats, restraints.....	38
Instruments and controls .....	57
Lighting.....	90
Infotainment system .....	96
Climate control.....	137
Driving and operating .....	142
Vehicle care.....	175
Service and maintenance .....	220
Technical data.....	222
Customer information .....	227
Index.....	230



## Introduction

We thank you for choosing Holden and want to assure you of our continuing interest in your driving pleasure and satisfaction.

This owner's manual applies to the current Trax vehicle.

Therefore, due to different models and options, you may find reference in this manual to some equipment not fitted to your own vehicle.

Please note that all information, illustrations and specifications in this manual are based on the latest production information available at the time of printing. Holden reserves the right to make changes at any time without notice and without incurring any obligation.



## Introduction

Your vehicle is a designed combination of advanced technology, safety, environmental friendliness and economy.

This Owner's Manual provides you with all the necessary information to enable you to drive your vehicle safely and efficiently.

Make sure your passengers are aware of the possible risk of accident and injury which may result from improper use of the vehicle.

## Using this manual

- This manual describes all options and features available for this model. **Certain descriptions, including those for display and menu functions, may not apply to your vehicle due to model variant.**
- The In brief section will give you an initial overview.


- The table of contents at the beginning of this manual and within each chapter shows where the information is located.
- The index will enable you to search for specific information.
- Directional data, e.g. left or right, or front or back, always relate to the direction of travel.
- For a complete list of the registered trademarks contained in this manual:  
*Trademarks and licence agreements* ⇨ 227

## Symbols


Page references indicated with ⇨.  
This indicates 'see page'.

## Danger, warnings and cautions

### Danger

Text marked  **Danger** provides information on risk of fatal injury. Disregarding this information may endanger life.

### Warning

Text marked  **Warning** provides information on risk of accident or injury. Disregarding this information may lead to injury.

### Caution

Text marked **Caution** provides information on possible damage to the vehicle. Disregarding this information may lead to vehicle damage.



## In brief

### Initial drive information ..... 4

Locking/unlocking the vehicle ..... 4

Seat adjustment ..... 5

Head restraint adjustment ..... 6

Seat belts ..... 6

Mirror adjustment ..... 6

Steering wheel adjustment ..... 7

Instrument panel overview ..... 8

Exterior lighting ..... 9

High/low beam ..... 9

Hazard warning flashers ..... 9

Turn and lane change signals .... 10

Horn ..... 10

Washer and wiper systems ..... 10

Climate control ..... 12

Transmission ..... 12

Getting started ..... 14

Starting the engine ..... 14

Parking ..... 15

## Initial drive information

### Locking/unlocking the vehicle

#### Remote keyless entry



##### With ignition switch



#### With electronic key system



The key operates all doors and the ignition.

- Press  to unlock the doors.  
The hazard lamps flash twice.
- Press  to lock the doors.  
The hazard lamps flash once.


Central locking system ⇨ 21

Tailgate ⇨ 26



## Seat adjustment

### Seat positioning

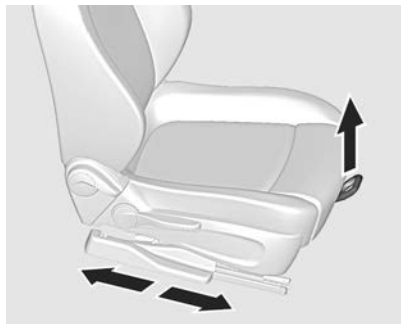


1. Move the seat forwards or backwards by lifting the handle at the front and sliding the seat.
2. Release the handle to engage the latch.

Try to move the seat back and forth to be sure it is locked in place.

*Seat position ⇨ 40*

*Seat adjustment ⇨ 40*

### Seat backrests

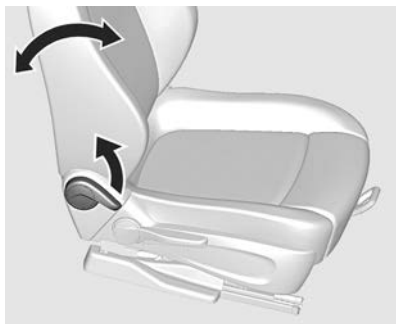


1. Recline the seatback by lifting the lever.
2. Adjust the angle and release the lever.
3. Allow the seat to engage.

#### **Note**

Do not lean on the seat when adjusting.

*Seat adjustment ⇨ 40*

### Seat height

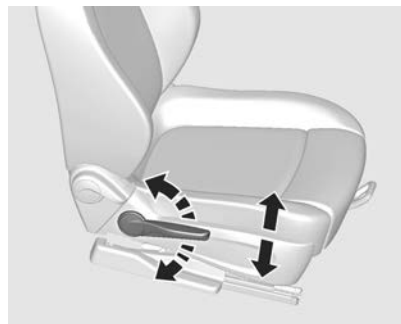


- To lower the seat cushion, push the lever down several times.
- To raise the seat cushion, pull the lever up several times.

*Seat adjustment ⇨ 40*



## Head restraint adjustment

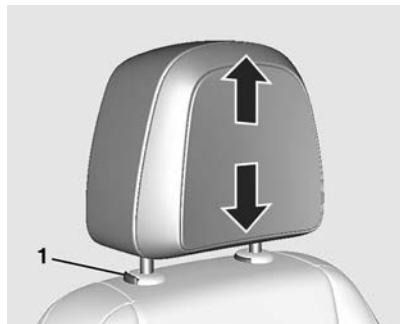

- To raise the head restraint, pull the head restraint upwards.
- To lower the head restraint, press (1) and push the head restraint downwards.

*Head restraints* ⇨ 38

## Seat belts



1. Withdraw the belt from the reel.
2. Pull the metal tongue across your body into the buckle, until it clicks into place.
3. Tension the lap belt regularly while driving by tugging the shoulder belt.

*Seat belts* ⇨ 45

## Mirror adjustment

### Interior mirrors



To reduce headlamp glare from following vehicles, pull the lever towards the rear of the vehicle.

*Interior mirrors* ⇨ 29



## Exterior mirrors



**L:** Left side mirror selected

**R:** Right side mirror selected

**O:** No mirrors selected

To adjust an exterior rear view mirror:

1. Rotate the switch to **L** or **R**.
2. Swivel the switch to adjust the mirror.

*Exterior mirrors* ⇨ 28

## Steering wheel adjustment




1. To unlock, move the lever down.
2. Adjust the steering wheel.
3. To lock, move the lever up.
4. Ensure the steering wheel is locked in position before driving.

*Steering wheel adjustment* ⇨ 58



## Instrument panel overview

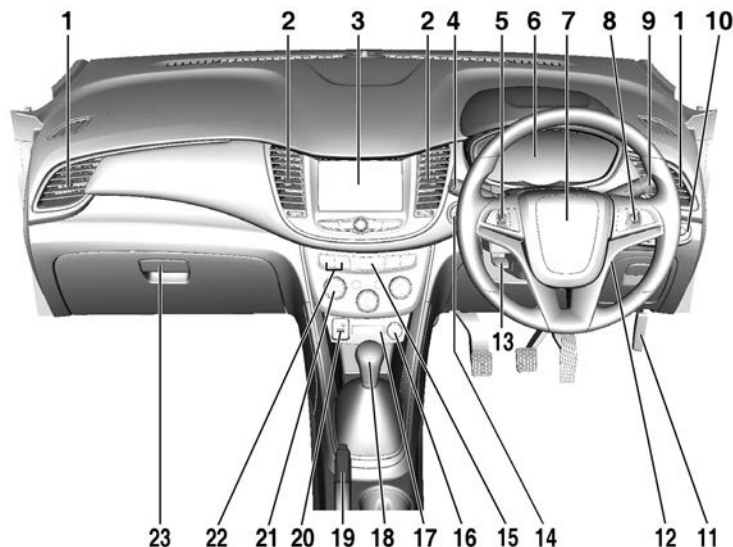

1. Side air vents ⇨ 140
2. Central air vents ⇨ 140
3. Infotainment system ⇨ 96
4. Wiper and washer lever ⇨ 59
5. Cruise control ⇨ 159
6. Instrument cluster ⇨ 64
7. Horn, driver's airbag ⇨ 58, 49
8. Steering wheel remote controls ⇨ 100
9. Turn signals ⇨ 92
10. Exterior lamp switch ⇨ 90
11. Bonnet release lever ⇨ 178
12. Ignition switch/lock ⇨ 143
13. Steering wheel adjustment ⇨ 58
14. Engine Start/Stop button ⇨ 143
15. Hazard warning flasher ⇨ 92
16. Power outlet ⇨ 62
17. Passenger seat belt light ⇨ 68
18. Shift lever ⇨ 149, 153
19. Parking brake ⇨ 155
20. AUX, USB port ⇨ 111
21. Climate control system ⇨ 137
22. TSC/ESC/DCS switches ⇨ 156
23. Glove box ⇨ 34



## Exterior lighting



⏻ (OFF): Rotate to turn all lamps and lights off.


**AUTO:** Exterior lamps and instrument panel lights turn on or off automatically, depending on the ambient light.

⌂ (Park lamps): Turns on the park lamps, number plate lamps and instrument panel lights.

⌂ (Headlamps): Turns on the headlamps and all park lamps.

*Exterior lighting* ⇨ 90

## High/low beam

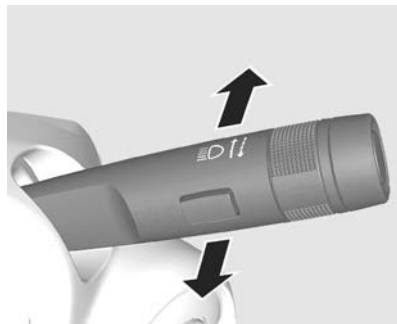


- To switch from low to high beam, push the lever.
- To switch to low beam, push again or pull the lever.

*Headlamp high/low beam* ⇨ 91

## Hazard warning flashers




Press  to turn the hazard warning flashers on or off, when the ignition is in any position.

*Hazard warning flashers* ⇨ 92



## Turn and lane change signals

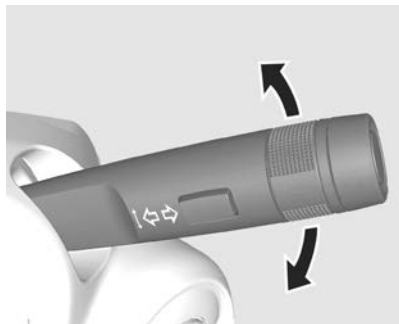

- Push the lever in the direction the steering wheel is turned.
- A green arrow on the instrument cluster flashes when the lamps are in operation.

*Turn and lane change signals* ⇨ 92


## Horn



Press .

## Washer and wiper systems

### Windscreen wiper

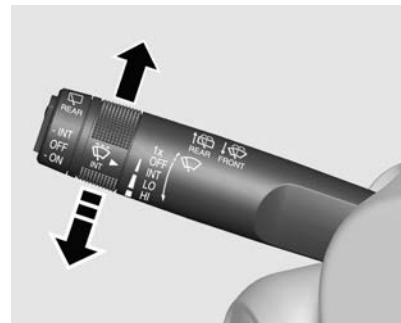

**1x:** Mist

**OFF:** Off

**INT:** Intermittent operation

**LO:** Continuous wipe, slow speed


**HI:** Continuous wipe, fast speed

For a single wipe when the windscreen wipers are off, lightly move the lever up and release it.

*Windscreen wiper/washer* ⇨ 59



## Windscreen washer

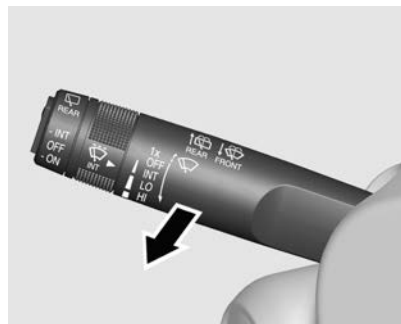

Pull the lever rearwards to wash the windscreen.


Washer fluid is sprayed onto the windscreen and the wipers cycle once.

*Windscreen wiper/washer* ⇨ 59

*Washer fluid* ⇨ 185

## Rear window wiper/washer

### Wiper

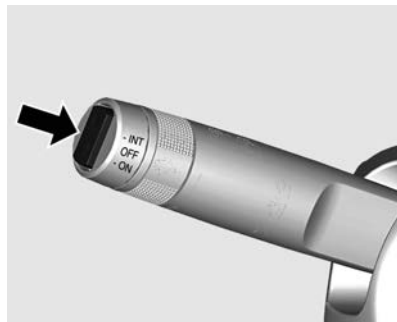


**INT:** Intermittent wipes, push in at the top of the button.

**ON:** Continuous wipes, push in at the bottom of the button.

**OFF:** To turn the wipers off, place the switch in the OFF position.

*Rear window wiper/washer* ⇨ 61

## Washer

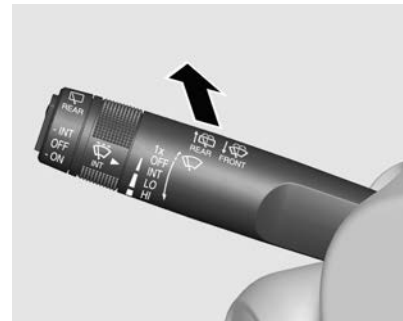

Push the lever forwards.

Washer fluid is sprayed onto the rear window and the wiper swipes for a few strokes.

*Rear window wiper/washer* ⇨ 61

*Washer fluid* ⇨ 185



## Climate control

### Heated rear window



Press .

#### Note

The engine must be running.

*Heated rear window* ⇨ 31

### Demisting and defrosting the windows




Rotate to select .

*Windscreen demister* ⇨ 138

## Transmission

### Manual transmission

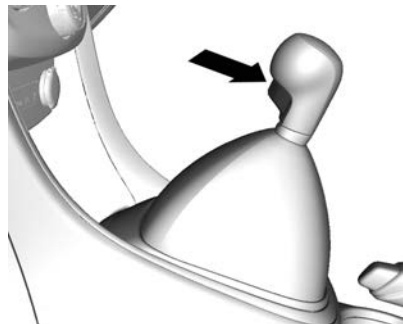

Select reverse gear while the vehicle is stationary:

1. Press the clutch pedal to the floor.
2. Wait 3 seconds.
3. Pull the button of the front of the shift lever up.

4. Move the shift lever to position **R**.

If the gear does not engage:

1. Return the shift lever to neutral.
2. Release the clutch pedal.



3. Push the clutch pedal again and repeat gear selection.

*Manual transmission ⇨ 153*

### Automatic transmission




- P:** (park) In park position, the front wheels are locked. Select **P** only when the vehicle is stationary and the park brake is applied.
- R:** (reverse) Place in reverse only when the vehicle is stationary.
- N:** (neutral).

**D:** (drive) Used for general driving. Allows the transmission to be shifted into any of the six forward gears.

**M:** (manual).

Movement between certain gear positions requires pressing the release button on the shift lever and/or depressing the brake pedal.

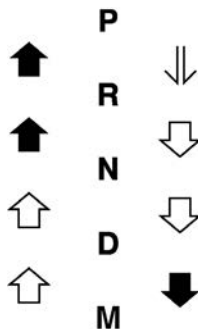


Follow the descriptions as indicated by the arrows when moving the shift lever.



Press the release button to select a gear.



 Depress the brake pedal and press the release button to select a gear.



Shift freely to select a gear.

*Automatic transmission ⇨ 149*



## Getting started


1. Check the windows, mirrors and lamps are clean.
2. Visually check tyre inflation. Check tyre pressures weekly.
3. To ensure pedal travel is uninhibited, there must be no loose mats in the area of the pedals. *Floor mats* ⇨ 219
4. Close and secure all doors.
5. Position the seat for comfortable driving.
6. Adjust rear view mirrors.
7. Fasten seat belts.
8. Check the warning indicators illuminate when turning the ignition on.

*Warning lights, gauges and indicators* ⇨ 64

*Driving and operating* ⇨ 142

## Starting the engine

### Vehicles with ignition switch

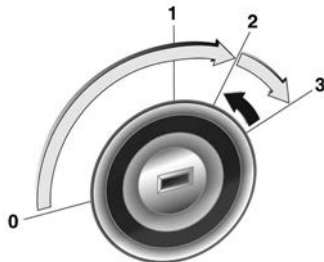

### ⚠ Warning

Do not turn the engine off while the vehicle is moving as there will not be any power assist for brakes or steering.

Never remove the key while the vehicle is moving, as this will lock the steering.

0: (LOCK) The key can only be inserted and removed from this position.

1: (ACC) When the key is in this position, the audio system operates.

2: (ON) When the key is in this position, the engine is ready to start and all electrical systems are active.

Do not leave the switch in this position for a long time, unless the engine is running, otherwise the vehicle's battery will discharge.

3: (START) Turn the key to this position and release when the engine is running.

*Ignition positions* ⇨ 143



## Vehicles with electronic key system



### Warning


Do not turn the engine off while the vehicle is moving as there will not be any power assist for brakes or steering.

1. Have the electronic key inside the vehicle.
2. Depress the brake pedal.
3. Automatic transmission in P or N.
4. Do not operate the accelerator pedal.
5. Press the Engine Start/Stop button.

The engine starts after a short delay.

*Starting the engine* ⇨ 145

## Parking

1. Apply the park brake firmly without pushing the release button.
2. Automatic transmission: Select position **P**.  
Manual transmission: If facing uphill or on flat ground, select 1st gear. If facing downhill, select reverse gear.
3. Shut all windows.
4. Turn the ignition off and remove the key.
5. Press  on the key to lock all doors.

*Driving and operating* ⇨ 142



## Keys, doors and windows

<b>Keys and locks .....</b>	<b>16</b>
Keys .....	16
Foldaway/removable key blade..	17
Radio remote control .....	18
Electronic key system .....	20
Memorised settings .....	21
Central locking system .....	21
Electronic key system operation .....	23
Automatic door locks .....	24
<b>Doors .....</b>	<b>25</b>
Manual door locks .....	25
Child security rear door locks .....	25
Tailgate .....	26
Vehicle security .....	27
Auto door unlock .....	27
Immobiliser .....	28

<b>Exterior mirrors .....</b>	<b>28</b>
Convex mirror .....	28
Power mirrors .....	28
<b>Interior mirrors .....</b>	<b>29</b>
Rear view mirror .....	29
<b>Windows .....</b>	<b>30</b>
Power windows .....	30
Heated rear window .....	31
Sun visors .....	32
<b>Roof .....</b>	<b>32</b>
Sunroof .....	32

## Keys and locks

### Keys

#### Caution

Do not attach heavy or bulky items to the ignition key.



### With ignition switch





**With electronic key system**

The key operates all doors and the ignition.

- Press  to unlock the doors and tailgate.  
The hazard lamps flash twice.
- Press  to lock the doors and tailgate.  
The hazard lamps flash once.

*Central locking system* ⇨ 21

*Tailgate* ⇨ 26

**Foldaway/removable key blade****With ignition switch**

1. Press button to extend the key blade.
2. To retract the key blade, press the button and fold the blade into the key.

**With electronic key system**

1. Press button to remove the key blade.
2. Reinsert the key blade into the key.



### About the keys

- The remote control has a range of up to 30 metres.
- The range depends on the charge of the key battery, on ambient conditions, the key's location and the area between the key and the vehicle.
- Take care that no button is pressed unintentionally, especially when the vehicle is out of sight.
- Protect from moisture and high temperatures.

The key buttons may not work if:

- More than 30 metres from the vehicle.
- Battery voltage is too low.  
*Battery replacement* ⇨ 18
- The key buttons are operated repeatedly while not in range of the vehicle.

- The central locking system is operated at frequent intervals.
- The power supply is interrupted for a short time.
- The vehicle is parked near strong radio activity.

### Replacement keys

If a key is lost, a replacement can be ordered through a Holden Dealer.

### Radio remote control

#### Battery replacement

As soon as the range of the remote control reduces, replace the battery:

#### Note

- Batteries do not belong in household waste. Dispose of at an appropriate recycling collection point.
- Avoid dropping the transmitter.
- Do not place heavy objects on the transmitter.
- Keep the transmitter away from water and direct sunlight.

If the transmitter gets wet, wipe it with a soft cloth.

#### Caution

Avoid touching the flat surfaces of the battery, the circuit board and other components inside the remote control with bare fingers. Handling will shorten battery life.



**With ignition switch**

Use CR2032 battery or equivalent.

1. Open the cover.
2. Remove the used battery.  
Avoid touching the circuit board to other components.
3. Install the new battery.  
Place the negative side (-) down towards the base.
4. Close the cover.
5. Check the key operation.

**Remote control synchronisation**

After replacing the battery, unlock the door with the key in the driver's door lock and turn the ignition switch to the ON position.

The remote control is synchronised when the ignition is switched on.

**With electronic key system**

Use a CR2032 battery or equivalent.

1. Press button on the side of the transmitter to remove the key blade.

2. Reinsert the key blade approximately 5 mm and rotate the key blade to remove the back cover, as shown.

**Note:**

Take care that no parts fall out.


3. Carefully lift the battery up using a flat tool.
4. Remove the battery.
5. Insert the new battery, positive side toward the back cover.
6. Replace the back cover. Ensure it clips in place securely.
7. Check key operation.

**Electronic key synchronisation**

The electronic key synchronises itself automatically during every starting procedure.



## Electronic key system

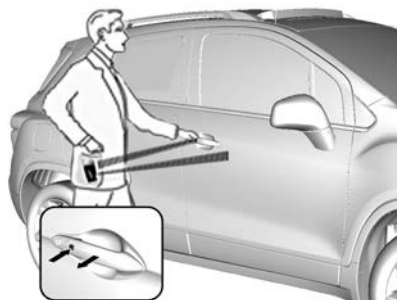

Enables a keyless operation of the following functions:

- Central Locking System ⇨ 21
- Tailgate ⇨ 26
- Starting the Engine ⇨ 145

The electronic key simply needs to be on the driver's person.

Additionally the electronic key includes the functionality of the remote control ⇨ 18.

Handle with care, protect from moisture and high temperatures and avoid unnecessary operation.

### Note:

Do not put the electronic key in the load compartment or in front of the infotainment display.

### Replacing battery in electronic key

Replace the battery as soon as the system no longer operates properly or the range is reduced. The need for battery replacement is indicated by a message in the Driver Information Centre.

*Vehicle messages* ⇨ 78

*Battery replacement* ⇨ 18

### Electronic key synchronisation

The electronic key synchronises itself automatically during every starting procedure.

### Fault

If the central locking cannot be operated or the engine cannot be started, the cause may be one of the following:

- Fault in electronic key.
- Electronic key out of reception range.
- Battery voltage too low.
- Overload of the central locking system by operating at frequent intervals, the power supply is interrupted for a short time.
- Interference from higher-power radio waves from other sources.

To rectify the cause of the fault, change the position of the electronic key.

*Central locking system* ⇨ 21

To start the vehicle with a low transmitter battery.

*Starting the engine* ⇨ 145.



## Memorised settings

Whenever the key is removed from the ignition switch, or for vehicles with electronic key system, after the Engine Start/Stop button is pressed off, the following settings may be automatically memorised by the key:

- lighting
- infotainment system
- central locking system
- comfort settings

This can be set for each key used.

## Central locking system

Doors may be locked and unlocked by pushing buttons on:

- The driver's or front passenger's door.
- The key from inside or outside the vehicle.

### Note

The driver's door must be closed for the driver's door to lock.

*Vehicle personalisation* ⇨ 86

## Central locking button

### Driver's door





### Front passenger's door





## 22 Keys, doors and windows

Locks and unlocks all doors, the tailgate and fuel filler door.

- Press  to lock.
- Press  to unlock.


If the driver's door is open, the driver's door and fuel filler door cannot be locked.

Settings can be changed in the Vehicle settings menu in the infotainment system.

*Vehicle personalisation* ⇨ 86


### Unlocking



- Press .
- All doors unlock.
- The hazard lamps flash twice.
- To unlock the driver's door only or to change the unlock feedback, see Vehicle settings menu in the infotainment system.
- Vehicle personalisation* ⇨ 86

### Locking




- Press button .
- All doors lock.
- The hazard lamps flash once.
- To change the lock feedback, see Vehicle settings menu in the infotainment system.
- Vehicle personalisation* ⇨ 86



## Electronic key system operation

The electronic key must be outside the vehicle, within a range of approx. one metre of the relevant door side.

### Unlocking

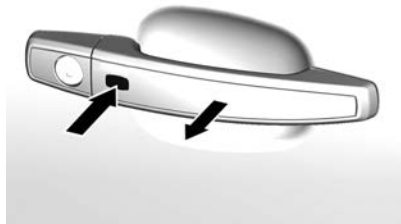


Press the button on the respective door handle and pull the handle. The doors, tailgate and fuel filler door are unlocked.

The unlocking mode can be set in the Settings menu in the infotainment system.

*Vehicle personalisation* ⇨ 86

### Locking

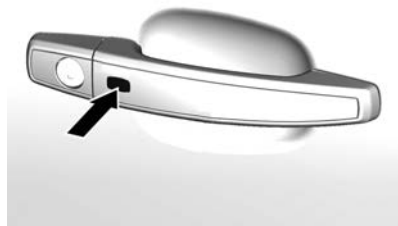

Press the button on the respective door handle. The doors, tailgate and fuel filler door are locked.

The system only locks if:

- It has been more than 5 seconds since unlocking, or
- The unlock button has been pressed twice within 5 seconds, or
- Any door has been opened and then all doors are closed.

If the driver's door is not closed

properly or the electronic key remains in the vehicle, locking will not be permitted and a warning tone sounds three times.

If there have been two or more electronic keys in the vehicle and the ignition was on once, the doors will be locked even if just one electronic key is taken out of the vehicle.


### Unlocking and opening the tailgate


The tailgate and the doors can be unlocked by pushing the touchpad on the tailgate when electronic key is in range.

*Tailgate* ⇨ 26



### Delayed locking

The doors may be locked and the anti-theft alarm system armed, 5 seconds after the last door is closed, by pressing  on the central locking button.

- ON: The doors will not lock until 5 seconds after the last door is closed.
- OFF: The doors will lock immediately when  is pressed.

The settings can be changed.

*Vehicle personalisation* ⇨ 86

### Automatic door locks

#### Automatic locking after driving off

This security feature can be configured to automatically lock all doors, the tailgate and the fuel filler door after driving off and exceeding a certain speed.

When at a standstill after driving, the vehicle will be unlocked automatically as soon as the key is removed from the ignition switch, or with electronic key system, when the ignition is turned off.

#### Automatic relock after unlocking


This feature can be configured to automatically lock all doors, the tailgate and the fuel filler door after unlocking with the remote control or electronic key, provided no door has been opened.

### Passive locking


On vehicles with electronic key system, this feature locks all doors, the tailgate and the fuel filler door automatically after several seconds if an electronic key has been recognised previously inside the vehicle, all doors have then been closed and the key does not remain within the vehicle.

If the electronic key remains in the vehicle or the ignition is still on, passive locking will not be permitted.

If there have been two or more electronic keys in the vehicle and the ignition was on once, the feature locks the vehicle if just one electronic key is taken out of the vehicle.

To temporarily disable passive locking: With a door open, press and hold  switch on the door for several seconds until you hear a chime sound.



Passive door locking will then remain disabled until  switch is pressed on the door or the ignition is turned on.


Activation or deactivation of automatic door lock features can be set in the Settings menu in the infotainment system,

The settings can be saved for the key being used.

*Vehicle personalisation* ⇨ 86

## Doors

### Manual door locks

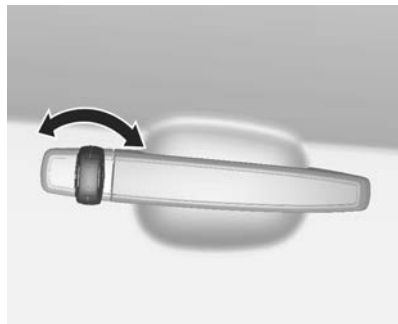

1. Insert the key in the driver's door.
2. Turn the key towards the rear of the vehicle to lock the doors.
3. Turn the key towards the front of the vehicle to unlock the driver's door.

#### Note

Tap the key slot or heat the key if the door does not open in cold weather.

### Child security rear door locks



#### Warning

Use the child security door locks whenever children are occupying the rear seats.

#### Caution

Do not pull the inside door handle while the child security door is locked. Damage may occur.



The child security rear door locks prevent the rear doors from being opened from the inside.

Rotate the switch using a key or suitable screwdriver.

To activate:

- Rotate the switch to the horizontal position.

To open a door when the child security rear door lock is activated:

- Open the door from the outside.

## Tailgate

### ⚠ Warning

Do not drive with the tailgate open or ajar, e.g. when transporting bulky objects. Dangerous exhaust fumes may enter the vehicle.

To avoid injury and/or damage to the vehicle, check each time, before the tailgate is closed, the contact area is unobstructed.

### Caution


Before opening the tailgate, check the area above and behind for obstructions, to avoid damage to the tailgate.

### Note


Adding heavy accessories to the tailgate may affect its ability to remain open.



Unlocking:

1. Press .
2. Push the touchpad on the tailgate.

Locking:

1. Push down so it latches securely.
2. Press .

### Note


The tailgate can be opened when, the engine is running, the shift lever is in P (automatic transmission) or the park brake is on (manual transmission).



## Vehicle security

### Anti-theft alarm system


The system is activated:

- Thirty seconds after locking the vehicle.
- Immediately, by pressing  a second time.

The system is deactivated by:

- Pressing  on the key.

### Status LED

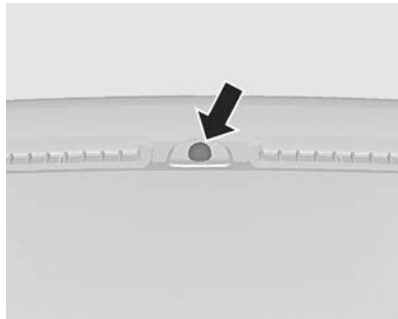

The status LED is located on top of the instrument panel.

During the first 30 seconds of system activation:

- LED illuminates (test, arming delay).
- LED flashes quickly (doors or bonnet are not completely closed or there is a system fault).

When the system is armed:

- LED flashes slowly.

If a fault occurs, contact a Holden Dealer.

### Alarm

The alarm can be silenced by pressing any button of the radio remote control or by switching on the ignition.

## Auto door unlock

In the event of an accident, the doors will automatically unlock if the ignition is on.

### Note

The doors may not unlock if damage occurs to the door lock system or battery.



### Immobiliser

The immobiliser prevents unauthorised engine starting.

- If an invalid key is inserted into the ignition switch/lock, an indicator on the instrument cluster will flash.  
The vehicle will not start.
- The engine is automatically immobilised after the key is turned to LOCK and has been removed from the ignition switch, or for vehicles with an electronic key, the Engine Start/Stop button is pressed off.
- Only valid ignition keys can be used to start the engine.

Have the vehicle checked by a Holden Dealer.

### Exterior mirrors

#### Convex mirror

The convex exterior mirrors provide a wider view of the road and traffic.

#### Note

Objects appear smaller than their actual size.

### Power mirrors



**L:** Left side mirror selected

**R:** Right side mirror selected

**O:** No mirrors selected

To adjust an exterior rear view mirror:

1. Rotate the switch to **L** or **R**.
2. Swivel the switch to adjust the mirror.



## Folding mirrors



When the vehicle is parked, the mirrors may be folded flat against the side of the vehicle.

### **Warning**

Always extend mirrors outwards for driving to increase visibility.

Do not drive while either exterior mirror is folded against the vehicle.

## Heated mirrors



- Press .

The heated rear window also operates.

*Heated rear window* ⇨ 31

## Interior mirrors

### Rear view mirror



To reduce headlamp glare from following vehicles, pull the lever towards the rear of the vehicle.

#### **Note**

The rear view clarity is reduced when the mirror is set to the anti-glare position.

Return the lever back to its original position as soon as the glare has disappeared.



## Windows

### Power windows

#### Warning

Before operating the power windows, check they are free of obstructions and that passengers and pets are not in the proximity of the moving window.



The power windows can be operated when the ignition is turned on.

#### Danger

Do not leave keys or children unattended in the vehicle.

Children may operate the switches and become trapped in the windows.

Serious injury or death may occur from misuse of power windows.

#### Operation

Operate the switch for the respective window by pushing or pulling to close.

#### Driver's door

The driver's door window has an auto up/down function.

- Pushing or pulling the switch gently to the first detent:  
The window moves up or down as long as the switch is operated.

- Pushing or pulling firmly to the second detent then releasing:  
The window moves up or down automatically with the safety function enabled.  
To stop movement, operate the switch once more in the same direction.

#### Except driver's door

The front passenger and rear door windows have an auto down function.

- Pushing the switch gently to the first detent or pulling:  
The window moves up or down as long as the switch is operated.
- Pushing firmly to the second detent then releasing:  
The window moves down automatically. To stop movement, operate the switch once more in the same direction.




### Anti-pinch function

If the driver's door window encounters any resistance during closing, it will stop immediately and partially open again.

### Child safety switch




Press  to activate/deactivate the rear door power window switches.

### Heated rear window



- Press .

The heated rear window:

- Operates when the engine is running.
- Switches off automatically after a few minutes or by pressing  again.

### Caution

Do not use sharp objects or abrasive window cleaners on the rear window.

Do not scratch or damage the wires.



## Sun visors

- The sun visors can be folded down or folded outwards over the side window, to prevent glare.
- Close the mirror cover before driving.

### **Warning**

Do not place the sun visor in such a position that it reduces visibility of the roadway, traffic or other objects.

- If the vehicle has illuminated lamps, they turn on and off when the cover is opened and closed.

## Roof

### Sunroof

The vehicle may have a sunroof.

### **Warning**

Always observe the following precautions:

Do not place fingers or objects near the sunroof when operating.

Do not place heavy objects on or around the sunroof.

Remove debris from the outside of the sunroof.

When leaving the vehicle unattended, close the sunroof fully.

As at all other times, all occupants must wear their seat belts whether the sunroof is open or closed.

Failure to observe these precautions may result in personal injury or damage to your vehicle.


Fitting an aftermarket sunroof may void the New Vehicle Voluntary Warranty on your vehicle and could result in injury to the vehicle occupants in the event of an accident.

The sunroof:


- Will operate when the ignition is turned on.
- Can be raised or can slide back into the roof.

The sunroof switch is located between the sun visors.



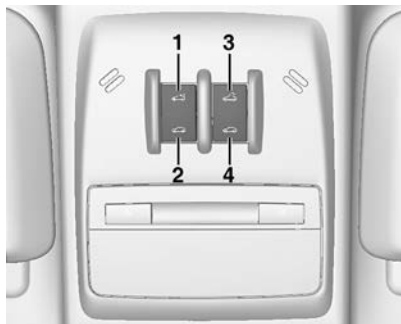


### Open or close

- To open to a specific position, press  (1) lightly and hold.
- Release the switch when the required position has been reached.

To close the sunroof:

- Press  (2) lightly and hold.

### Tilt or close

To tilt the sunroof:


- Press  (3).

To close the sunroof:


- Press  (4).

### Auto open or close

To open the sunroof automatically:

- Press  (1) firmly and release.
- To stop movement, press any of the switches again.

To close the sunroof automatically:

- Press  (2) firmly and release.
- To stop movement, press any of the switches again.

### Safety function

If the sunroof encounters resistance during automatic closing, it stops immediately and opens again.

#### Caution

Obstruction detection only operates when the sunroof is closing. Before opening the sunroof, ensure there are no obstructions, e.g. a roof rack.

### Sunblind

The sunblind can be operated manually.

- Close or open the sunblind by sliding.
- When the sunroof opens, the sunblind opens automatically.



## Storage

### Storage compartments ..... 34

Instrument panel storage ..... 34

Glove box ..... 34

Cup holders ..... 35

Sunglasses storage ..... 35

Under seat storage ..... 36

### Loading information ..... 36

### Roof rack system ..... 37

## Storage compartments


### Instrument panel storage



A storage compartment is located on the driver's side of the instrument panel.

- To open, lift the handle upwards.

## Glove box

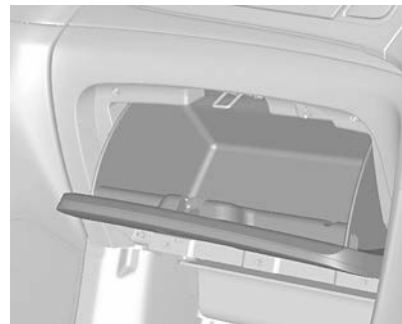

The glove box is located in the instrument panel, in front of the passenger's seat.


- To open, pull the handle towards you. To close, push the lid firmly back into place.

### **Warning**

To reduce the risk of injury, always keep the glove box door closed when driving.



## Cup holders

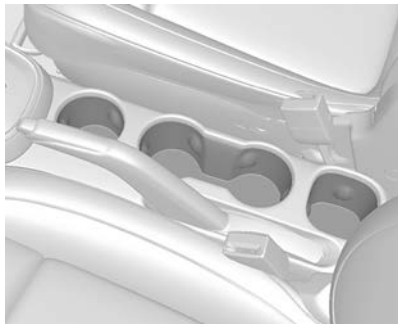

Cup holders are located in the front console and rear armrest.

### Warning

To avoid scalding, never place hot drinks in the cup holders.

Do not place uncovered containers of liquid in the cup holder while the vehicle is in motion.

## Sunglasses storage



The vehicle has a sunglasses holder located in the roof on the driver's side.


- To open, fold downwards.

### **Note**

Do not use for storing heavy objects.



## Under seat storage

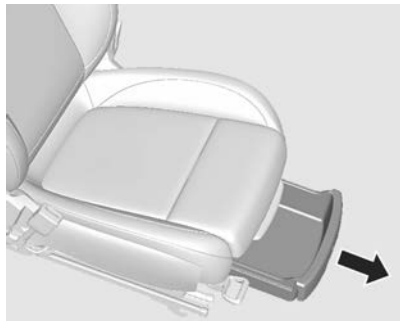

The vehicle may have under seat storage beneath the passenger's seat.

- To open, pull up on the front of the tray and pull towards the front of the vehicle.
- To close, push the tray towards the rear of the vehicle.

## Loading information

### Danger

Do not stack objects higher than the front seats.

Do not allow passengers to sit on the folded seatbacks while the vehicle is in motion. Serious injuries or death can result.

*Rear seats ⇨ 43*

- Place all heavy objects in the load compartment as far forward as possible.
- Secure objects to prevent from sliding.  
Movement of heavy objects in the load compartment may change the handling of the vehicle.
- Ensure the backrests are securely engaged.

- Place heavier objects at the bottom.
- Do not place any objects on the load compartment cover or the instrument panel.
- Do not place unsecured objects in the interior.
- Do not drive with an open tailgate.
- Driving with a roof load increases the sensitivity of the vehicle to cross-winds and has a detrimental effect on vehicle handling due to the vehicle's higher centre of gravity.  
Distribute the load evenly and secure it properly with retaining straps. Adjust the tyre pressure and vehicle speed according to the load conditions. Check and retighten the straps frequently.



## Roof rack system

- Distribute the load evenly and secure tightly with straps.
- When carrying loads on the roof rack (elevated load), avoid hard braking, abrupt swerving or sharp steering.

Roof rack elevated loads alter the handling of a vehicle.

### **Warning**

The total elevated load, including the weight of the cross bars, must not exceed 75 kg. Distribute the load evenly.

### **Note**

The weight of the cross bars and the load must be included when calculating the total vehicle load.



## Seats, restraints

### Head restraints ..... 38

Height adjustment ..... 39

Rear head restraints..... 39

### Front seats ..... 40

Seat position ..... 40

Seat adjustment ..... 40

Armrest..... 43

Heated front seats..... 43

### Rear seats ..... 43

### Seat belts..... 45

Belt force limiters..... 46

Belt tensioners ..... 46

Three point belt ..... 47

Seat belt use during  
pregnancy ..... 48

Seat belt care ..... 49

Replacing seat belts  
after a crash ..... 49

### Airbag system..... 49

Front airbag system ..... 50

Side airbag system..... 51

Curtain airbag system ..... 52

### Child restraints ..... 53

Selecting the right system ..... 54

Where to put the restraint..... 55


Top-tether child restraint  
systems ..... 56

## Head restraints

### ⚠Warning

This safety feature is not intended to rest the head upon. It is solely for the reduction of whiplash neck movement in an accident involving your vehicle.


The centre of the head restraint should be at eye level, never at neck level.

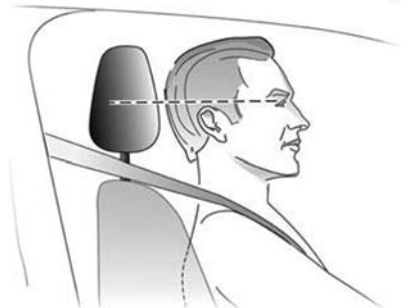




## Height adjustment

### Front head restraints

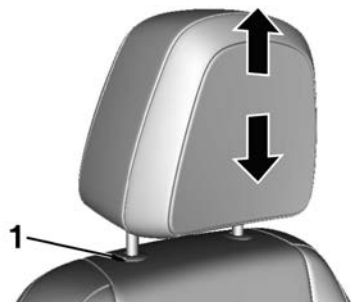

- Pull the head restraint up.
- Press the locking button (1) and push the head restraint down.


### Rear head restraints

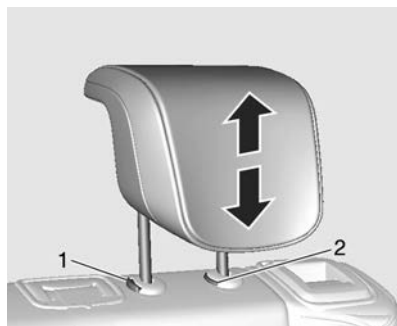

- Pull the head restraint up.
- Press the locking button (1) and push the head restraint down.

To remove:

1. Pull the head restraint up.
2. Press the locking buttons (1) and (2) at the same time.
3. Remove the head restraint.

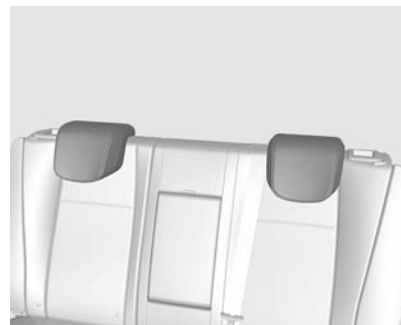

The headrests are in a stowed, non-use position, when at their lowest position.



## Front seats

### Seat position

#### Warning

To avoid reducing the effectiveness of seat belts, seatbacks should only be upright or at most semi-reclined when the vehicle is moving.



- Sit centrally in the seat.
- Use the backrest and cushion for support.

- Adjust the seat so that your legs are slightly angled when against the pedals.
- Adjust the backrest angle to easily reach the steering wheel with arms slightly bent.  
*Steering wheel adjustment* ⇨ 58.
- Maintain contact between shoulders and the backrest when turning the steering wheel.
- Adjust the head restraint.  
*Head restraints* ⇨ 38.
- Slide the passenger's seat as far back as possible.

### Seat adjustment

#### Danger

Do not sit nearer than 25 cm from the steering wheel, to allow safe airbag deployment.

#### Warning


Do not adjust the driver's seat when the vehicle is moving as the seat could move suddenly causing the driver to lose control.



**⚠ Danger**


When folding the front passenger's seatback forward to carry long items, ensure the items are secured a safe distance away from an inflating airbag. In a crash, an inflating airbag can force an object toward a person resulting in severe injury or death.

Secure or remove unsecured items before driving.

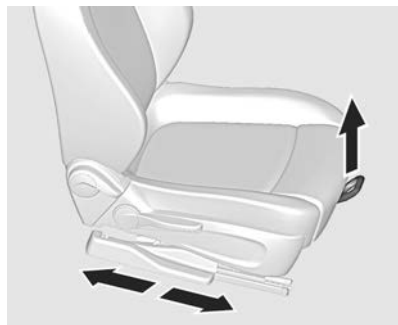

1. Move the seat forwards or backwards by lifting the handle at the front and sliding the seat.
2. Release the handle to engage the latch.

Try to move the seat back and forth to be sure it is locked in place.

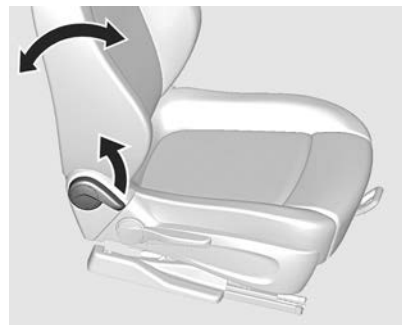


1. Recline the seatback by lifting the lever.
2. Adjust the angle and release the lever.
3. Allow the seat to engage.

**Note**


Do not lean on the seat when adjusting.



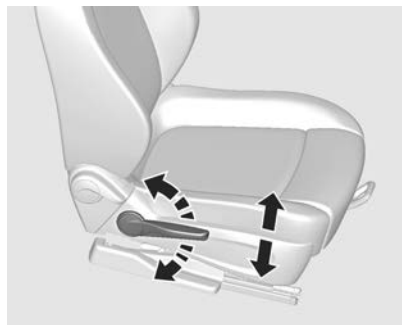

- To lower the seat cushion, push the lever down several times.
- To raise the seat cushion, pull the lever up several times.

### Folding seatback

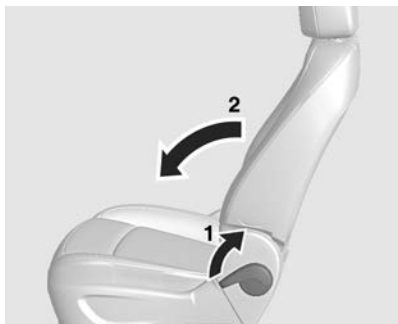

To fold the seatback:

1. Push the head restraint down.
2. Move the seat backwards by lifting the handle at the front and sliding the seat.
3. Lift the lever (1) up fully and fold the seatback (2) forward until it is locked.

To raise the seatback:

1. Lift the seatback and push to the upright position.
2. Push at the top of the seatback to latch into place.
3. Pull the seatback forward again to ensure it is properly latched.

#### **Warning**

If the seatback is not locked, it could move forward in a sudden stop or crash causing personal injury. Always push and pull on the seatback to ensure it is locked.



## Armrest



The vehicle may have an armrest on the driver's seat. It can be raised or lowered.

## Heated front seats



The vehicle may have heated front seats.

To warm the seat:

1. Start the engine.
2. Press or .

The light in the button illuminates.

To turn the heater off:

1. Press or again.

### Note

Prolonged use of the heated seats for people with sensitive skin is not recommended.

## Rear seats

### Folding down rear seatbacks

#### Danger

Ensure the rear seatbacks are latched securely in place.

Do not press the release button on the top of the seatback while the vehicle is moving. This could cause damage or injuries to the occupants.

Do not allow passengers to sit on the folded seatbacks while the vehicle is in motion. Unrestrained luggage or passengers on a folded seatback could be thrown within or ejected from the vehicle in a sudden stop or accident.



**Caution**

Do not trap the seat belt when returning the seatback to the upright position.

Folding a rear seat with the seat belts still fastened may cause damage to the seat or the seat belts.

Always unbuckle the seat belts and return them to their stowed position before folding a rear seat.


To fold the rear seatbacks down:

1. Unbuckle the seat belts.
2. Push the head restraints down by pressing the catch.
3. Slide the front seat forwards.
4. Adjust the front seatback to an upright position.

**Caution**

Folding the rear seat backrest before folding the cushion, may cause damage to the rear seat.

Always fold the cushion before folding the rear seat backrest.

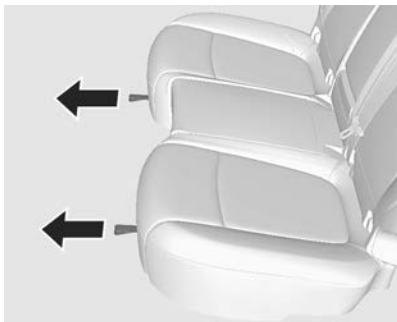

5. Pull the straps under the seat cushion to allow the seat cushion to fall forward.

**Note** Do not place anything on the floor. It may prevent the seat from folding or cause damage to the seat cushion.




6. Pull the release lever on top of the rear seatback and fold it forwards and down.



7. Fold the seatback forward and down.



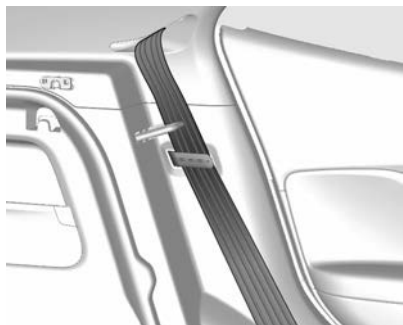

8. Place the seat belts into the belt guides.

To return the seatback to the upright position:

1. Pull the seat belt away from the belt guide.
2. Lift the seatback upwards and push firmly back into place.

**Note**

Ensure the seat belt is clear of the latch.

3. Return the rear seat cushion to its original position. Push the front part of the cushion down firmly until it latches.

**Note**

- Ensure the seat belt buckles are not trapped.
- The centre rear seat belt may lock when returning the seat cushion. If this occurs, pull the strap to release the seat cushion, withdraw the belt slightly and return the seat cushion.

**⚠Warning**

When passengers are in the rear seats ensure the rear seatbacks are all the way back and locked in position, before starting the vehicle.

Do not pull the release levers on top of the seatback while the vehicle is moving. Damage to the vehicle or injuries to occupants may occur.

## Seat belts



**⚠Warning**

Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.

Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection



for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid.

Belts should not be worn with straps twisted.

Each belt assembly must only be used by one occupant. It is dangerous to put a belt around a child being carried on the occupant's lap.

No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.

The belts lock during heavy acceleration or deceleration for the safety of the occupants.

## Belt force limiters

In the front seats, stress on the body is reduced by the gradual release of the belt during a collision.

## Belt tensioners




In the event of a front, side or rear collision of a certain severity, the driver's and/or passengers safety belts are tightened.

### **Warning**

Incorrect handling (e.g. removal or fitting of belts or belt buckles) can trigger the belt tensioners with risk of injury.



- When the belt tensioners have been deployed,  illuminates on the instrument cluster.  
*Seat belt reminders* ⇨ 68
- Triggered belt tensioners must be replaced.
- Belt tensioners are only triggered once.

### **Warning**

Do not attach or install objects that may interfere with the operation of the belt tensioners.

Do not make any modifications to belt tensioner components.

## Three point belt

### Fitting



The belt should not be twisted. It should lie flat and fit firmly across your hips.

1. Withdraw the belt from the reel.
2. Pull the metal tongue across your body into the buckle, until it clicks into place.
3. Tension the lap belt regularly while driving by tugging the shoulder belt.




Do not place objects such as handbags or mobile phones between the belt and your body.

### **Warning**

The belt must not rest against hard or fragile objects in the pockets of your clothing.



### Height adjustment

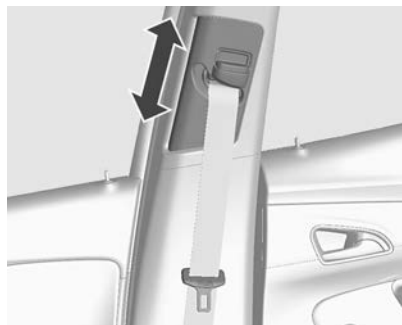

1. Press and hold the button.
2. Move up and down as required.
3. Release the button.
4. Ensure the anchor clicks into position.

#### **⚠ Warning**

Do not adjust the height of the belt while driving.

The belt must lie across the shoulder. It must not lie across the throat or upper arm.

### Removing



1. Press the red button on the buckle.
2. Allow the belt to retract.
3. Check it fully retracts without twisting or turning.

#### **Note**

The three point belt for the rear central seat can only be withdrawn from the retractor if the backrest is in the upright position.

### Seat belt use during pregnancy

#### **⚠ Warning**

The lap belt must be positioned as low as possible across the pelvis to prevent pressure on the abdomen.

Seat belts work for everyone, including pregnant women. Like all occupants, they are more likely to be seriously injured if they do not wear a seat belt.

A pregnant woman should wear a three point belt with the lap portion of the belt worn as low as possible below the rounding of their stomach, throughout the pregnancy.



## Seat belt care

### Warning

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water. The belt should be replaced if webbing becomes frayed, contaminated or damaged.

## Replacing seat belts after a crash

### Warning

It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.

## Airbag system

When triggered, airbags inflate within milliseconds. They also deflate so quickly that it is often unnoticeable during the collision.

### Danger

Do not make any modifications to the airbag system.

The driver should sit back as far as possible while still maintaining control of the vehicle. Sitting too close to the airbag, can cause death or serious injury when it inflates.

Always wear a seat belt.

### Warning

**WARNING – EXTREME HAZARD!**

Do not use a rearward facing child restraint on a seat protected by an airbag in front of it!

The child could be seriously injured if the airbag inflates, as the child's head would be very close to the inflating airbag.

Remember that it is safest for children to be seated in the rear seats.

*Child restraints ⇨ 53*






**⚠ Warning**

Airbags are part of the supplemental restraint system (SRS) as they assist, but do not replace seat belts. Airbags do not deploy in every accident. Various factors dictate whether they deploy including speed, angle of collision and object hit. Airbags are not designed to inflate if the vehicle is hit from the rear or is involved in a rollover. Seat belts must be worn by all passengers whenever the vehicle is moving. Airbags inflate with great force. If you are too close to an inflating airbag it may cause injury. Seat belts help keep you in position for airbag inflation in the event of a collision.

*Airbag and belt tensioners light*

⇒ 68

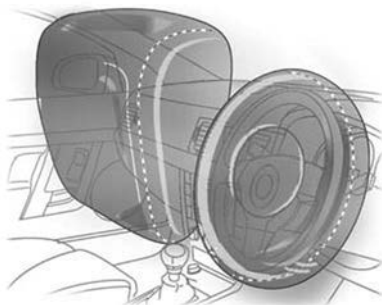**Front airbag system**

The front airbag system consists of one airbag in the steering wheel and one in the instrument panel on the passenger's side. These are identified by the word **AIRBAG**.


**⚠ Warning**

The horn pad must not be covered with adhesive or any other material.

The driver should adjust the seat as far rearward as possible while still maintaining control of the vehicle.

**⚠ Warning**

Do not place any objects on or over the instrument panel or between an airbag and yourself. Do not hang anything from the sun visor or mirror. Passengers must not rest their feet on the instrument panel.

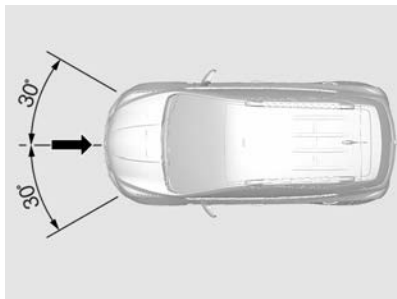

Front airbags will inflate in certain severe frontal or near frontal impacts. Front airbags are not designed to inflate if the vehicle is struck from the side, rear or in rollovers. Always wear a seat belt.




## Side airbag system




Side airbags are stored in the sides of the front seats.

They can be identified by the word **AIRBAG**.

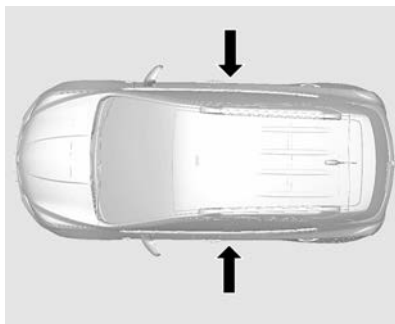

The side airbags deploy in most, but not all severe side impacts.

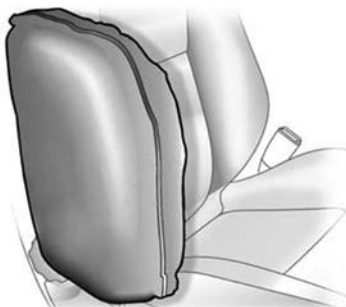

The risk of injury to the upper body and pelvis in the event of a side impact is considerably reduced.

### Warning

Do not fit unauthorised seat covers as they may impair the deployment of the side airbags.

Do not position your body or any object (including pillows) between front seats and doors.

Do not lean on, or sleep against, the door. Always sit centrally in the seat.

Always wear a seat belt.




## Curtain airbag system




Curtain airbags are stored in the roof on each side of the vehicle.

They can be identified by the word **AIRBAG** on the roof pillars.

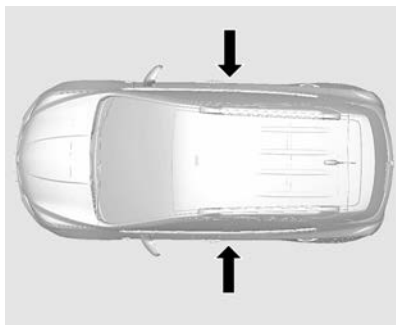

The curtain airbags deploy in most, but not all severe side impacts.

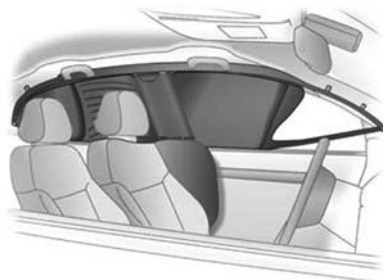

The risk of injury to the head in the event of a side impact is considerably reduced.

### Warning

Do not position your body or any object (including pillows) in the area in which the airbag inflates.

There must be no objects in the area in which the airbag inflates. Refer to the illustration.

Use the hooks above the doors only to hang up light articles of clothing.

Do not place any objects in the pockets of the hanging items.

Do not hold onto the assist grips (above the doors) while seated in the vehicle.

Do not lean on, or sleep against the front or rear doors. Always sit centrally in the seat.

Always wear a seat belt.



## Replacing airbag system parts after a crash

### Note

After an accident where airbags have deployed, the systems, associated parts and hardware must be checked and replaced as required.

Seats, associated parts and hardware must also be checked and replaced as required.

The airbag system should also be inspected after an accident if:

- The instrument panel area or steering wheel is scratched, cracked or damaged.
- The front seats and upholstery are damaged.
- The headliner or trim panels are damaged.

It is recommended that this work be carried out by a Holden Dealer or approved repairer.

## Child restraints

### ⚠ Warning

**WARNING – EXTREME HAZARD!**  
Do not use a rearward facing child restraint on a seat protected by an airbag in front of it!

The child could be seriously injured if the airbag inflates, as the child's head would be very close to the inflating airbag.

Remember that it is safest for children to be seated in the rear seats.

Never carry a child while travelling in the vehicle.



### ⚠ Warning

This manual provides you with general information concerning child restraints only.

The driver is required by law to ensure that passengers and pets are suitably restrained. In most States and Territories of Australia and New Zealand, specific laws may exist which require children to be seated in approved child restraints.

Holden strongly recommends that you refer to your specific State or Territory regulations to determine which child restraint is suitable for your child.



**⚠ Warning**

Always ensure the seat belt fits firmly around the child restraint.

If a child cannot see out of the window, do not raise him/her by means of an ordinary cushion. It will not stay in place in a collision and the child can slip out of the straps and become entangled.

**Selecting the right system****Infants**

Rearward facing infant capsules are designed so that in the event of a collision, impact forces will be evenly spread over the baby's back, with minimal jarring to the vulnerable head and neck area.

**Young children**

Forward facing child seats are for use when the child is able to sit and easily hold their head upright.

**Booster seats**

Booster seats are for when children outgrow a typical forward facing child seat, but are still too small for three point seat belts.

**Older children**

A child should use a normal three point seat belt only when:

- They can sit against the back of the rear seat with knees bent comfortably at the edge of the seat.
- The lap belt rests low and snug across the hips, not across the stomach.
- The sash belt is centred on the shoulder and chest.
- They are able to stay seated like this for the entire trip.



## Where to put the restraint

### **Warning**

Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses, or for attaching other items or equipment to the vehicle.

Only child restraints that have clips to attach to the vehicle's anchorage fittings are to be used. Other types of child restraints may not attach securely to this type of anchor.

Use only Standards Australia and New Zealand approved child restraints and harnesses. Only purchase a child restraint which carries the appropriate Standards Australia sticker of approval.

Where legally allowable, you may install a forward-facing child restraint in the front seat, but always move the passenger's seat as far back as it will go. The forward facing child restraint must still be attached to the passenger side child restraint anchorage point, located behind the rear seat.

Remember, it is safest for children to be seated in the rear seat.

### **Note**

If unsure about installing a child restraint, contact an approved restraint fitting station or a Holden Dealer.

## ISOFIX child restraint systems



Fasten vehicle-approved ISOFIX child restraint systems to the ISOFIX mounting brackets.

### **Note**

Ensure the seat belt buckles are placed out of the way of the child seat.


ISOFIX mounting brackets are indicated by a label on the seatback, as shown. In addition to the ISOFIX mounting, fasten the top-tether straps to the top-tether anchorage points.

*Top-tether child restraint systems*

⇒ 56



## Top-tether child restraint systems

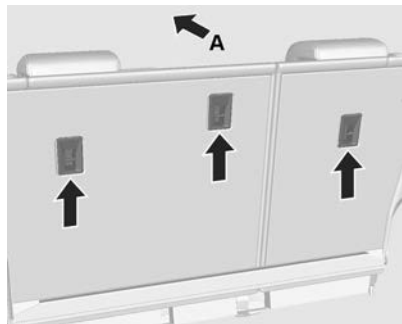

A. Front of vehicle

The child restraint tether anchors are located at the rear of the load compartment, in line with the three rear seating positions.

### Note

Use the child restraint anchors for their designed purpose only.

## Child restraint installation

The vehicle has been designed to accommodate child restraints on the rear seat.

When using a child restraint, read the installation instructions supplied with the child restraint and follow the directions for fitment carefully.

The child restraint system should be secured in conjunction with the vehicle's seat belt.

Secure the child in the restraint in accordance with the manufacturer's instructions.

If unsure about installing a child restraint anchor fitting, contact an approved restraint fitting station or a Holden Dealer.



# Instruments and controls

## Controls..... 58

Steering wheel adjustment .....	58
Steering wheel remote controls..	58
Horn .....	58
Windscreen wiper/washer .....	59
Rear window wiper/washer .....	61
Clock .....	62
Power outlets .....	62

## Warning lights, gauges and indicators..... 64

Overview .....	64
Speedometer.....	65
Odometer .....	65
Tachometer .....	66
Fuel gauge .....	66
Service display .....	67
Transmission display.....	67
Turn signal.....	67

Seat belt reminders .....	68
Airbag and belt tensioners light..	68
Charging system light.....	68
Malfunction indicator light.....	68
Brake system warning light .....	69
Antilock Brake System (ABS) warning light .....	69
Up-shift light .....	69
Descent Control System (DCS) light.....	69
Power steering warning light .....	69
Operate pedal light.....	70
Park assist warning light .....	70
Electronic Stability Control (ESC) light.....	70
Electronic Stability Control (ESC) off light.....	70
Traction Control System (TCS) off light .....	70
Bonnet ajar light .....	70
Engine temperature warning light.....	71
Engine oil pressure light.....	71

Low fuel warning light.....	71
Immobiliser light .....	71
Reduced engine power light.....	72
High beam light .....	72
Front fog lamp light .....	72
Tail lamp light .....	72
Cruise control light .....	72
Door ajar light .....	72
Compass .....	73

## Information displays ..... 73

Driver Information Centre (DIC).....	73
Vehicle messages .....	78
Warning chimes.....	84
Trip computer .....	84

## Vehicle personalisation..... 86

Settings .....	86
----------------	----




## Controls

### Steering wheel adjustment

#### Warning

Do not attempt to adjust the steering wheel while driving.

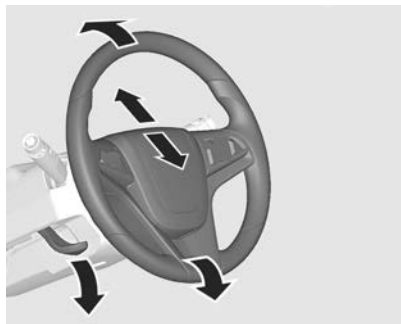

1. To unlock, move the lever down.
2. Adjust the steering wheel.
3. To lock, move the lever up.
4. Ensure the steering wheel is locked in position before driving.

### Steering wheel remote controls



The infotainment system and the cruise control may be operated by the controls on the steering wheel.

*Infotainment system* ⇨ 96

*Cruise control* ⇨ 159

### Horn




Press .



## Windscreen wiper/washer

### Windscreen wiper

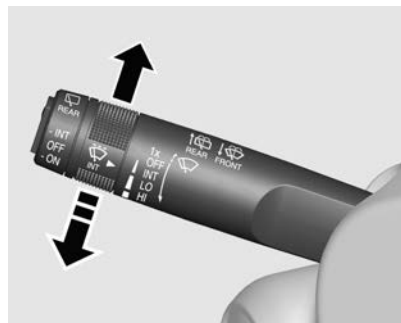

To operate the windscreen wipers, turn the ignition on and move the windscreen wiper/washer lever downwards.

#### Caution

Do not operate the wipers on dry glass or when covered with snow or ice, as this will damage the rubber and scratch the glass.

**1x:** Misting function

**OFF:** Off

**INT:** Intermittent operation

**LO:** Continuous wipe, slow speed


**HI:** Continuous wipe, fast speed

### Misting function

To operate the windscreen wipers once during light rain or mist:

- Lightly lift the windscreen wiper/washer lever up and release.
- The lever returns to its usual position when released.
- The wipers cycle once.

### Adjustable wiper interval

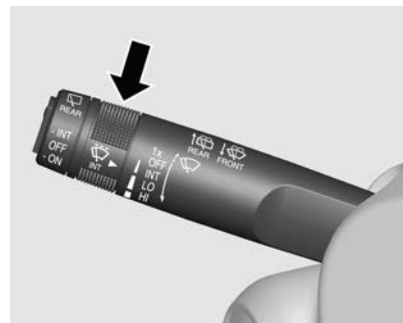


During intermittent operation, adjust the frequency of the wiper intervals:

- For frequent intervals, rotate the wheel downwards.
- For longer intervals, rotate the wheel upwards.



### Automatic wiper with rain sensor

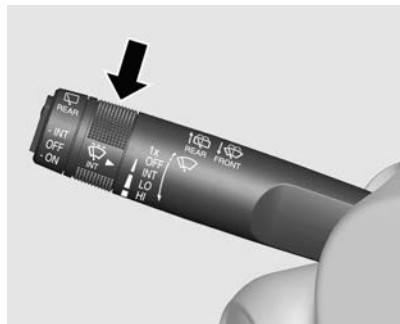

The vehicle may have rain sensing windscreen wipers.

A sensor near the top centre of the windscreen detects the amount of water on the windscreen and controls the frequency of the windscreen wipers. Keep this area clear of debris for best system performance.

### Caution

Switch off the rain sensor by setting the lever to the OFF position before entering a car wash.

Replace the wiper blades as soon as they do not completely remove water from the windscreen. If the blades are not replaced, the wipers may continue to wipe even though most of the screen is dry.

To prevent damage to the wiper blades, make sure the windscreen is fully defrosted before switching on the rain sensor.


**INT:** The wipers cycle when water is detected on the windscreen.

The wiper speed and frequency are adjusted automatically.

To manually adjust the sensitivity of the rain sensing:

- Rotate the wheel downwards for low sensitivity.
- Rotate the wheel upwards for high sensitivity.

### Windscreen washer

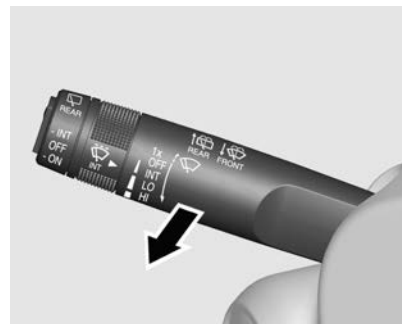

Pull the lever rearwards to wash the windscreen.

Washer fluid is sprayed onto the windscreen and the wipers cycle once.




**Caution**

Do not operate the windscreen washer for more than a few seconds or when the washer fluid reservoir is empty.

**⚠ Warning**

Do not spray washer fluid on the windscreen in freezing weather.

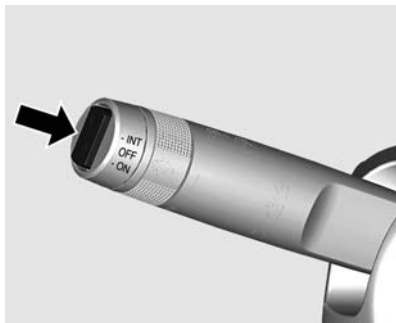**Rear window wiper/washer****Wiper**

To operate the rear window wiper, push the switch at the end of the lever.

**INT:** Intermittent wipes, push in at the top of the button.

**OFF:** To turn the wipers off, place the switch in the OFF position.

**ON:** Continuous wipes, push in at the bottom of the button.


**Caution**

Do not operate the wipers on dry glass or when covered with snow or ice, as this will damage the rubber and scratch the glass.

Do not operate the windscreen washer for more than a few seconds, or when the washer fluid reservoir is empty.



## Washer

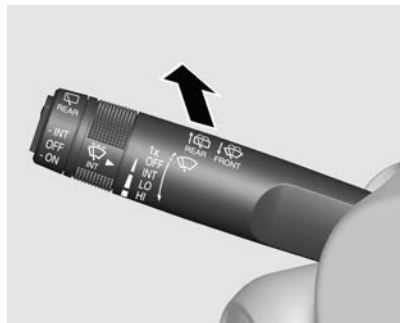

Push the lever forwards.

Washer fluid is sprayed onto the rear window and the wiper swipes for a few strokes.

## Clock



Time and date are shown on the infotainment display.

Adjust the settings for the time and date in the Settings menu.

*Settings* ⇨ 132

## Power outlets

### ⚠ Warning

It is dangerous for the driver to attach or remove accessories from the power sockets while driving. It may distract the driver's attention, putting the occupants of the vehicle and other road users at risk.

### 12V power outlet




A 12V power outlet is located in the centre console.



The 12V power outlet operates when the ignition is in Accessory or ON positions. When the ignition is turned off, the 12V power outlet is deactivated when any door is opened or after 10 minutes.

- The 12V power outlet does not operate if the battery voltage is low.
- Do not exceed the maximum power consumption of 120 watts.
- Do not connect electrical charging devices or batteries.

### 230V power outlet

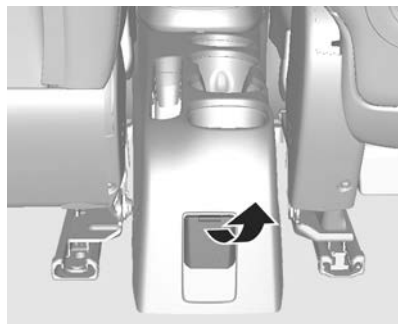

A 230V power outlet is located at the rear of the centre console.

The 230V power outlet operates when the ignition is turned on and is deactivated when the ignition is turned off.

- The 230V power outlet does not operate if the battery voltage is low.
- Do not exceed the maximum power consumption of 150 watts.
- Do not connect electrical charging devices or batteries.

### Warning

Sparks may occur when connecting or disconnecting devices.


Do not connect devices in the vicinity of flammable or explosive substances.

Disconnect any connected devices before starting the engine, to prevent damage.

The 230V inverter will not operate most appliances designed to produce heat, such as hair dryers, irons, toasters, heaters and coffee machines as these items drain high amounts of current in excess of 150 watts.





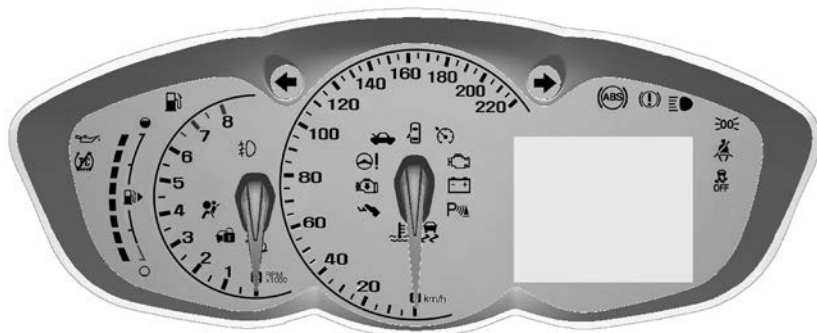









## Warning lights, gauges and indicators




### Overview

 - ↔ Turn signal ↔ 92
- ↔ Service vehicle soon light  
(Illuminates in the DIC) ↔ 65
- ↔ Seat belt reminders ↔ 68
- ↔ Airbag and belt tensioners light  
↔ 68
- ↔ Charging system light ↔ 68
- ↔ Malfunction indicator lamp  
↔ 68
- (!) Brake warning light ↔ 69
- (ABS) Antilock Brake System (ABS)  
warning light ↔ 69
- ▲ Up-shift light ↔ 69
- ⊗! Power steering warning light  
↔ 69
- P▲ Park assist warning light ↔ 70
- ↔ Electronic Stability Control (ESC)  
light ↔ 70
- ↔ Electronic Stability Control (ESC)  
Off light ↔ 70
- ↔ Traction Control System (TCS)  
Off light ↔ 70



-  Operate pedal light ⇨ 70
-  Bonnet ajar light ⇨ 70
-  Engine temperature warning light ⇨ 71
-  Engine oil pressure light ⇨ 71
-  Low fuel warning light ⇨ 71
-  Immobiliser light ⇨ 71
-  Reduced engine power light ⇨ 72
-  High beam light ⇨ 72
-  Front fog lamp light ⇨ 72
-  Tail lamp light ⇨ 72
-  Cruise control light ⇨ 72
-  Door ajar light ⇨ 72

## Speedometer

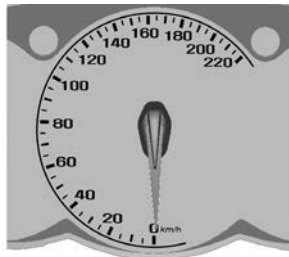


Shows vehicle speed in kilometres per hour (km/h).

## Odometer

### Type 1



### Type 2

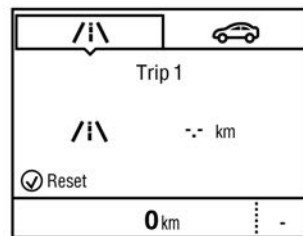




Shows distance travelled in kilometres.

- The tripmeter measures the distance travelled since the tripmeter was reset.
- Press the reset button briefly to change between odometer and tripmeter.

## Tachometer

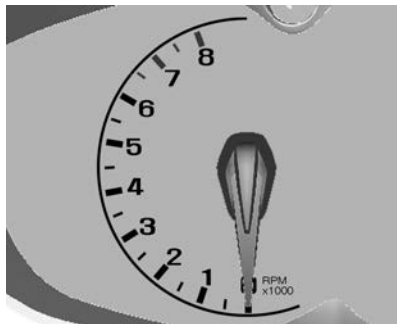

Shows engine speed in thousands of revolutions per minute (RPM).

Drive at a low engine speed/range for each gear, as much as possible.

### Warning

Do not allow the needle to remain in the warning/red zone.

## Fuel gauge



Shows the level of fuel in the tank.

Movement of the fuel within the fuel tank may cause the fuel gauge indicator to move when braking, accelerating or turning.

### Danger

Before refuelling, stop the vehicle and switch the engine off.



## Service display

### Control indicators

The vehicle may have the following indicators.

Indicators illuminate for a short time when the ignition is turned on to show the light is working.

**Red:** danger, important reminder

**Yellow:** warning, information, fault

**Green, blue, white:** confirmation of activation

### Note




Depending on vehicle variant, the instrument cluster appearance may differ.

## Transmission display



Indicates the selected gear or transmission mode.

## Turn signal

- Push the lever in the same direction the steering wheel is turned.
-  flashes.  
 also flashes when the hazard warning is activated.
- The turn signal will self cancel from larger turns.
- If  flashes quickly a bulb may need replacing.  
*Bulb replacement* ⇨ 188
- If the turn signals do not operate check the fuses.  
*Fuses* ⇨ 193

*Turn and lane change signals* ⇨ 92




## Seat belt reminders

Illuminates in the instrument cluster:



: Driver's seat belt reminder

Illuminates in the centre panel:







: Front passenger's seat belt reminder (if occupied)

When the ignition is turned to the ON position:

-  or  illuminates until the seat belt is fastened.


When the engine is running:


-  or  flashes for 100 seconds then illuminates until the seat belt is fastened.

If the vehicle reaches a specific distance or speed and the seat belt is unfastened,  or  will flash and the chime will sound for 100 seconds, or until the seat belt is fastened.

*Seat belts* ⇨ 45

## Airbag and belt tensioners light

The  warning light illuminates for a short time when the ignition is turned on to show the light is working.

If the  warning light does not illuminate, does not extinguish after few seconds or illuminates while driving, there is a problem with the airbag or belt tensioner system.


### Warning


Have any fault in the airbag or belt tensioner system repaired immediately by a Holden Dealer.

*Airbag system* ⇨ 49

*Belt tensioners* ⇨ 46


## Charging system light

 
The  warning light illuminates for a short time when the ignition is turned on to show the light is working.

If the  warning light illuminates while the engine is running, there is a problem with the charging system:

1. Stop and switch off the engine.
2. Contact a Holden Dealer.


## Malfunction indicator light


The  warning light illuminates for a short time when the ignition is turned on to show the light is working.

If the  warning light illuminates while driving, there is a problem with the emission monitoring system. Contact a Holden Dealer.



## Brake system warning light


The  warning light illuminates for a short time when the ignition is turned on to show the light is working.

The  warning light illuminates when the park brake is applied.

*Park brake* ⇨ 155

### Warning


Do not drive while the brake system warning light is on.


If the  warning light does not extinguish or illuminates while driving and the park brake is released, there is a problem with the brakes:

- Stop the vehicle as soon as it is safe to do so.
- Check the brake fluid level.  
*Brake/clutch fluid* ⇨ 186
- Do not proceed until satisfied that braking is possible or the cause of the problem has been rectified.

- If necessary contact a Holden Dealer.

## Antilock Brake System (ABS) warning light

The  warning light illuminates for a short time when the ignition is turned on to show the light is working.

If the  warning light illuminates, there is a problem in the ABS.


### Note

The vehicle's brake system remains operational but without ABS assistance.

*Antilock Brake System (ABS)* ⇨ 155


Contact a Holden Dealer.

## Up-shift light

 illuminates to indicate when to shift to the next higher gear for best fuel economy.

*Manual transmission* ⇨ 153

## Descent Control System (DCS) light


The  indicator light illuminates white when the system is on and green when DCS is activated.


*Descent Control System (DCS)*

⇨ 158

## Power steering warning light

The vehicle has electric power steering.

The  warning light illuminates for a short time when the ignition is turned on to show the light is working.

If the  warning light does not extinguish after a few seconds, or if it illuminates while driving, there is a fault in the power steering.

Contact a Holden Dealer.





## Operate pedal light

 illuminates yellow.

Operate the clutch pedal (manual) or brake pedal (auto) to start the engine.

## Park assist warning light

 illuminates for a short time when the ignition is turned on to show the light is working.


If the light does not extinguish or if  illuminates when reverse gear is selected:

- The sensors may be dirty.
- The sensors may be covered by ice or snow.
- There may be ultrasonic wave interference.

If the light does not extinguish, contact a Holden Dealer.

*Park Assist (PA)* ⇨ 160


## Electronic Stability Control (ESC) light


The  indicator light illuminates for a short time when the ignition is turned on to show the light is working.

If the light flashes while driving, the ESC is actively helping the vehicle with road grip and stability.

If the light illuminates or does not extinguish while driving, contact a Holden Dealer immediately.

## Electronic Stability Control (ESC) off light


The  indicator light illuminates for a short time when the ignition is turned on to show the light is working.


 illuminates when the ESC is deactivated.

*Electronic Stability Control (ESC)*


⇨ 157


## Traction Control System (TCS) off light

The  indicator light illuminates for a short time when the ignition is turned on to show the light is working.

 illuminates when the TC is deactivated.


## Bonnet ajar light

The  indicator light illuminates for a short time when the ignition is turned on to show the light is working.

 illuminates when the bonnet is not completely closed.



## Engine temperature warning light

The  warning light illuminates for a short time when the ignition is turned on to show the light is working.


If the light illuminates while driving, the engine coolant temperature is excessively hot:


- Stop the vehicle as soon as it is safe to do so.
- Let the engine idle for a few minutes.
- If the light remains on, contact a Holden Dealer.

### Warning

Do not continue driving with the temperature gauge needle in the red area. The engine is too hot. Continued operation of an overheated engine will result in severe engine damage.

## Engine oil pressure light

The  warning light illuminates for a short time when the ignition is turned on to show the light is working.


If the  warning light illuminates while the engine is running, the engine oil pressure or level is low:

- Stop the vehicle as soon as it is safe to do so.
- Turn the ignition off.
- Check the engine oil level.  
*Engine oil* ⇨ 182
- If necessary, contact a Holden Dealer.

### Caution

Engine damage may result if you keep driving. Do not run the engine. If the oil level is normal, have the system checked by the nearest Holden Dealer.

## Low fuel warning light


The  indicator light illuminates and a chime sounds when the fuel level is low.

### Caution

To avoid damage to the catalytic converter, fill the fuel tank above the low fuel level.

*Catalytic converter* ⇨ 148


## Immobiliser light

The  indicator light illuminates when there is a fault in the immobiliser system.

The engine cannot be started.  
Contact a Holden Dealer.




## Reduced engine power light

If  illuminates while driving, the engine's power is reduced.

1. Stop the vehicle as soon as it is safe to do so.
2. Switch the ignition off then restart after 10 seconds.  
The vehicle may be driven at a reduced speed.
3. Contact a Holden Dealer immediately.


## High beam light

The  indicator light illuminates when the headlamp high beam is on.

*Headlamp high/low beam* ⇨ 91

## Front fog lamp light

The vehicle may have front fog lamps.

 illuminates when the front fog lamps are on.


*Front fog lamps* ⇨ 93

## Tail lamp light

The  indicator light illuminates when the tail lamps are on.


*Exterior lamp control* ⇨ 90

## Cruise control light

The  indicator light illuminates white when the system is on and green when cruise control is activated.


*Cruise control* ⇨ 159

## Door ajar light

The  warning light illuminates when any of the doors or the tailgate are not completely closed.



## Compass

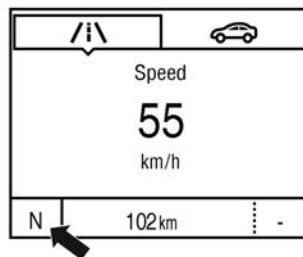

The vehicle may be fitted with a compass which displays the vehicle's driving direction.


The compass may need to be calibrated or set to the correct zone.

*Driver Information Centre (DIC)*

⇒ 73

## Information displays

### Driver Information Centre (DIC)

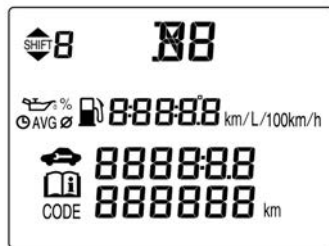

The Driver Information Centre (DIC) is located in the instrument cluster.

The DIC may display functions such as the trip computer, information, warning messages and settings, etc.

### Vehicle Information menu



To select the vehicle information menu, press **MENU**.


The following options may be available for selection:

Type 1 display:

- Remaining oil life.

Type 2 display:

- Remaining oil life.
- Compass settings.

Rotate the adjuster wheel  to select.




## Remaining oil life

### Type 1



### Type 2

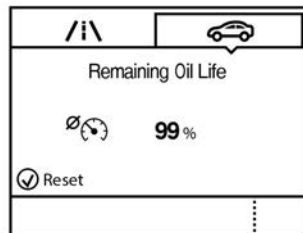

Displays an estimate of the oil's remaining useful life. This may only be displayed while the vehicle is stationary.

If, for example, 98% is displayed, it means 98% of the current oil life remains.

When the remaining oil life is low, the vehicle message % CHANGE will be displayed.

The engine oil should be changed as soon as possible.

After an engine oil change, the engine oil life system will be reset by a Holden Dealer.

### How to reset the engine oil life system

Reset the system whenever the engine oil is changed so the system can calculate the next engine oil change.

1. Turn the ignition On with the engine not running.

2. Press the MENU button on the turn signal lever, to select the Remaining oil life display in the Driver Information Centre (DIC).
3. Press the SET/CLR button to reset the oil life to 100%.
4. Turn the ignition Off.


Take care not to reset the display accidentally at any time other than after the oil is changed.


If the vehicle message comes back on when the vehicle is started, the engine oil life system has not reset. Repeat the procedure.




## Compass settings

The compass zone can be reset and the compass can be recalibrated if needed.

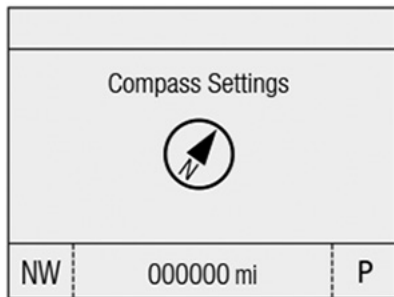



1. To select the Compass Settings screen, press **MENU** on the turn signal lever.  
If required, rotate the adjuster wheel .

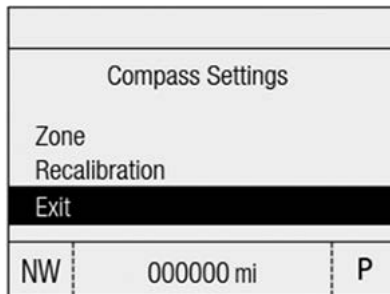

2. Press SET/CLR to display the Compass Settings sub-menu.


## Zone


There are 15 zone options.

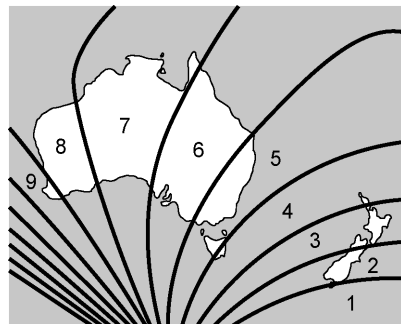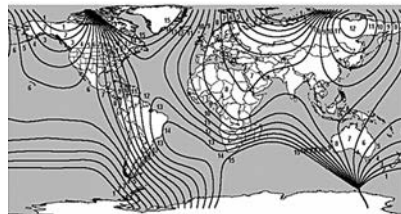



Select a zone (area) based on geographic zones (area 1-15).



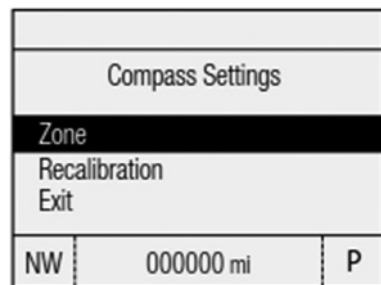


1. Rotate the adjuster wheel  to highlight Zone.
2. Press SET/CLR.

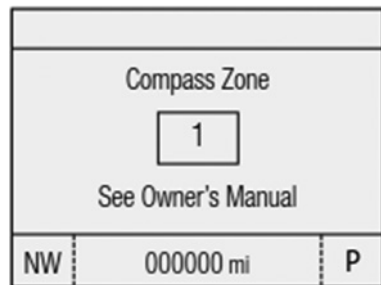

3. Rotate the adjuster wheel  to change the zone number.

4. Press SET/CLR.

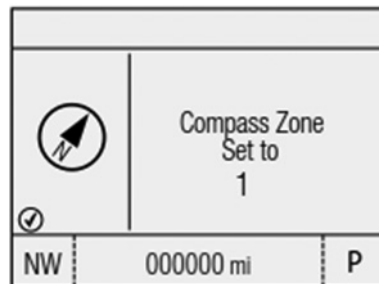


5. After a few seconds a confirmation screen is displayed.


## Recalibration

### Warning


Recalibrating the compass requires the vehicle to be driven in circles.


Only perform this procedure in an area clear of traffic, pedestrians and obstacles and drive slowly while maintaining a view of the surrounding area.

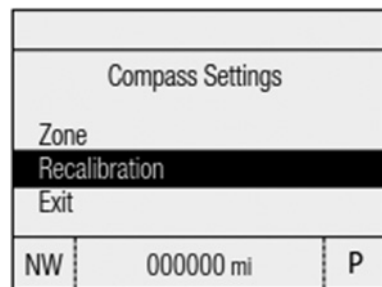


1. Rotate the adjuster wheel  to highlight Recalibration.
2. Press SET/CLR.




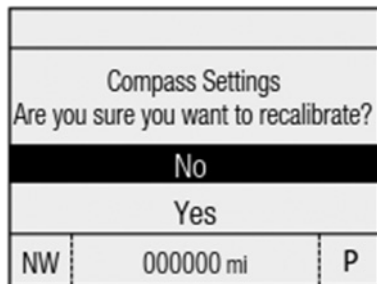


3. A confirmation screen is displayed.
4. Rotate the adjuster wheel  to highlight the desired option.
5. Press SET/CLR.  
Selecting No will return to the Compass Settings menu.

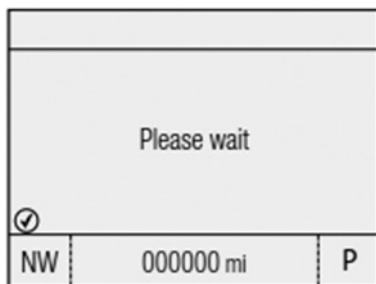

6. Selecting Yes will start the recalibration. Please wait is displayed while the system is calibrating. This may take approximately 10 seconds.

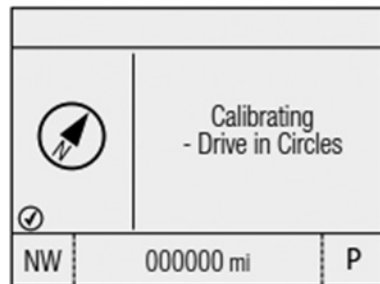


7. In an area clear of traffic, pedestrians or obstacles, slowly drive the vehicle in circles.

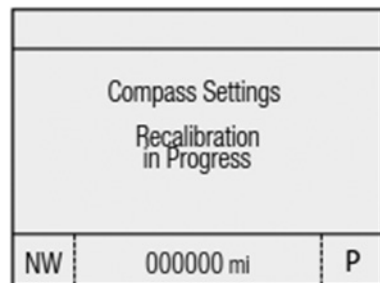

8. The system will continue with the recalibration process.



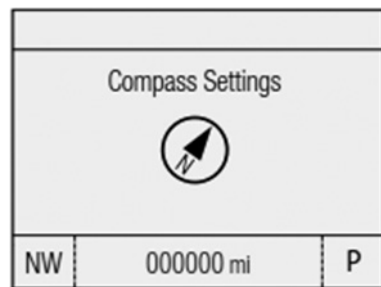

9. Once recalibration is complete the Compass Settings screen will be displayed.

## Vehicle messages

Messages are displayed on the Driver Information Centre (DIC) in the instrument cluster or audible as a warning chime.

Not all messages are displayed on all vehicles.

Messages displayed on the DIC indicate the status of the vehicle or some action that may be needed to correct a condition.

The messages that do not require immediate action can be acknowledged and cleared by pressing SET/CLR.

The messages that require immediate action cannot be cleared until that action is performed. All messages should be taken seriously and clearing the messages does not correct the problem.

## Type 1

On the Type 1 display, most vehicle messages appear as code numbers. Some of these codes may appear along with the service vehicle soon light and the owner's manual symbol in the DIC display.

### No. Vehicle message


- |    |   |
|----|---|
| 2  | No remote detected, press clutch to restart |
| 4  | A/C off due to high engine temp             |
| 5  | Steering column is locked                   |
| 7  | Turn steering wheel, turn key off, then on  |
| 9  | Turn steering wheel, start vehicle again    |
| 10 | Brakes overheated                           |
| 15 | Check high mounted brake lamp               |
| 16 | Check brake lamps                           |
| 17 | Headlamp levelling malfunction              |
| 18 | Left low beam failure                       |
| 20 | Right low beam failure                      |



- 21 Check left position lamp
- 22 Check right position lamp
- 23 Reversing light failure
- 24 License plate light failure
- 25 Left front turn indicator failure
- 26 Left rear turn indicator failure
- 27 Right front turn indicator failure
- 28 Right rear turn indicator failure
- 35 Replace battery In remote key
- 52 Change timing belt
- 53 Tighten fuel cap
- 59 Open, then close driver's window
- 65 Theft attempted
- 66 Service theft alarm
- 67 Service steering column lock
- 68 Service power steering, drive with care
- 79 Engine oil low – add oil
- 81 Service transmission
- 84 Engine power is reduced
- 88 Use Transmitter pocket to start

- 89 Service vehicle soon
- 91 No remote detected
- 92 No remote detected, press brake to restart
- 93 Press button again to turn engine off
- 94 Shift to park
- 95 Service airbag
- 174 Low battery
- 258 Park assist Off

### Engine oil message

-  % Change

This message will be displayed when the engine oil requires changing.

*Remaining oil life* ⇨ 74

### Type 2

Multiple messages may display one after the other.

The following are some of the vehicle messages that may be displayed.

### Battery voltage and charging messages

- Battery Saver Active

Displays when the vehicle has detected the battery voltage is dropping below a certain point.

The battery saver system starts reducing features of the vehicle that may be noticed. At the point that features are disabled, this message displays.

Turn off unnecessary accessories to allow the battery to recharge.

- Low Battery

Displays when the battery voltage is low.



- Service Battery Charging System

Displays when there is a fault in the battery charging system.

Take the vehicle to a Holden Dealer for service.

### **Brake system messages**

- Brake Fluid Low

Displays when the brake fluid level is low.

*Brake/clutch fluid* ⇨ 186

- Release Parking Brake

Displays as a reminder the parking brake is on. Release it before you attempt to drive.

- Service Parking Brake

Displays when there is a problem with the parking brake.

Take the vehicle to a Holden Dealer for service.

### **Compass messages**

Dashes may be displayed if the vehicle temporarily loses communication with the Global Positioning System (GPS).

### **Cruise control messages**

- Cruise Set To XXX

Displays when the cruise control is set and shows the set speed.

*Cruise control* ⇨ 159

### **Door ajar messages**

- Driver Door Open

Displays when the driver's door is open.

Close the door completely.

- Hood Open

Displays when the bonnet is open.

Close the bonnet completely.

- Left Rear Door Open

Displays when the left-hand rear door is open.

Close the door completely.

- Passenger Door Open

Displays when the front passenger's door is open.

Close the door completely.

- Right Rear Door Open

Displays when the right-hand rear door is open.

Close the door completely.

- Trunk Open

Displays when the tailgate is open.

Close the tailgate completely.

### **Engine cooling system messages**

- A/C Off Due To High Engine Temp

Displays when the engine coolant becomes hotter than the normal operating temperature.

To avoid added strain on a hot engine, the air conditioning compressor automatically turns off. When the coolant temperature returns to normal, the air conditioning compressor turns back on.



You can continue to drive the vehicle. If this message continues to appear, have the system repaired by a Holden Dealer as soon as possible to avoid damage to the engine.

- Engine Overheated – Idle Engine

Displays when the engine coolant temperature is too hot. Stop and allow the vehicle to idle until it cools down.

- Engine Overheated – Stop Engine

Displays and a continuous chime sounds if the engine cooling system reaches unsafe temperatures for operation.

Stop and turn off the vehicle as soon as it is safe to do so to avoid severe damage.

This message clears when the engine has cooled to a safe operating temperature.

### Engine oil messages

- Change Engine Oil Soon

Displays when the engine oil needs to be changed.

*Remaining oil life* ⇨ 74

- Engine Oil Hot, Idle Engine

Displays when the engine oil temperature is too hot. Stop and allow the vehicle to idle until it cools down.

- Oil Pressure Low – Stop Engine

Displays if low oil pressure levels occur.

Stop the vehicle as soon as safely possible and do not operate it until the cause of the low oil pressure has been corrected. Check the oil as soon as possible and have the vehicle serviced by a Holden Dealer.

### Engine power messages

- Engine Power is Reduced

Displays when the vehicle's engine power is reduced.

Reduced engine power can affect the vehicle's ability to accelerate.

If this message is on, but there is no reduction in performance, proceed to your destination. The performance may be reduced the next time the vehicle is driven.

The vehicle may be driven at a reduced speed while this message is on, but maximum acceleration and speed may be reduced.

Anytime this message stays on, or displays repeatedly, the vehicle should be taken to a Holden Dealer for service as soon as possible.



**Fuel system messages**

- Fuel Level Low

Displays when the vehicle is low on fuel.

Refuel as soon as possible.

- Tighten Gas Cap

Displays when the fuel cap is not on tight.

Tighten the fuel cap.

**Key and lock messages**

- No Remote Detected

Displays when the transmitter battery is weak on vehicles with electronic key system.

- Replace Battery In Remote Key

Displays when the battery in the radio remote control needs to be replaced.

- Use Transmitter Pocket To Start Vehicles with electronic key system. Displays when starting the vehicle if an electronic key is not detected. The key battery may also be weak.

**Lamp messages**

- Check XXXX Turn Signal Lamp

When one of the turn signals is out, this message displays to show which bulb needs to be replaced.

- Turn Signal On

Displays if the turn signal has been left on.

Turn off the turn signal.

**Object detection system messages**

- Park Assist Off

Displays when the park assist system has been turned off or when there is a temporary condition causing the system to be disabled.

*Park Assist (PA)* ⇨ 160

- Service Parking Assist

Displays if there is a problem with the park assist system. Do not use this system to help you park.

*Park Assist (PA)* ⇨ 160

- Rear Cross Traffic Alert Off

Displays when the rear cross traffic alert system has been turned off or when there is a temporary condition causing the system to be disabled.

*Rear Cross Traffic Alert (RCTA)* ⇨ 163

- Side Blind Zone Alert Off

Displays when the side blind zone alert system has been turned off or when there is a temporary condition causing the system to be disabled.

*Side Blind Zone Alert (SBZA)* ⇨ 165

**Ride control system messages**

- Service Traction Control

Displays when there is a problem with the Traction Control System (TCS).

When this message is displayed, the system will not limit wheel spin. Adjust your driving accordingly.

See a Holden Dealer for service.



- **Service ESC**

Displays if there is a problem with the Electronic Stability Control (ESC) system.

If this message appears, try to reset the system. Stop; turn off the engine for at least 15 seconds; then start the engine again.

If this message is still displayed, there is a problem. See a Holden Dealer for service.

The vehicle is safe to drive; however, you do not have the benefit of Electronic Stability Control (ESC), so reduce your speed and drive accordingly.

### **Security messages**

- **Theft Attempted**

Displays if the vehicle detects a tamper condition.

### **Service vehicle messages**

- **Service AC System**

Displays if there is a problem with the air conditioning system. Take the vehicle to a Holden Dealer for service.

- **Service Power Steering**

Displays and a chime may sound when there may be a problem with the power steering system.

If this message displays and a reduction in steering performance or loss of power steering assistance is noticed, see a Holden Dealer.

- **Service Vehicle Soon**

Displays if there is a problem with the vehicle. Take the vehicle to a Holden Dealer for service.

### **Transmission messages**

- **Service Transmission**

Displays if there is a problem with the transmission.

Take the vehicle to a Holden dealer for service.

- **Shift To Park**

Displays when the transmission needs to be shifted to P (Park).

This may display when attempting to remove the key from the ignition switch, or for vehicles with electronic key system, when removing the key from the vehicle, if the vehicle is not in P (Park).

- **Transmission Hot – Idle Engine**

Displays and a chime sounds if the transmission fluid becomes too hot.

Driving with the transmission fluid temperature high can cause damage to the vehicle.

Stop the vehicle and let it idle to allow the transmission to cool.

This message clears when the fluid temperature reaches a safe level.



**Vehicle reminder messages**

- Ice Possible Drive With Care  
Displays when ice conditions are possible.

**Window messages**

- Open, Then Close Driver/ Passenger Window

Displays when the window needs to be reprogrammed.

If the vehicle battery has been discharged or disconnected, you may need to program the driver's door window for the auto-up feature to work.

*Power windows* ⇨ 30.



**Warning chimes**

Warning chimes may be heard when starting the engine or while driving, for example:

- If a seat belt is not fastened.
- If a certain speed is exceeded while the park brake is applied.
- If a warning code appears on the instrument cluster.

Warning chimes may be heard when the vehicle is parked and/or a door is opened:

- When the key is in the ignition switch/lock or the ignition is on.
- When the exterior lamps are on.

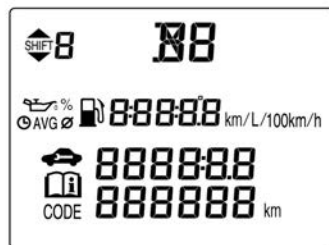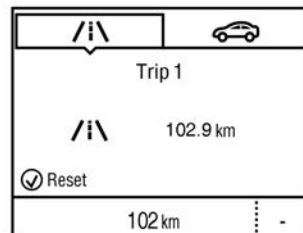**Trip computer****Type 1****Type 2**



The vehicle has a trip computer displayed on the Driver Information Centre (DIC) in the instrument cluster.

Depending on vehicle model, the trip computer shows:

#### Type 1


- Trip odometer.
- Fuel range.
- Average vehicle speed.
- Instantaneous fuel consumption.
- Average fuel consumption.

#### Type 2

- Digital speedometer.
- Trip 1.
- Trip 2.
- Fuel range.
- Instantaneous fuel consumption.
- Average fuel consumption.
- Average vehicle speed.



To select the trip computer screens, press **MENU**.

Rotate the adjuster wheel  to select the menu items.

### Digital speedometer (Type 2)

The digital speedometer displays the current vehicle speed.

### Trip odometer (Type 1) / Trip 1 and Trip 2 (Type 2)

This display shows the current distance travelled since the last reset for the trip odometer.

The trip odometer can be reset to zero by pressing SET/CLR while the trip odometer is displayed.

### Fuel range

This display shows the approximate distance the vehicle can be driven without refuelling.

The fuel range estimate is based on an average of the vehicle's fuel economy over recent driving history and the amount of fuel remaining in the fuel tank.

### Average vehicle speed

This display shows the average speed of the vehicle.

This average is calculated based on the various vehicle speeds recorded since the last reset of this value.

The average speed can be reset by pressing SET/CLR while average vehicle speed is displayed.



### Instantaneous fuel consumption

The instantaneous fuel economy display shows the current fuel economy.

This number reflects only the approximate current fuel economy of the vehicle and changes frequently as driving conditions change.

### Average fuel consumption

This display shows the approximate average fuel economy.

This number is calculated based on the fuel use recorded since the last time this menu item was reset.

This number reflects only the approximate average fuel economy of the vehicle and will change as driving conditions change.

The average fuel economy can be reset by pressing SET/CLR while average fuel economy is displayed.

## Vehicle personalisation



Settings can be personalised using the infotainment system controls.


### Note


Depending on the vehicle variant, some of the following functions may not be available.


## Settings

Settings can be made with the ignition on and the vehicle not moving.

The following are all possible Vehicle personalisation features and may differ to your vehicle.

 (Home) : Press to access the Home screen.

 Touch to scroll through the menus or setup items.

 Touch to exit, or return to the previous screen or menu.

Some items can be set to On or Off, while others have several choices.

The On setting is displayed as:



The Off setting is displayed as:






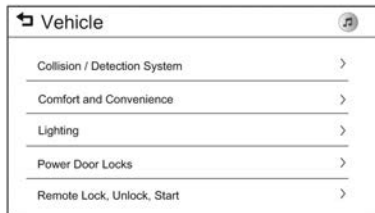
**Note**

The following describes the functions that may be available in the Vehicle menu. For the other items in the Settings menu; *Settings* ⇨ 132

**Vehicle**

To access the menu on the infotainment system:

1. Touch .
2. Touch Settings.
3. Touch Vehicle.



4. Select the desired item.

**Collision / Detection System**

Select and the following may display:

- Park Assist
- Rear Cross Traffic Alert
- Side Blind Zone Alert

Park Assist:

This allows this park assist to be turned on or off.

- Select On, Off or On with Towbar

Rear Cross Traffic Alert:

This allows this rear cross traffic alert system to be turned on or off.

- Select On, Off

Side Blind Zone Alert:

This allows this side blind zone alert system to be turned on or off.

- Select On, Off

**Comfort and Convenience**

Select and the following may display:

- Chime Volume
- Personalisation by Driver
- Auto Wipe in Reverse Gear

Chime Volume:

Allows selection of the chime volume level.

- Select 24 to 38

Personalisation by Driver

Allows personalisation functions to be turned on or off.

- Select On or Off

Auto Wipe in Reverse Gear:

Allows this feature to be turned on or off. When on, and the front wipers are on, the rear window wiper will turn on automatically when the vehicle is shifted into R (Reverse).

- Select On or Off


**Lighting**

Select and the following may display:

- Vehicle Locator Lights
- Exit Lighting



**Vehicle Locator Lights:**

This allows selection of the entry lighting function. When on, the exterior lights illuminate for a short period when  is pressed.

- Select On or Off

**Exit Lighting:**

This allows selection of how long the exterior lamps stay on when leaving the vehicle and it is dark outside.

- Select Off, 30, 60 or 120 Seconds

**Power Door Locks**

Select and the following may display:

- Auto Door Lock

**Auto Door Lock:**

This allows selection for the doors to automatically lock when the transmission lever is shifted out of park and unlock when placed in park.

- Select On or Off

**Remote Lock, Unlock, Start**

Select and the following may display:


- Remote Unlock Light Feedback
- Remote Lock Feedback
- Remote Door Unlock
- Relock Remote Unlocked Doors
- Passive Door Unlock
- Passive Door Lock
- Remote Left in Vehicle Alert

**Remote Unlock Light Feedback:**

When on, the exterior lamps will flash when unlocking the vehicle with the remote control.


- Select Flash Lights or Off


**Remote Lock Feedback:**


This allows selection of what type of feedback is given when pressing  on the remote control.

- Select Lights Only, Lights & Horn, Horn Only, or Off

**Remote Door Unlock:**

This allows selection of which doors will unlock when pressing  on the remote control.

When set to Driver Door, the driver's door will unlock the first time  or the front door exterior handle button (vehicles with electronic key system) is pressed. All doors will unlock when the button is pressed a second time.

When set to All Doors, all of the doors will unlock at the first press of  or the front door exterior handle button (vehicles with electronic key system).

- Select All Doors or Driver Door

**Relock Remote Unlocked Doors**

Activates or deactivates the automatic relock function after unlocking without opening a door.

- Select On or Off



#### Passive Door Unlock:

This allows the selection of what doors will unlock when using the button on the driver's door to unlock the vehicle.

- Select All Doors or Driver Door

#### Passive Door Lock:

Activates or deactivates the passive locking function. This feature locks the vehicle automatically after several seconds if all doors have been closed and an electronic key has been removed from the vehicle.

Select On, On with Horn Chirp or Off.

#### Remote Left in Vehicle Alert:

This feature sounds an alert when the remote control is left in the vehicle.

- Select On or Off



## Lighting

### Exterior lighting ..... 90

Exterior lamp control ..... 90

Automatic lamp control ..... 90

Headlamp high/low beam ..... 91

Headlamp range adjustment ..... 91

Daytime Running

Lamps (DRL) ..... 92

Hazard warning flashers ..... 92

Turn and lane change signals ..... 92

Front fog lamps ..... 93

Reversing lamps ..... 93

Misted lamp covers ..... 93

### Interior lighting ..... 93

Instrument panel illumination ..... 93

Interior lamps ..... 94

### Lighting features ..... 95

Vehicle locator lights ..... 95

Exit lighting ..... 95

Battery power protection ..... 95

## Exterior lighting

### Exterior lamp control



⏻ (OFF): Rotate to turn all lamps and lights off.

**AUTO:** Exterior lamps and instrument panel lights turn on or off automatically, depending on the ambient light.

⚡ (Park lamps): Turns on the park lamps, number plate lamps and instrument panel lights.

☀ (Headlamps): Turns on the headlamps and all park lamps.

## Automatic lamp control




When the lamp control is in the AUTO position, the exterior lamps and instrument panel lights automatically switch on according to ambient light.

- To turn automatic lighting off, rotate to ⏻.




## Headlamp high/low beam

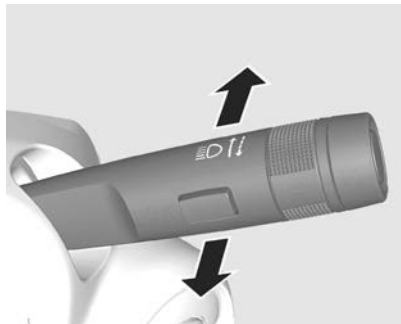

To activate high beam:

1. Turn the headlamps on.
2. Push the lever forwards.

The high beam indicator lamp  illuminates on the instrument cluster.

To return to low beam:

1. Push the lever again or pull the lever rearward.

### Warning

Always switch the headlamps to low beam when vehicles are approaching or when following another vehicle.

To flash the high beam lamps:


1. Pull the lever towards the rear of the vehicle and release.

The lamps stay on for as long as the lever is held.

## Headlamp range adjustment

Adjust the headlamp range according to vehicle load, to ensure illumination of the road ahead.



Press  to withdraw the switch, rotate to the recommended position and then press it back in place:

- 0:** Front seats occupied
- 1:** All seats occupied
- 2:** All seats occupied and load compartment laden
- 3:** Driver's seat occupied and load compartment laden





## Daytime Running Lamps (DRL)

DRL increase the visibility of the vehicle during daylight. The DRL LEDs can operate in two different intensities:

- Normal intensity for park lamps.
- High intensity for DRL function.


The DRL operate in high intensity when the ignition is on or the engine is running and the lamp control switch is in AUTO position.

If the lamp control switch is turned to  or , the DRL operate in normal intensity.

If the lamp control switch is turned off the DRL do not operate.

## Hazard warning flashers



Press  to turn the hazard warning flasher on or off, when the ignition is in any position.


All turn signals flash continuously.

Use the hazard warning flasher if the vehicle becomes a traffic hazard, day or night.

### Note

Using hazard warning flashers while the vehicle is moving, is illegal in some States and Countries.

## Turn and lane change signals

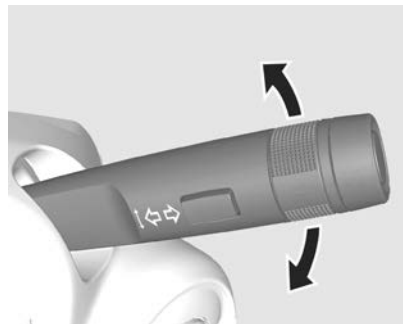

1. Push the lever in the direction the steering wheel is turned.

A green arrow on the instrument cluster flashes when the lamps are in operation.

For three flashes, e.g. when changing lanes:

1. Push the lever until the point of resistance, then release.



## Front fog lamps

The vehicle may have front fog lamps.



To turn the front fog lamps on:

- Press **D**.  
**D** illuminates on the instrument cluster.

To turn the front fog lamps off:

- Press **D** again.

## Reversing lamps

The reversing lamps illuminate when the ignition is on and reverse gear is engaged.

## Misted lamp covers

### Caution

Condensation may temporarily appear on the inside of exterior lamp lenses after rain or washing the vehicle. Condensation occurs when there is a temperature difference between the inside and outside of the lamp allowing a fine mist on the inside surface of the lamp lens. This condensation will disappear when the vehicle is in a dry environment or the lamp is on. If water does collect in the lamp contact a Holden Dealer.

## Interior lighting

## Instrument panel illumination



To adjust the instrument panel lighting, press **D** to withdraw the switch, rotate to the desired level and then press it back in place.



## Interior lamps

### Courtesy lamps

#### Front



Press the rocker switch:

⊗ (Off): Remains off when doors are opened or closed.

🚗: Automatically switches on when a door is opened and turns off after doors are closed.

⊙ (On): Remains on when doors are opened or closed.

#### Rear



Press the rocker switch:

○ (Off): Remains off when doors are opened or closed.

🚗: Automatically switches on when a door is opened and turns off after doors are closed.

⊙ (On): Remains on when doors are opened or closed.

#### Note

To prevent the battery from discharging, turn the lamp off when the engine is not running.

#### ⚠ Warning

Do not leave the courtesy lamp on while driving in the dark.

### Sun visor lamps


The vehicle may have lamps at either side of the mirror.

The lamps turn on and off automatically when the cover is opened and closed.



## Lighting features

### Vehicle locator lights

To facilitate retrieving the vehicle when it is dark, lights such as the headlamps and tail lamps illuminate for a short period when  is pressed.

Set the headlamps to Auto mode.

This setting can be changed in the Vehicle settings.

*Vehicle personalisation* ⇨ 86

### Exit lighting

Set the headlamps, side lamps and tail lamps to illuminate the way, after leaving the vehicle.

Activation, deactivation and duration of lighting can be changed in the vehicle settings menu.

*Vehicle personalisation* ⇨ 86

Set the headlamps to Auto mode.

1. Switch the ignition off.
2. Remove the ignition key or open the driver's door.

If activated, the lighting remains on for the set duration.

### Battery power protection

To prevent the battery from discharging, lamps are switched off automatically 10 minutes after the ignition is turned off.



# Infotainment system

## Introduction..... 96

Safety information ..... 96

General information..... 97

Theft-deterrent feature ..... 98

Overview ..... 99

Operation ..... 101

## Audio ..... 105

AM-FM radio ..... 105

DAB radio..... 108

Antennas ..... 110

USB port..... 111

Auxiliary devices ..... 118

Bluetooth music..... 119

## Gallery ..... 122

Gallery (pictures)..... 122

Gallery (movies) ..... 123

## Phone ..... 125

Bluetooth ..... 125

Hands-free phone ..... 128

## Smartphone applications... 130


Android Auto, Apple CarPlay .... 130

## Settings ..... 132

General operation of the  
settings menu ..... 132

## Introduction

### Safety information

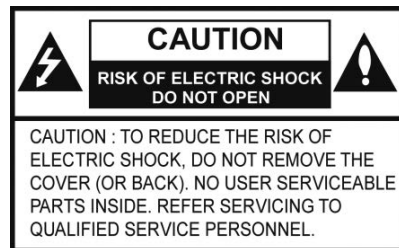

The lightning flash with the arrowhead symbol within an equilateral triangle is intended to alert the user about the presence of uninsulated dangerous voltage within the system's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.





The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the system.

- Always operate the vehicle in a safe manner. Do not become distracted by the vehicle while driving and always be fully aware of all driving conditions. Do not change settings or any functions. Pull over in a safe and legal manner before attempting such operations. To promote safety, certain functions are disabled unless the parking brake is on.

- To reduce the risk of electric shock, do not remove the cover or back of this system. There are no user-serviceable parts inside. Refer servicing to qualified service personnel.
- To reduce the risk of fire or electric shock, do not expose this system to water, rain, or moisture and do not place another electric device on LCD touch display.
- When driving, keep the volume of the unit low enough to allow you to hear sounds from outside the vehicle, such as emergency services, etc.
- Do not drop it and avoid heavy impacts at anytime.

### Warning

The infotainment system must be used so the vehicle can be driven safely at all times. Stop the vehicle in a safe location and operate the infotainment system while the vehicle is stationary.

For your safety, some features are disabled while the vehicle is in motion.

### General information

The infotainment system provides infotainment in your car, using the latest technology.

See a Holden dealer to have the system or software updated and upgraded.

The radio can be easily used by registering up to 25 FM or AM stations with the Preset function.

A DAB radio tuner may also be included.



The infotainment system can play USB storage device or iPod/iPhone devices.

Using the phone projection function, you can operate specific applications on your smartphone via the infotainment system.

The Bluetooth phone connection function allows for the use of wireless hands-free phone calls, as well as a phone music player.

Connect a portable music player to the auxiliary sound input to enjoy the rich sound of the infotainment system.

- The 'Overview' section provides a simple overview of the infotainment system's functions and summary of all regulatory devices.
- The 'Operation' section explains the basic controls for the infotainment system.
- Design and specifications are subject to change without notice.
- Some of the radio features may be limited when ignition is off.

Made for



iPod



iPhone

'Made for iPod' and 'Made for iPhone' refers to an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note the use of this accessory with iPod, iPhone may affect wireless performance.

## **Theft-deterrent feature**


The infotainment system has an electronic security system to prevent theft.







Therefore, the infotainment system will only function in the vehicle in which it was first installed, and cannot be used in another vehicle.

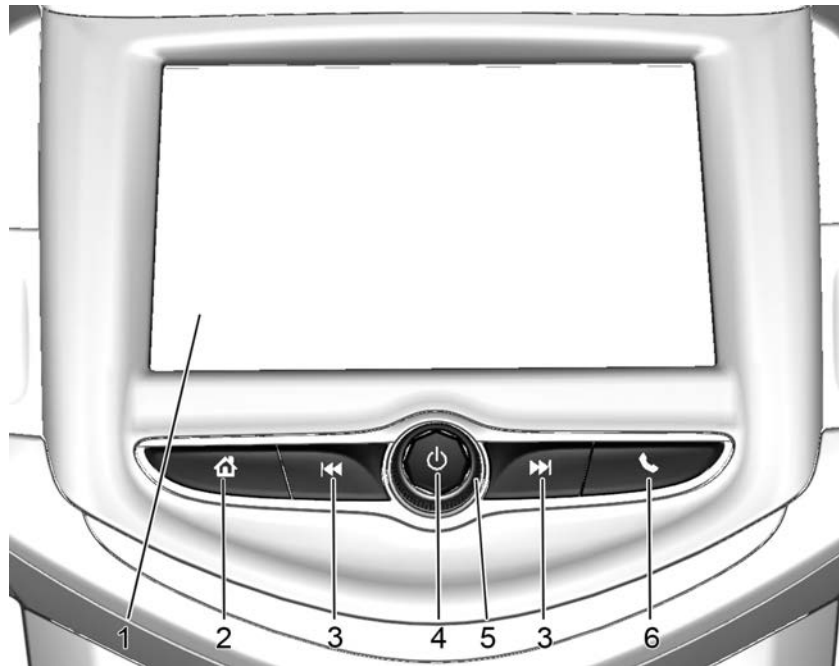

## Overview


### Control panel



1. Display:  
Display for Play / Reception / Menu state and information.
2. Home:  
Press  to enter the home menu.
3. Seek:  
Press   to seek the station or media contents.
4. Power:  
Press and hold  to turn the power on/off.  
Press  to turn the mute function on/off.
5. Volume knob:  
Rotate the volume knob to adjust the volume.
6. Phone:  
Press  to access the Phone screen.  
(If there is no connected phone, the display will show the Device Management Menu to allow you to connect a previously paired phone or establish a new Bluetooth enabled phone connection.)



## Steering wheel remote control

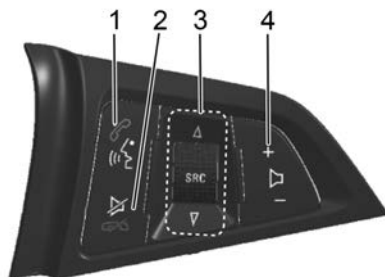

### 1. Call:

- **When there is no connected Bluetooth device on the infotainment system:**

Executes the Bluetooth device connection.

- **When there is a connected Bluetooth device on the infotainment system:**

Press to answer the call or enter the redial selection mode.

If the connected phone supports Speech Recognition, press and hold to activate the phone's SR (speech recognition) mode.

### 2. Mute / hang up:

Press in any music play mode to turn the mute function on and off.

Press to reject incoming calls or to finish your current call or phone's SR mode.

### 3. SRC

Press **SRC** to change the source, e.g. AM, FM, DAB, USB, etc.

SEEK ( / )

#### • **Press:**

- FM/AM/DAB mode: receives the previous or next preset station.
- USB mode: plays the previous or next file.
- iPod/iPhone mode: plays the previous or next song.

- Bluetooth music mode: plays the previous or next music.

#### • **Press and hold:**

- FM/AM mode: sequentially searches the stations saved in PRESET.
- Bluetooth, USB, iPod/iPhone mode: quickly scans forward or backward while the button is pressed. Once released, returns to normal playback.

### 4. Volume



Press **+** to increase the volume.


Press **-** to decrease the volume.



## Operation

### System on / off

- Press  on the control panel to turn the power on. The last audio or movie will be executed.
- Press and hold  on the control panel to turn the power off. The time and temperature will be shown on the screen.

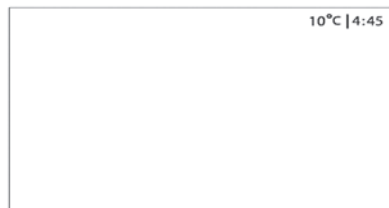

#### Note


The time and temperature are displayed when the ignition is on.

### Turning on / off automatically

When the ignition switch is in the ACC or ON position, the infotainment system is turned on automatically.

When the ignition switch is in the OFF position and the driver's door is opened, the infotainment system is turned off automatically.


#### Note

If  is pressed and held when the ignition is off, the infotainment system is turned on for approximately 10 minutes.


### Volume control

 
Rotate the volume knob on the control panel to adjust the volume. The current sound volume is indicated.



- Using the steering wheel remote control, press +  - to adjust the volume.
- Turning on the infotainment system will set the volume level to its previous selection (when it is less than the maximum starting volume).
- If the volume level is louder than maximum starting volume level when the infotainment system is turned on, the infotainment system is adjusted automatically to maximum starting volume level.

### Mute

Press  on the control panel to turn the mute function on and off.





## Using Home menu

1. Press  on the control panel.


The Home menu may vary depending on the vehicle option.



2. Touch the desired menu icon.
  - Touch **Audio** to select AM/ FM/ DAB/USB/ Bluetooth music play or auxiliary sound (AUX) input.
  - Touch **Gallery** to view pictures or movies.  
Refer to 'Before using Picture system' or 'Before using Movie system' for a list of supported file formats, ⇨ 122.
  - Touch **Phone** to activate phone features (if connected).

- Touch **Projection** to activate Android Auto™ or Apple CarPlay™. If a smartphone is already connected to the USB port, Projection will be replaced with **Android Auto** or **Apple CarPlay** icons.
- Touch **Settings** to enter the system settings menu.

## Managing home menu icons

1. Touch and hold any of the Home menu icons to enter edit mode.
2. Continue holding the icon and drag it to the desired position.
3. Release your finger to drop the icon in the desired position.
4. To move an application to another page, drag the icon to the edge of the screen toward the desired page.
5. Continue dragging and dropping application icons as desired.
6. Press  to exit edit mode.


## Note

- The edit mode exits after 30 seconds of inactivity.
- The maximum number of pages in edit mode is three.



## Selecting functions


### Audio

1. Press  on the control panel.
2. Touch **Audio** on the home menu.
3. Touch **Source** on the screen.




- Touch **AM** to select AM radio.
- Touch **FM** to select FM radio.
- Touch **DAB** to select digital radio.
- Touch **USB** to select USB music.  
If an iPod is connected to a USB port, USB changes to **iPod**.
- Touch **Bluetooth** to select Bluetooth music.
- Touch **AUX** to select auxiliary sound (AUX) input.


### Note


- Press  to return to the Home menu.
- If the playback source (iPod/USB/AUX/Bluetooth) is not connected to the infotainment system, this function is not available.
- Audio source availability may vary depending on the region and vehicle model.
- An additional USB device can be supported by attaching an external USB hub from the single USB port.
- Using a USB hub with 2 iPhone/iPod devices is not recommended.


Audio ⇨ 105

### Gallery


1. Press  on the control panel.
2. Touch **Gallery** on the home menu.

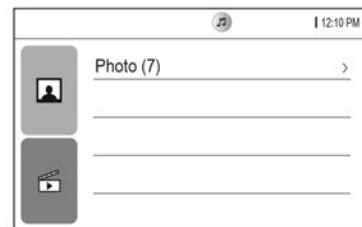

Touch  to view picture files on the USB storage device.

Touch  to view movie files on the USB storage device.

### Note



- Press  to return to the Home menu.
- If the playback source (USB (picture / movie)) is not connected to the infotainment system, this function is not available.

Gallery ⇨ 122




## Phone

To operate Bluetooth hands-free function, connect a Bluetooth phone to the infotainment system.

1. Press  on the control panel.
2. Touch **Phone** on the home menu. Alternately, press  on the control panel or steering wheel control switch (if available).



### Note

- Press  to return to the Home menu.
- If the phone is not connected to the infotainment system, this function is not available.


Phone ⇨ 125


## Projection

The phone projection applications Android Auto and Apple CarPlay display selected apps from your smartphone on the infotainment screen and allow their operation directly via the infotainment controls.




*Smartphone applications* ⇨ 130.

## Settings

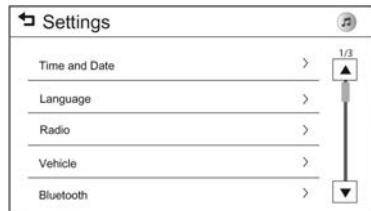1. Press  on the control panel.
2. Touch **Settings** on the home menu.



### Note

- The On setting is displayed as: 
- The Off setting is displayed as: 
- Press  to return to the Home menu.

Settings ⇨ 132



## Audio

### AM-FM radio

#### Listening to FM/AM radio

1. Press **🔊** on the control panel.
2. Touch **Audio** on the home menu.
3. Touch **Source** on the screen.
4. Touch **FM** or **AM** on the screen.  
The FM or AM radio band of the most recent listened station is displayed.



#### Note


- Press **🔊** to return to the Home menu.

#### Searching for broadcasting automatically

Press **⏮ / ⏭** on the control panel to automatically search for available stations with good reception.

#### Searching for broadcasting directly

1. Touch **Tune** on the screen.
2. Touch the desired frequency.
3. Touch **Go**.

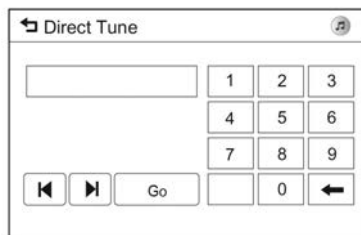

#### Note

Touching '.' between digits is not necessary. The radio will add it automatically at the correct location.

#### Searching for broadcasting by using the preset

##### Saving preset

1. Select the band (FM or AM) to store a station into.
2. Select the desired station.
3. Touch **< / >** to select the desired page of saved favourites.



4. Touch and hold down any Preset to save the current radio station to that button of the selected favourites page.
  - Up to 5 favourites pages can be saved, and each page can store up to five radio stations.



### Listening to preset directly

1. Repeatedly touch < / > to select the desired page of saved favourites.
2. Touch the desired Preset to directly listen to the radio station saved to that button.

### Using the FM/AM radio menu

#### General operation of the menu

1. Select the desired band (FM or AM).
2. Touch **Menu** on the FM/AM radio screen.



3. Touch the desired menu to select the relevant item or to display the item's detailed menu.

4. Touch  to return to the previous menu.

#### Station list

1. From the FM/AM menu, touch **Station List** to display the FM/AM station list. The station list information is displayed.




2. Scroll through the list using ▲ / ▼. Tune to the desired station by selecting it.

### Tone settings


From Tone Settings menu, sound features can be set.

1. From the FM/AM menu, touch **Tone settings** to enter the sound setup mode. The tone settings menu is displayed.

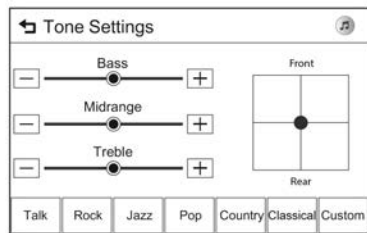

- Touch -/+ to select the desired sound style manually.
- Bass: Adjust the bass level from -12 to +12.
- Mid (Midrange): Adjust the mid-range level from -12 to +12.
- Treble: Adjust the treble level from -12 to +12.



- **Fade:** Adjust the front/rear speaker balance by dragging the round cursor up or down the vehicle interior image.
  - **Balance:** Adjust the left/right speaker balance by dragging the round cursor left or right the vehicle interior image.
  - **EQ (Equaliser):** Select or turn off the sound style. (Talk, Rock, Jazz, Pop, Country, Classical, Custom)
2. Touch .

### Auto volume

When Auto Volume is turned on, the volume will automatically be controlled according to the vehicle speed to offset the noise from the engine and tyres.

1. From the FM/AM menu, touch **Auto Volume**.
2. Select the desired option.  
(Off/ Low/ Medium-Low/ Medium/ Medium-High/ High)

### RDS (Radio Data System)

Setting the RDS function in the FM radio.


1. From the FM/AM menu, find RDS.
2. Select on or off.

#### Note

RDS may not be available in all areas

### Update station list

1. From the FM/AM menu, touch **Update Station List** to display the update FM/AM station list. The FM/AM broadcasting list update will proceed.

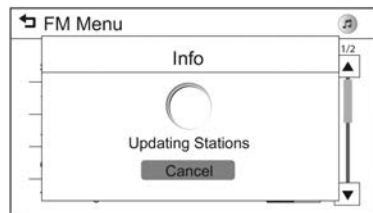

2. During the FM/AM broadcasting list update, touch **Cancel** to stop it from saving changes.



## DAB radio

The vehicle may have a DAB radio.

### Listening to DAB radio

1. Press **📶** on the control panel.
2. Touch **Audio** on the home menu.
3. Touch **Source** on the screen.
4. Touch **DAB** on the screen.  
The DAB radio band of the most recent listened station is displayed.



### Note

- Press **📶** to return to the Home menu.

### Searching for broadcasting automatically

Press **⏮ / ⏭** on the control panel to automatically search for available stations with good reception.

### Searching for broadcasting by using the preset

#### Saving preset

1. Select the desired station.
2. Touch **< / >** to select the desired page of saved favourites.



3. Touch and hold down any Preset to save the current radio station to that button of the selected favourites page.

- Up to 5 favourites pages can be saved, and each page can store up to five radio stations.
- To change a Preset, simply tune to the new desired radio station and hold the Preset.

### Listening to preset directly

1. Repeatedly touch **< / >** to select the desired page of saved favourites.
2. Touch the desired Preset to directly listen to the radio station saved to that button.


### Using the DAB radio menu

#### General operation of the menu



1. Touch **Menu** on the DAB radio screen.





2. Touch the desired menu to select the relevant item or to display the item's detailed menu.
3. Touch  to return to the previous menu.


### Station list

1. From the DAB menu, touch **Station List** to display the DAB station list. The station list information is displayed.
2. Scroll through the list using  / . Tune to the desired station by selecting it.


### Tone settings

From Tone Settings menu, sound features can be set.

1. From the DAB menu, touch **Tone settings** to enter the sound setup mode. The tone settings menu is displayed.

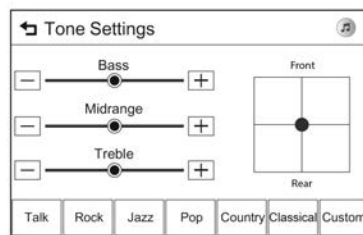

- Touch +/- to select the desired sound style manually.
- Bass: Adjust the bass level from -12 to +12.
- Mid (Midrange): Adjust the mid-range level from -12 to +12.
- Treble: Adjust the treble level from -12 to +12.

- Fade: Adjust the front/rear speaker balance by dragging the round cursor up or down the vehicle interior image.
  - Balance: Adjust the left/right speaker balance by dragging the round cursor left or right the vehicle interior image.
  - EQ (Equaliser): Select or turn off the sound style. (Talk, Rock, Jazz, Pop, Country, Classical, Custom)
2. Touch .



### Auto volume

When Auto Volume is turned on, the volume will automatically be controlled according to the vehicle speed to offset the noise from the engine and tyres.

1. From the DAB menu, touch **Auto Volume**.
2. Select the desired option.  
(Off/ Low/ Medium-Low/ Medium/ Medium-High/ High)

### Categories

1. From the DAB menu, touch **Categories** to display the DAB category list.  
The DAB category list information is displayed.


Scroll through the list using ▲ / ▼.  
Tune to the desired station by selecting it.

### Note

In DAB mode, only the selected category is displayed in the category list.

### Update station list

1. From the DAB menu, touch **Update Station List** to update DAB station list. The DAB broadcasting list update will proceed.

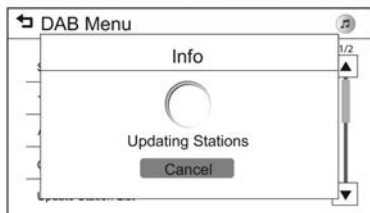

2. During the DAB broadcasting list update, touch **Cancel** to stop it from saving changes.

## Antennas

### Fixed mast antenna

To remove the roof antenna, rotate it counterclockwise. To install the roof antenna, rotate it clockwise.

### Caution

To avoid damage, remove the antenna before entering an automatic car wash or a place with a low ceiling height.

Install the antenna fully tightened and adjusted to the upright position to ensure proper reception.

### Multi-band antenna

The multi-band antenna on the roof of the vehicle is used for the AM-FM radio. Keep the antenna clear of obstructions for clear reception.



## USB port



The infotainment system can play the music files contained in a USB storage device, a device that supports Media Transfer Protocol (MTP) or supported iPods/iPhones.

## Before using audio system

### Supported audio file formats:

- MP3 (MPEG-1 Layer 3, MPEG-2 Layer 3).  
Constant Bit Rate (CBR) between 8 and 320 kbps.  
Variable Bit Rate (VBR).  
Sampling frequencies of 8, 11.025, 12, 16, 22.05, 24, 32, 44.1, and 48 kHz.
- Windows Media Audio Windows Media Audio 10.  
CBR between 32 and 768 kbps.  
VBR (Standard), Professional, Lossless, or higher according to Microsoft specifications.  
Sampling frequencies of 8, 12, 16, 22, 32, 44.1, and 48 kHz.
- AAC (MPEG-4 AAC, Low Complexity Profile) and AAC+.  
CBR between 8 and 320 kbps.
- OGG Vorbis.

- Waveform (WAV – PCM Windows format).
- Audio Interchange File Format (AIFF).
- 3GPP (Generally used for mobile devices).
- Audio Books (MP3, WMA, AAC, AA).



**Cautions for using USB storage device and iPod/iPhone**

- Operation cannot be guaranteed if a HDD built-in USB mass storage device or a CF or SD memory card is connected by using a USB adaptor. Use a USB or flash memory type storage device.
- Use caution to avoid static electricity discharge when connecting or disconnecting the USB. If connection and disconnection are repeated many times within a short time, a problem may result.
- Operation is not guaranteed if the connecting terminal of the USB device is not metal.
- Connection with i-Stick Type USB storage devices may fail due to vehicle vibration, so their operation cannot be guaranteed.
- Be careful not to touch the USB connecting terminal with an object or any part of your body.
- USB storage devices can only be recognised when it is formatted in FAT16/32, NTFS, HFS+, exFAT and other file systems cannot be recognised.
- According to the type and capacity of the USB storage device and the type of the stored file, the time it takes to recognise the files may differ. This is not a problem with the system in this case, wait for the files to be processed.
- Files in some USB storage devices may not be recognised due to compatibility problems.
- Do not disconnect the USB storage device while it is being played. This may cause damage to the system or the performance of the USB device.
- An external USB hub may require two USB devices to be used at the same time depending on vehicle variant.
- Disconnect the connected USB storage device when the vehicle ignition is turned off. If the ignition is turned on while the USB storage device is connected, the USB storage device may be damaged or may not operate normally in some cases.
- A USB storage device can only be connected to this system for the purpose of playing music/movie, viewing photo files, or upgrading.
- The USB terminal should not be used to charge USB accessory equipment since the heat generation using the USB terminal may cause performance issues or damage to the device.
- When a USB device contains more than one partition, only the music files from the top-level partition can be played. Store the music files in the top-level.



- Music files to which DRM (Digital Right Management) is applied cannot be played.
- This system can support USB storage devices with a limit of 5000 files (music, photo and video), and 15 stages of folder structure. Normal usage cannot be guaranteed for storage devices that exceed this limit.  
An iPod/iPhone can play all music files supported. But the music file lists are displayed up to 5000 files on the screen in alphabetical order.
- Some iPod/iPhone models may not support the connectivity or functionality of this system.
- Only connect an iPod/iPhone with connection cables supported by iPod/iPhone devices. Other connection cables may not operate correctly.

- When an iPod/iPhone is not being used, disconnect it from the vehicle with the ignition turned off.
- We don't recommend using a USB hub with two iPhone/iPod devices.
- When an iPod/iPhone is connected to the USB port by an iPod/iPhone cable, Bluetooth music is not supported.
- Connect an iPod/iPhone to the USB port by using an iPod/iPhone cable to play the music files of an iPod/iPhone. When an iPod/iPhone is connected to the AUX input terminal, the music files are played, but not controlled by MyLink.
- iPod/iPhone movie file playback is not supported.

- The playback functions and the information display items of the iPod/iPhone used with this infotainment system may be different from the iPod/iPhone in terms of play order, method, and the information displayed.
- Refer to the following table for the classification items related to the search function provided by an iPod/iPhone.

	Step 1	Step 2
Playlists	Playlists	Songs
Artists	Albums / All song	Songs
Albums	Albums	Songs
Songs	Songs	
Genres	Albums / All song	Songs
Composer	Albums/ All song	Songs
Audiobooks	Songs	
PodCasts	PodCast	Episode



## USB player

### Playing USB storage device music files

Connect the USB storage device containing the music files to the USB port.

- Once the infotainment system finishes reading the information on the USB storage device, it will be automatically played. (If you set the USB Auto Launch to off in Settings, it will not be automatically played.)
- If a non-readable USB storage device is connected, then an error message will appear and the infotainment system will be automatically switched to the previous audio function.



#### Note

If the USB storage device is already connected, press **⏮** > **Audio** > **Source** > **USB** to play the USB music files.

### Ending the USB music files playback

- Touch **Source**.
- Select another function by touching the **AM**, **FM**, **AUX** or **Bluetooth**.

#### Note

Before removing the USB storage device, select another function, and then remove the USB storage device.

## Pause

Touch **II** during playback.

Touch **▶** to resume playback.

### Playing the next file

Touch **⏭** to play the next file.

### Playing the previous file

Touch **⏮** within 5 seconds of playback time to play the previous file.

### Returning to the beginning of the current file

Touch **⏮** after 5 seconds of playback time.



### Scanning forward or backward

Hold down **⏮** / **⏭** during playback to rewind or fast-forward. Release **⏮** / **⏭** to resume playback at normal speed.




### Playing file randomly


Touch  during playback.

-  : Plays all files randomly.
-  : Returns to normal playback.

### General operation of the USB music menu

1. Touch **Menu** on the USB music screen.

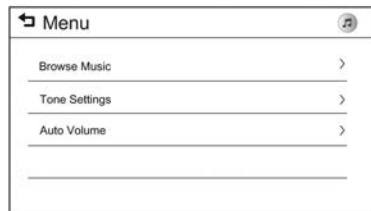

2. Touch the desired menu to select the relevant item or to display the item's detailed menu.
3. Touch  to return to the previous menu.

### Browse music

1. From the USB music menu, touch **Browse Music**.

The number of relevant songs is displayed by all Playlists/ Artists/ Albums/ Songs/ Genres/ More.

2. Touch the desired music.

### Tone settings

From the USB menu, sound features can be setup.

*Tone settings* ⇨ 106

### Auto volume

From the USB menu, volume will be automatically controlled.

*Auto volume* ⇨ 107

### Media Transfer Protocol (MTP) player

#### Playing music from a supported MTP device

Connect the supported Media Transfer Protocol (MTP) device containing music files to the USB port.

- Once the infotainment system finishes reading the information on the device that supports MTP, it will be automatically played. (If you set the USB Auto Launch to off in Settings, it will not be automatically played.)
- If a non-readable device that supports MTP is connected, then an error message will appear and the infotainment system will be automatically switched to the previous audio function.





#### Note

- Depending on the device, some files may not be played.
- File loading may take a few minutes depending on the type of the device or the number of file/folder stored in the device.
- When you connect the MTP device, the infotainment system scans audio files first, and then scans picture and movie files. While scanning picture or movie files, these files may not be available until loading indicator on the audio screen disappears even if the audio file in MTP device is playing.

- If you connect the MTP device that has external memory, it may be recognised as USB.
- Other operation is same as a USB player.  
*USB player ⇨ 114*
- To operate the MTP connection the user may be required to change the USB connection setting to MTP on the device.

### iPod/iPhone player

#### Playing iPod/iPhone music files

Connect the iPod/iPhone containing the music files to the USB port.

- Once the infotainment system finishes reading the information on the iPod/iPhone, it will be automatically played from the previously played point. If you set the USB Auto Launch to off in Settings, it will not be automatically played.



#### Note

If the iPod/iPhone is already connected, press **⏏ > Audio > Source > iPod** to play the iPod/iPhone.

#### Ending the iPod/iPhone playback

- Touch **Source**.
- Select another function by touching the **AM, FM, AUX** or **Bluetooth**.

#### Note

Before removing the iPod/iPhone, select another function, and then remove the iPod/iPhone.

#### Pause

Touch **II** during playback.

Touch **▶** to resume playback.



### Playing the next song

Touch ►► to play the next song.

### Playing the previous song

Touch ◀◀ within 2 seconds of playback time to play the previous song.

### Returning to the beginning of the current song

Touch ◀◀ after 2 seconds of playback time.

### Scanning forward or backward

Hold down ◀◀ / ►► during playback to rewind or fast-forward. Release ◀◀ / ►► to resume playback at normal speed.


### Playing file randomly

Touch ⌂ during playback.

- ⌂ : Plays all files randomly.
- ⌂ : Returns to normal playback.

### General operation of the iPod music menu

1. Touch **Menu** on the iPod music screen.

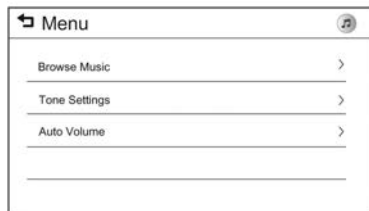

2. Touch the desired menu to select the relevant item or to display the item's detailed menu.
3. Touch ⏮ to return to the previous menu.

### Browse Music

1. From the iPod music menu, touch **Browse Music**.

The number of relevant songs is displayed by all Playlists/ Artists/ Albums/ Songs/ Genres/ More.

2. Touch the desired music.

### Tone settings

From the iPod menu, sound features can be setup.

*Tone settings* ⇨ 118

### Auto volume

From the iPod menu, volume will be automatically controlled.

*Auto volume* ⇨ 107




## Auxiliary devices

The infotainment system can play music on an auxiliary device when connected by an auxiliary cable.

### Playing music on auxiliary device

Connect the auxiliary device containing the music source to the AUX input terminal. Once the infotainment system finishes reading the information on the auxiliary device, it will be automatically played.

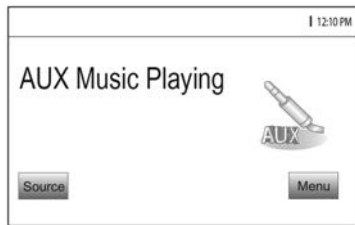


#### Note

- If the auxiliary device is already connected, press **⬆ > Audio > Source > AUX** to play music source of auxiliary device.
- Auxiliary cable type: 3.5 mm, three-pole auxiliary cable for audio playback.



## General operation of the AUX music menu

1. Touch **Menu** on the AUX music screen.

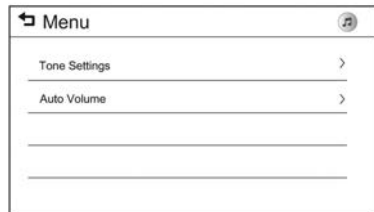

2. Touch the desired menu to select the relevant item or to display the item's detailed menu.
3. Touch **⬅** to return to the previous menu.

### Tone settings

From the AUX menu, sound features can be setup.

*Tone settings* ⇨ 118



### Auto volume

From the AUX menu, volume will be automatically controlled.

*Auto volume* ⇨ 107

### Bluetooth music

Music may be played from a paired Bluetooth device that supports Bluetooth audio. For help pairing a device; *Phone* ⇨ 125

#### Before playing Bluetooth music


- The supported profile: A2DP, AVRCP.
- Bluetooth music may not be supported depending on the mobile phone or Bluetooth device.
- From the mobile phone or Bluetooth device, find the Bluetooth device type to set/ connect the item as a stereo headset.
- A musical note icon (♪) will appear on the screen if the Bluetooth device is successfully connected.
- The sound played by the Bluetooth device is delivered through the infotainment system.


- Bluetooth music can be played only when a Bluetooth device has been connected.
- If the Bluetooth is disconnected while playing phone music, the music is discontinued. The audio streaming function may not be supported in some Bluetooth phones. Only one function can be used at a time between the Bluetooth hands-free or Phone music function. For example, if you change to the Bluetooth hands-free while playing Phone music, the music is discontinued.
- For Bluetooth music to play, the music must at least be played once from the music player mode of the mobile phone or Bluetooth device after connecting as a stereo headset. After being played at least once, the music player will be automatically played upon entering play mode, and it will be automatically stopped when the music player mode ends.



If the mobile phone or Bluetooth device is not in the waiting screen mode, some devices may not automatically play in Bluetooth music play mode.

### Playing Bluetooth music

1. Press  on the control panel.
2. Touch **Audio** on the home menu.
3. Touch **Source** on the screen.
4. Touch **Bluetooth** to select the connected Bluetooth music play mode.

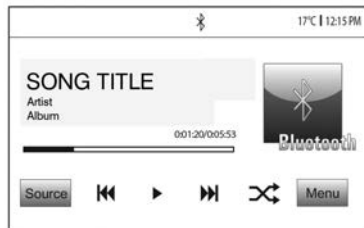

### Note

If the Bluetooth device is not connected, then this function cannot be selected.

### Pause

Touch **II** during playback. Touch **▶** again to resume playback.

### Playing the next music

Touch **▶▶** to play the next music.

### Playing the previous music

Touch **◀◀** within 2 seconds of playback time to play the previous music.

### Returning to the beginning of the current music



Touch **◀◀** after 2 seconds of playback time.

### Search

Hold down **◀◀** or **▶▶** to fast forward or rewind.

### Playing music randomly

Touch  during playback.


-  : Plays all files randomly.
-  : Returns to normal playback.


### Note

Some functions may not be supported depending on the mobile phone.

### General operation of the Bluetooth music menu

1. Touch **Menu** on the Bluetooth music screen.

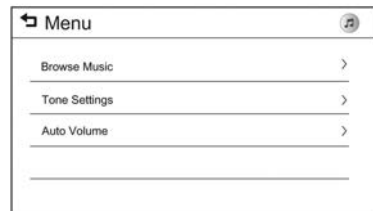

2. Touch the desired menu to select the relevant item or to display the item's detailed menu.
3. Touch  to return to the previous menu.



### Browse music

1. From the Bluetooth music menu, touch **Browse Music**. The number of relevant songs is displayed by all Playlists/ Artists/ Albums/ Songs/ Genres/ More. The items may vary depending on the mobile phone.
2. Touch the desired music.

#### Note

This function may not be supported depending on the mobile phone.

### Tone settings

From the Bluetooth music menu, sound features can be setup.

*Tone settings* ⇨ 118

### Auto volume

From the Bluetooth music menu, volume will be automatically controlled.

*Auto volume* ⇨ 107

### Caution on playing Bluetooth music:

- Do not change the track too quickly when playing Bluetooth music.
- It takes some time to transmit data from the mobile phone to the infotainment system. The infotainment system outputs the audio from the mobile phone or Bluetooth device as it is transmitted.
- If the mobile phone or Bluetooth device is not in the idle screen mode, it may not automatically play even though it is in Bluetooth music play mode.
- The infotainment system transmits the order to play from the mobile phone in the Bluetooth music play mode. If this is done in a different mode, then the device transmits the order to stop.

Depending on the mobile phone's options, this order to play/stop may some take time to activate.

- If Bluetooth music playback is not functioning, then check to see if the mobile phone is in the idle screen mode.
- Sometimes, sounds may be cut off during the Bluetooth music playback.




## Gallery

### Note

Picture and movie function is not supported for iPhone.

## Gallery (pictures)

The infotainment system can view picture files contained in the USB storage device.

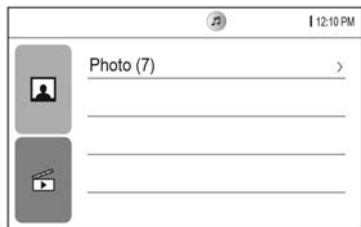

## Before using picture system

### The following picture file formats are supported


- Only the following file extensions are supported: '\*.jpg', '\*.bmp', '\*.png', '\*.gif' (Animated GIF is not supported.)
- Some files may not operate due to a different format or the condition of the file.

## Viewing a picture



1. Connect the USB storage device containing the picture files to the USB port.

The picture will be displayed.




2. Touch the screen to hide the control bar. Touch the screen again to show the control bar again, touch  to return to the previous screen.

### Note

- If the USB storage device is already connected, press  > **Gallery** >  to view the picture files.
- For your safety, some features are disabled while your vehicle is in motion.

## Viewing slide show

From the picture screen, touch .


- The slideshow will be played.
- Touch the screen to cancel the slide show during slide show playback.



 
## Viewing a previous or next picture

From the picture screen, touch < or > to view previous or next picture.

## Rotating a picture

From the picture screen, touch  to rotate the picture.

## Enlarging a picture


From the picture screen, touch  to enlarge the picture.


## Viewing to full screen

From the picture screen, touch **Fit** to view to full screen. Touch **Fit** again to return to the previous screen.

## Using the USB picture menu

1. From the picture screen, touch **MENU**. The USB picture menu is displayed.

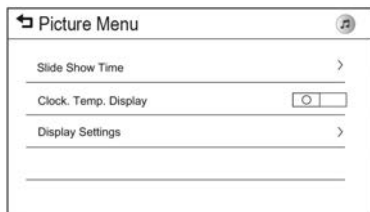

2. Touch the desired menu.
  - Slide Show Time: Select the slide show interval.
  - Clock Temp Display: To display the clock and temperature on the full screen, select On or Off.
  - Display Settings: Adjust the Brightness and Contrast.
3. After the setting is complete, touch .

## Gallery (movies)

The infotainment system can play movie files contained in the USB storage device.

## Before using movie system


### The following movie file formats are supported

- Available resolution: Up to 1280 x 720 pixels. (1280 x 720 is supported)
- Frame rate: less than 30 fps.
- Playable movie file: '.mp4', '.avi'  
The playable movie file may not be played according to the codec format.
- Playable Codec format: H.264/MPEG-4 AVC.
- Playable Audio format: 'MP3', 'AC3', 'AAC', 'WMA'.




- Max Audio Bitrate:
  - MP3: 320 kbps
  - WMA: 768 kbps
  - AC3: 640 kbps
  - AAC: 320 kbps.
- Movie files to which DRM (Digital Right Management) is applied may not be played.

### Playing a movie file

1. Connect the USB storage device containing the movie files to the USB port.
2. Press **u** > **Gallery** >  and select the desired movie file. The movie will be played.



3. Touch the screen to hide control bar. Touch the screen again to show the control bar again, touch  to return to the previous screen.

### Pause

Touch **II** during playback.

Touch **▶** to resume playback.

### Playing the next movie

Touch **▶▶** to play the next movie.

### Playing the previous movie

Touch **◀◀** within 5 seconds of playback time to play the previous movie.

### Returning to the beginning of the current movie

Touch **◀◀** after 5 seconds of playback time.

### Scanning forward or backward


Hold down **◀◀** / **▶▶** during playback to rewind or fast-forward. Release **◀◀** / **▶▶** to resume playback at normal speed.

### Viewing to full screen


From the movie screen, touch **Fit** to view to full screen. Touch **Fit** again to return to the previous screen.

### Using the USB movie menu

1. From the movie screen, touch **Menu**. The USB movie menu is displayed.

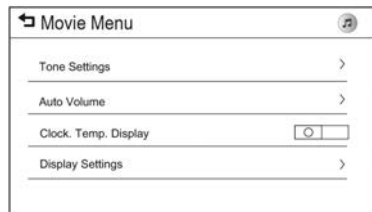



2. Touch the desired menu.
  - **Tone Settings:** Set the sound feature. *Tone settings* ⇨ 118
  - **Auto Volume:** Volume will be automatically controlled. *Auto volume* ⇨ 107
  - **Clock Temp Display:** To display the clock and temperature on the full screen, select On or Off.
  - **Display Settings:** Adjust the Brightness and Contrast.
3. After the setting is complete, touch .

## Phone

### Note

Limited to models supporting the Bluetooth connection.

## Bluetooth

### Understanding Bluetooth wireless technology

Bluetooth wireless technology establishes a wireless link between two devices supported with Bluetooth.

After the initial pairing, the two devices can connect automatically each time you turn them on.

Bluetooth allows wireless transmission of information among Bluetooth phones, PDAs, or other devices within close ranges by using 2.45 GHz frequency short-distance wireless telecommunication technologies.

Within this vehicle, users can make hands-free calls, transmit hands-free data, and play audio streaming files by connecting a mobile phone with the system.

### Note




- There may be restrictions on using Bluetooth wireless technology in some locations.
- Due to the variety of Bluetooth devices and their firmware versions, your device may respond differently when performing over Bluetooth.
- Any inquiries regarding your phone's Bluetooth functionality, refer to the device manual.
- Multi-pairing is not supported.



### Pairing a Bluetooth device

To use the Bluetooth feature, make sure the Bluetooth on your device is turned on and your device should be discoverable mode. Refer to user guide of Bluetooth device.

#### When there is no paired device in the infotainment system


1. Press  on the control panel.
2. Touch **Phone** on the home menu.  
Or press  on the control panel.  
Or press  on the steering wheel remote control.
3. Touch **Search Device** to search for Bluetooth phones.
4. Touch the desired device to pair on the searched list screen.
  - (1) If the SSP (Secure Simple Pairing) is supported, touch **Yes** or **Pair** on the pop-up screen of the your Bluetooth device and infotainment system.

- (2) If the SSP is not supported, input the PIN code on your Bluetooth device as shown on the screen.
5. When your Bluetooth device and infotainment system is successfully paired, the 'Phone' screen is displayed on the infotainment system.








If the connection fails, a failure message is displayed on the infotainment system.

#### When there is a previously paired device in the infotainment system

1. Press  on the control panel.
2. Touch **Settings** on the home menu.
3. Touch **Bluetooth > Device Management**.
4. Touch the device you wish to pair from the 'Device Management' screen, and then follow step 6. To add a device not in the list touch **Search Device**.
5. Touch the desired device to pair on the searched list screen.
  - (1) If the SSP is supported, touch **Yes** or **Pair** on the pop-up screen of the your Bluetooth device and infotainment system.
  - (2) If the SSP is not supported, input the PIN code on your Bluetooth device as shown on the screen.



6. When your Bluetooth device and the infotainment system is successfully paired,  displayed on the 'Device Management' screen.
  - The connected phone is highlighted by  mark.
  - The  mark indicates the hands-free and phone music function are enabled.
  - The  mark indicates only hands-free function is enabled.
  - The  mark indicates only Bluetooth music is enabled.

#### Note

 
- The phone book is automatically downloaded when your Bluetooth phone is successfully paired with the infotainment system, if supported by the phone.

If it is not automatically downloaded, proceed with the phone book download on your phone.


It is recommended that you always accept the phone book request during the initial pairing of the phone.

- The infotainment system can register up to ten Bluetooth devices.
- If the connection fails, a failure message is displayed on the infotainment system.
- If the phone book lists are more than 5000, the infotainment system does not guarantee proper listing of remaining phone book entries.
- Depending on the phone book entries, pairing time may be different.

#### Checking a connected Bluetooth device


1. Press  on the control panel.
2. Touch **Settings** on the home menu.
3. Touch **Bluetooth > Device Management**.
4. The connected device will be shown.

#### Disconnecting a Bluetooth Device

 1. Press  on the control panel.
2. Touch **Settings** on the home menu.
3. Touch **Bluetooth > Device Management**.
4. Touch the name of the device you wish to disconnect.
5. Touch **Disconnect**.





## Connecting a paired Bluetooth device

1. Press  on the control panel.
2. Touch **Settings** on the home menu.
3. Touch **Bluetooth > Device Management**.
4. Touch the device you wish to connect.

## Deleting a Bluetooth device

If you no longer need to use the Bluetooth device, you can delete it.



1. Press  on the control panel.
2. Touch **Settings** on the home menu.
3. Touch **Bluetooth > Device Management**.
4. Touch .
5. Touch **Delete**.

## Hands-free phone



### Making a call by entering a phone number

1. Enter the phone number using the keypad on the Phone screen.





2. Touch  on the screen or press on the steering wheel remote control. Alternately, press  on the control panel.

### Note


If you touch the wrong number, touch  to delete the input number one digit at a time or touch and hold  to delete all the inputted numbers.

## Switching call to the mobile phone (Private mode)



1. If you want to switch the call to the mobile phone instead of the car hands-free, touch .
2. If you want to switch the call back to the hands-free, touch  again.

The call is switched to the car hands-free.

## Switching the microphone on/off

You can switch the microphone on/off by touching .

## Calling by Re-dial

 



From the steering wheel remote control, press  or touch  on the 'Phone' screen.

### Note



Redialing is not possible when there is no call history.




## Taking calls

1. When a phone call comes through the connected Bluetooth mobile phone, the playing track will be paused and the phone will ring with the relevant information displayed.
2. To talk on the phone, press  on the steering wheel remote control or touch  on the screen.  
To reject the call, press the  on the steering wheel remote control or touch  on the screen.

## Using the Contacts menu

1. Touch **Contacts** on the Phone screen.
2. Use  /  to scroll through the list.
3. Select the Phone book entry you want to call.
4. If a contact has two or more phone numbers, touch a number to call.

## Searching for Contacts entries

1. Touch **Contacts** on the Phone screen.
2. Touch  on the Contacts screen.
3. Use the keypad to input the name you want to search.  
For details, see '*Searching for a name*' below.
4. Select the Phone book entry you want to call.

### Searching for a name

For example, when the user searches for a name, such as 'alex'.

1. Touch **abc** to select the first character.  
The names starting with 'a', 'b', or 'c' characters are displayed on the Contacts screen.
2. Touch **jkl** to select the second character.  
The names are refined with 'j', 'k', or 'l' second characters are displayed.







3. Touch **def** to select the third character.  
The names are refined with 'd', 'e', or 'f' third characters are displayed.
4. Touch **wxyz** to select the fourth character.  
The names are refined with 'w', 'x', 'y', or 'z' fourth characters are displayed.
5. As more letters of the name are entered, the list of possible names is shortened.

### Note

At anytime if the desired name is displayed it can be selected without continuing entering characters.



**Making a call from call history**

1. Touch **Call History** on the 'Phone' screen.
2. Touch ,  or .  
: All call history  
: Dialed call  
: Missed call  
: Received call
3. Select the contact you want to call.

**Making a call with speed dial numbers**

Touch and hold speed dial number using the keypad on the 'Phone' screen.

Only speed dial numbers already stored on the mobile phone can be used for speed dial calls. Up to 2-digit speed dial numbers are supported.

For 2-digit speed dial numbers, touch and hold the 2nd digit to make a call to the speed dial number.

**Voice mail**

The default voice mail number is the phone number of the currently connected phone. The voice mail number can be changed in Bluetooth settings.

To dial a voice mail number:

1. Press the Phone screen button.
2. Select Voice Mail.
3. Select Call.

**Smartphone applications****Android Auto, Apple CarPlay**

The phone projection applications Android Auto™ and Apple CarPlay™ display selected Apps from your smartphone on the infotainment screen and allow their operation directly via the infotainment controls.

Check with the device's manufacturer if this function is compatible with your smartphone and if this application is available in your area.

**Downloading the App**

Depending on the smartphone, you may be required to download an application to your smartphone.

Android phone:

Download the Android Auto App to your smartphone from the Google Play store.



Android Auto may not be compatible with all Android devices.

**iPhone:**

There is no additional App required to use Apple CarPlay.

Check on the manufacturer's website whether Apple CarPlay is available with your smartphone.

### Note

Ensure SIRI is activated on your iPhone.

## Activating phone projection in the settings menu


Once the applicable smartphone is connected, CarPlay or Android Auto will automatically operate. This can be changed; *Settings* ⇨ 132

- Ensure the respective application is activated.

## Connecting a mobile phone

Connect the smartphone to the USB port with a genuine cable; *USB port*

⇨ 111

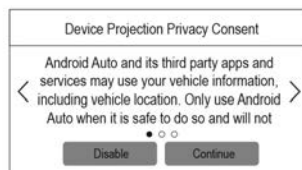

When your device is first connected, the Device Projection Privacy Consent message will be displayed.

- If you touch 'Continue', the projection feature is activated.
- If you touch 'Disable', the device will charge only.

### Note

- If the application is recognised by the infotainment system, the Projection icon may change to **Android Auto** or **Apple CarPlay**.
- The phone projection screen displayed depends on your phone and software version.

## Further information

For further information go to:

- Apple CarPlay:  
<https://support.apple.com/> and search for CarPlay.
- Android Auto:  
<https://support.google.com/> and search for Android Auto.


## Returning to the home screen




Press .



## Settings

### General operation of the settings menu

1. Press  on the control panel.
2. Touch **Settings**.  
As desired, scroll to display available options.

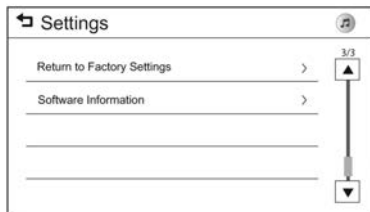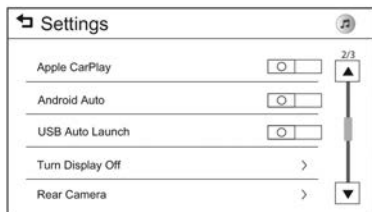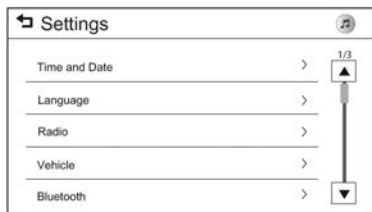


3. Select the desired setting value.

#### Note

Settings menus and functions may vary depending on your vehicle option.

## Time and date

1. Touch **Time and Date**.

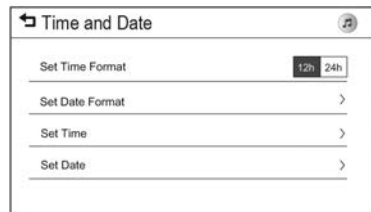


- Set Time Format: Select 12h or 24h time display.
- Set Date Format: Set the date display format.
  - DD/MM/YYYY
  - MM/DD/YYYY
  - YYYY/MM/DD
- Set Time: Set the time by touching +/-.
- Set Date: Set the date by touching +/-.



## Language


1. Touch **Language**.

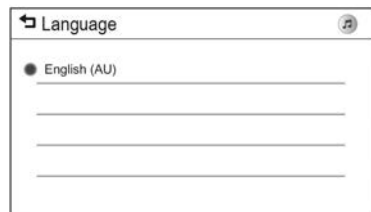

2. Select language displayed on the infotainment system.

## Radio

1. Touch **Radio**.

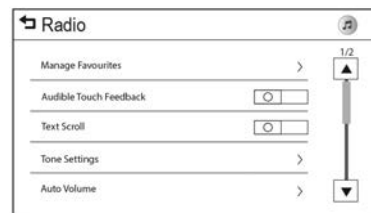


- Manage Favourites: Select the number of favourite list on the radio screen.
- Audible Touch Feedback: Allow audible feedback when touching the radio screen.
- Text Scroll: Allow scrolling of text such as radio station identification, messages, or music information.
- Tone Settings: Set the sound feature. *Tone settings* ⇨ 118
- Auto Volume: Volume will be automatically controlled. *Auto volume* ⇨ 107
- Maximum Startup Volume: Set the max startup volume. (13 to 37)

## Vehicle

*Vehicle personalisation* ⇨ 86

## Bluetooth

1. Touch **Bluetooth**.

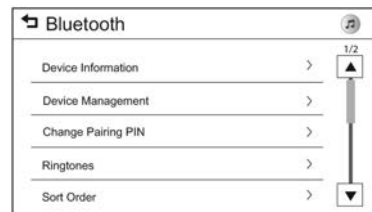

- Device Information: Check the device information.
- Device Management: Select the desired device and connect/disconnect or delete.
- Change Pairing PIN: Manually change/set the PIN code.
- Ringtones: Change the ringtone.
- Sort Order: Change the sorting order of contacts. (First/Last or Last/First)
- Voice Mail Numbers: Change the voice mail number.



## Apple CarPlay




1. Select **Apple CarPlay** on or off.
- On with USB Auto Launch set to On: If you connect an iPhone through the USB port, it will launch automatically.
  - On with USB Auto Launch set to Off: If you connect an iPhone through the USB port, the Apple CarPlay icon will appear on the Home screen.
  - Off (default): If you connect an iPhone through the USB port, it will not launch automatically.

### Note

Even though Apple CarPlay is set to Off, connecting a device and touching the Projection icon on the home screen will display the following pop up message: 'While active, Apple CarPlay will be displayed on this screen'.

## Android Auto

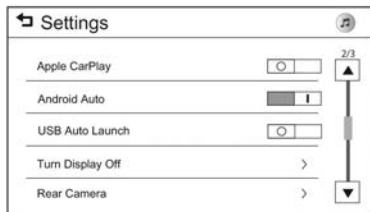

1. Select **Android Auto** on or off.
- On with USB Auto Launch set to On: If you connect an Android phone through the USB port, it will launch automatically.

- On with USB Auto Launch set to Off: If you connect an Android phone through the USB port, the Android Auto icon will appear on the Home screen.
- Off (default): If you connect an Android phone through the USB port, it will not launch automatically.


### Note

Even though Android Auto is set to Off, connecting a device and touching the Projection icon on the home screen will display the following pop up message:

'While active, Android Auto will be displayed on this screen'.




## USB auto launch

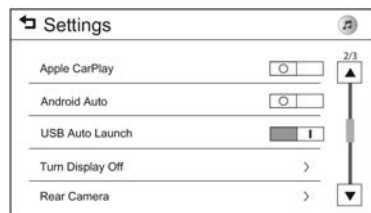

1. Select **USB Auto Launch** on or off.
- On (default) with Apple CarPlay and Android Auto Off: If you connect the device through the USB port, it will automatically launch USB audio.
- On (default) with Apple CarPlay and Android Auto On: If you connect the device through the USB port, it will automatically launch Phone Projection.
- Off: If you connect the device through the USB port, it will not be launched automatically.


## Turn display off

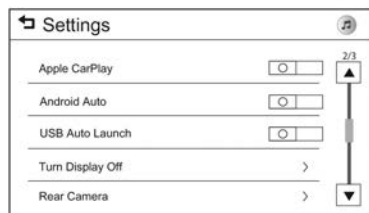

1. Touch **Turn Display Off** to turn the display off.
- Press any button or touch the screen to turn the display back on.

## Rear camera

1. Touch **Rear Camera**.

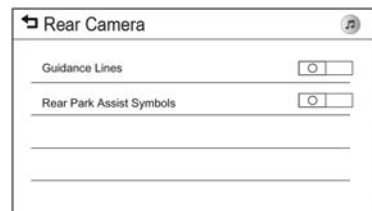


- **Guidance Lines:** Select to turn the display guidance lines on or off.
- **Rear Park Assist Symbols:** Select to display the rear park assist symbols on or off.



## Return to factory settings


1. Touch **Return to Factory Settings**.

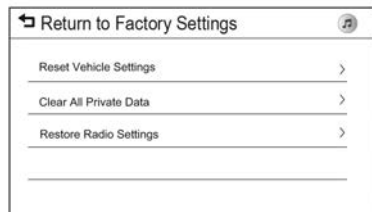

- Reset all vehicle settings:  
Restores all vehicle settings.
- Clear All Private Data: Clears all private data from the system.
- Restore Radio Settings:  
Restores all radio settings.

## Software information

1. Touch **Software Information**.

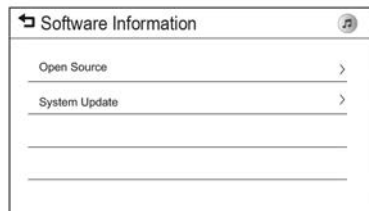

- Open Source: Display Open Source Software licensing information.
- System Update: Update the system.



## Climate control

### Air conditioning system..... 137

Controls .....	137
Temperature .....	137
Fan speed .....	137
Air distribution .....	138
Windscreen demister .....	138
Air recirculation system .....	138
Air conditioning.....	139

### Air vents ..... 140

Adjustable air vents.....	140
Fixed air vents.....	140

### Maintenance..... 141

Pollen/dust filter.....	141
Air conditioning regular operation .....	141

## Air conditioning system

### Controls



1. Temperature
2. Fan speed
3. Air distribution
4. Air recirculation
5. Air conditioning

### Danger

Do not sleep in a vehicle with the air conditioning or heating system on. It may cause serious harm or death due to a drop in the oxygen level and/or body temperature.


### Temperature

Rotate the temperature switch:

**Red:** warm

**Blue:** cold






### Fan speed

Rotate the fan speed switch  to the desired speed, between **0** and **4**.






## Air distribution

Select an air outlet by rotating the switch. Air is directed:


- : to the instrument panel vents
- : to the instrument panel vents and floor vents
- : to the floor vents. A small amount of air is directed to the windscreen and side vents
- : between the windscreen and floor vents and some to the side vents
- : to the windscreen with a small amount of air directed to the side vents

## Windscreen demister



1. Rotate the temperature switch to the desired temperature.
2. Press .
3. Rotate the fan speed switch  to the desired speed.
4. Rotate the air distribution switch to .

### Note

If air conditioning is not required, rotate the air distribution switch to .

## Air recirculation system



1. Press .



### Warning

Driving with recirculation mode on for a prolonged period of time can make you sleepy. Periodically switch to outside air mode for fresh air.


The exchange of fresh air is reduced in air recirculation mode. In operation without cooling, the air humidity increases, so the windows may mist up. The quality of the passenger compartment air deteriorates, which may cause the vehicle occupants to feel drowsy.

## Air conditioning


The air conditioning system cools and dehumidifies (dries) the intake air, therefore condensation may form and drip from under the vehicle.

If no cooling or drying is required, switch the cooling system off to save fuel.

Even though the air conditioning is turned on, the vehicle will produce warm air if the air temperature switch is in the red area.

1. Turn the ignition on.
2. Rotate the temperature switch to the desired setting.
3. Press .
4. Rotate the fan speed switch to the required speed.
5. Rotate the air distribution switch to the required setting.




To turn the air conditioning system off:

1. Rotate the fan speed switch  to 0.

## Maximum cooling



Use maximum cooling for quick cooling of the passenger compartment.


1. Turn the ignition on.
2. Rotate the temperature switch to cold air.
3. Press .
4. Rotate the fan speed switch  to 4.
5. Push .



## Air vents


### Adjustable air vents

The instrument panel centre and side vents can be adjusted up or down and left or right.

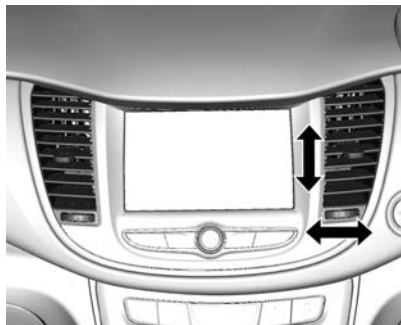

Centre air vent volume may be controlled by turning the adjuster wheel under the vent.

To close the vent completely, turn the wheel fully to the left.

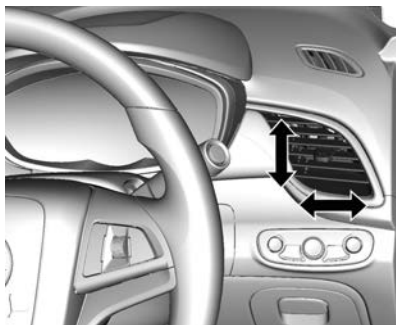

Side air vent air flow may be closed by sliding the vent adjuster fully outboard.

#### Note

At least one air vent must be open while the air conditioning is on.

#### Warning

Do not attach objects to the vents.  
Damage or injury may occur.


### Fixed air vents

Fixed air vents are located beneath the windscreen, front door windows and in the footwells.



## Maintenance

### Air intake

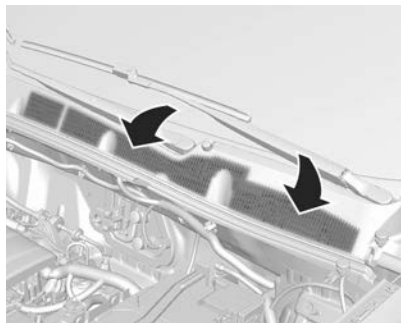

Outside air is drawn into the vehicle through the opening between the bonnet and the windscreen.

Keep the area clear of debris.

### Pollen/dust filter

The passenger compartment air filter filters contaminants such as pollen and dust from entering the vehicle.

#### Caution

Have the passenger compartment air filter replaced if driving frequently on dusty and unpaved roads or polluted areas.

### Air conditioning regular operation

To ensure efficient performance, switch the cooling on for a few minutes once a month, even in winter.

#### Note

Cooling is not possible when the outside temperature is low.



# Driving and operating

## Driving information ..... 142

Before entering the vehicle ..... 142

Before driving off ..... 142

## Starting and operating ..... 143

New vehicle running-in ..... 143

Brakes ..... 143

Ignition positions ..... 143

Starting the engine ..... 145

Retained Accessory Power (RAP) ..... 147

Parking ..... 147

Engine exhaust ..... 148

## Automatic transmission..... 149

Selecting a gear ..... 149

Fault ..... 152

## Manual transmission..... 153

## Brakes..... 154

Antilock Brake System (ABS)... 155

Park brake ..... 155

Brake assist..... 156

Hill Start Assist (HSA) ..... 156

## Ride control systems ..... 156

Traction Control System (TCS)..... 156

Electronic Stability Control (ESC) ..... 157

Descent Control System (DCS) ..... 158

Cruise control ..... 159

## Object detection systems.. 160

Park Assist (PA)..... 160

Rear Vision Camera (RVC) ..... 162

Side Blind Zone Alert (SBZA)... 165

## Fuel ..... 167

Refuelling ..... 170

## Towing ..... 171

Trailer towing..... 171

Trailer recommendations..... 172

# Driving information

## Before entering the vehicle

Check that windows, mirrors and lamps are clean.

Visually check tyre inflation. Check tyre pressures weekly.

## Before driving off

1. To ensure pedal travel is uninhibited, there must be no loose mats in the area of the pedals. *Floor mats* ⇨ 219
2. Close and secure all doors.
3. Position the seat for comfortable driving.
4. Adjust rear view mirrors.
5. Fasten seat belts.
6. Check that warning lights and indicators illuminate when turning the ignition on.  
*Warning lights, gauges and indicators* ⇨ 64



## Starting and operating

### New vehicle running-in

Use the following precautions to improve performance:


- Do not make full throttle starts.
- Avoid downshifting to brake or slow the vehicle.
- Avoid hard stops except in emergencies. This will allow your brakes to bed in properly.
- Avoid hard stops except in emergencies to avoid premature wear and early replacement of brakes.
- Avoid heavy acceleration and prolonged high speed driving to avoid damage to the engine and to conserve fuel.
- Do not tow any other vehicle.

### Brakes

- Do not let the vehicle run down hills, or coast with the engine off, as the power assistance does not operate.
- Ensure there are no obstructions which could limit brake pedal use.
- Continuous or heavy use of brakes will shorten the life of the brake pads.

### Ignition positions

#### Vehicles with ignition switch

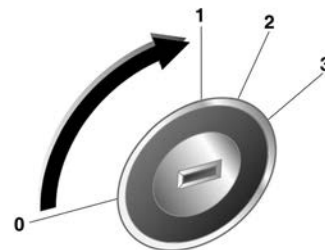

#### Warning

Do not turn the engine off while the vehicle is moving as there will not be any power assist for brakes or steering.

Never remove the key while the vehicle is moving, as this will lock the steering.



**0. LOCK:** The key can only be inserted and removed from this position.

**1. Ignition Accessory:** When the key is in this position, the audio system operates.

**2. Ignition On:** When the key is in this position, the engine is ready to start and all electrical systems are active.

**3. Engine Start:** Turn the key to this position and release when the engine is running.

### Caution

Do not leave the key in positions 1 or 2 for a long time, unless the engine is running, otherwise the vehicle's battery will discharge.

### Vehicles with electronic key



The electronic key must be inside the vehicle.

**Accessory power mode:** press the Engine Start/Stop button once without operating the brake pedal.

The yellow LED in the button illuminates. The steering wheel lock is released and some electrical functions are operable; the ignition is off.

**Ignition on power mode:** press and hold the Engine Start/Stop button for 6 seconds without operating brake pedal.

The green LED in the button illuminates. Control indicators illuminate and most electrical functions are operable.

**Engine Start:** depress the brake pedal and press the Engine Start/Stop button once. Release the button after the starting procedure begins.

**Ignition Off:** press the Engine Start/Stop button briefly in each mode or when engine is running. Some functions remain active until the driver's door is opened.

**Emergency shut off during driving:** Press the Engine Start/Stop button for longer than two seconds or press twice briefly within five seconds

### Steering wheel lock

The steering wheel lock activates automatically when:

- the vehicle is stationary,
- the ignition has been switched off, and
- the driver's door is opened.



To release steering wheel lock:


- Open and close driver's door and switch on accessory mode or start the engine directly.

### **Warning**

If the vehicle battery is discharged, the vehicle must not be flat-towed or push started as the steering wheel lock cannot be disengaged.

## Starting the engine

### Vehicles with ignition switch

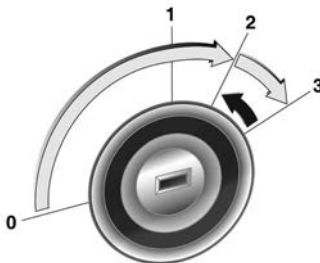

1. Apply the park brake firmly.
2. Turn the key to position 1 while moving the steering wheel slightly to release the lock.

Manual transmission: Push the clutch pedal to the floor and move the shift lever to the neutral position.

Automatic transmission: Move the shift lever to **P** or **N**.

Do not operate the accelerator pedal.

3. Turn the key to position 3.

4. Release the key when the engine is running.

Before restarting or to switch the engine off, turn key back to position 0.


### **Caution**

Do not keep the key in position 3 for more than 10 seconds.

If the engine does not start, wait 10 seconds before trying again.



### Vehicles with electronic key system

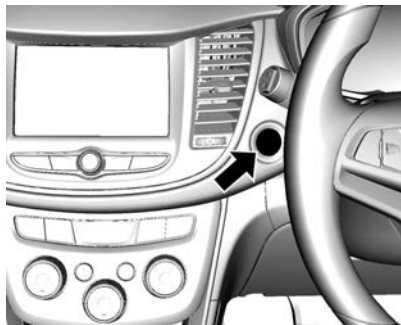

1. Apply the park brake firmly.
2. Move the shift lever to the park or neutral position.
3. Depress the brake pedal, and for manual transmission also depress the clutch pedal. Do not operate the accelerator pedal.
4. Press and release Engine Start/Stop button. An automatic procedure operates the starter with a short delay until the engine is running.

Before restarting, or to switch off the engine, press Engine Start/Stop button once more.


#### Note

- Do not depress the accelerator pedal while starting the engine.
- Do not subject the engine to full throttle acceleration or high speeds until it has reached normal operating temperature. Premature engine wear or damage may result.

### Starting the engine with a low transmitter battery

If the electronic key battery is weak or the electronic key fails, the Driver Information Centre may display 'No remote detected', when you try to start the vehicle.

*Vehicle messages* ⇨ 78

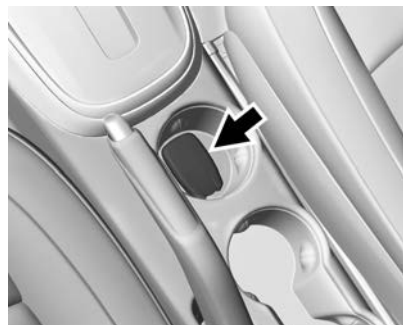

1. Place the electronic key in the centre console front cup holder.
2. Depress the brake pedal, and for manual transmission also depress the clutch pedal, and press the Engine Start/Stop button.



3. To switch off the engine, press the Engine Start/Stop button again.
4. Remove the electronic key from the transmitter pocket.

This option is intended for emergencies only. Replace the electronic key battery as soon as possible.

*Radio remote control* ⇨ 18

## Retained Accessory Power (RAP)

### Retained power off

The following electrical systems operate for 10 minutes after the ignition is switched off:

- Power windows.
- Power outlets.
- Infotainment system.

The infotainment system can be turned back on.

Once the driver's door is opened after the ignition is switched off, the:


- power windows operate for approximately 45 seconds, and
- the infotainment system will turn off but can be turned back on.

## Parking

1. Apply the park brake firmly without pushing the release button.
2. Automatic transmission: Select position **P**.  
Manual transmission: If facing uphill or on flat ground, select 1st gear. If facing downhill, select reverse gear.

On an uphill slope, turn the front wheels away from the kerb.

On a downhill slope, turn the front wheels towards the kerb.

3. Shut all windows.
4. Turn the ignition off and for vehicles with ignition switch, remove the key.
5. Press  on the key to lock all doors.

*Keys and locks* ⇨ 16



**⚠ Warning**

Be careful where you park or drive. As with any vehicle, do not park or operate the vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

Exhaust gases are hazardous, especially if they concentrate in closed rooms.

Never leave the engine running in an enclosed space such as a closed garage or underground car park.

**Engine exhaust****⚠ Danger**

Engine exhaust gases contain poisonous carbon monoxide, which is colourless and odourless and could be fatal if inhaled.

If exhaust gases enter the interior of the vehicle, open the windows. Have the cause of the fault repaired by a Holden Dealer.

Avoid driving with an open tailgate, otherwise exhaust gases could enter the vehicle.

**Catalytic converter**

The catalytic converter reduces the amount of harmful substances in the exhaust gas.

**Caution**

Use of low quality fuel or fuel with too low an octane number may damage the engine, the catalytic converter or electronic components.

Unburnt petrol will overheat and damage the catalytic converter. Therefore avoid excessive use of the starter, running the fuel tank dry and starting the engine by pushing or towing.

If the engine misfires, runs unevenly, engine performance is reduced or other problems occur, contact a Holden Dealer as soon as possible.

In an emergency, drive for a short period, keeping the vehicle and engine speed low.



## Automatic transmission

The automatic transmission allows manual gear shifting (manual mode) or automatic gear shifting (automatic mode).

The automatic transmission is an electronically controlled six-speed transmission. Sixth gear is overdrive.

### Warning

Do not press the accelerator pedal while shifting from **P** or **N** to **R** or a forward gear.

Use **D** as much as possible.

Never shift to **P** or **R** while the vehicle is in motion.

When stopping on an uphill grade, do not hold the vehicle in place by pressing the accelerator pedal. Use the brake pedal.

Press the brake pedal when shifting from **P** or **N** to **R** or a forward gear.

## Selecting a gear

1. Press the brake pedal while moving the shift lever to either the **R**, **D** or **M**.

### Warning

Do not shift between **D** and **R** or **P** while the vehicle is moving.

2. Release the park brake and the brake pedal.
3. Slowly press the accelerator pedal.

## Transmission display



The selected gear or transmission mode is displayed on the instrument cluster.



### Shift lever



- P:** (park) In park position, the front wheels are locked. Select **P** only when the vehicle is stationary and the park brake is applied.
- R:** (reverse) Place in reverse only when the vehicle is stationary.
- N:** (neutral)
- D:** (drive) Used for general driving. Allows the transmission to be shifted into any of the six forward gears.
- M:** (manual) *Manual mode* ⇨ 151

### Caution

Do not accelerate while engaging a gear.

Never depress the accelerator pedal and brake pedal at the same time.

When a gear is engaged, the vehicle slowly begins to creep when the brake is released.

Do not use the **P** (park) position in place of the park brake.

Turn off the engine, apply the parking brake and remove the ignition key when leaving the vehicle.


Never leave the vehicle unattended while the engine is running.

### Shifting between gear positions



Movement between certain gear positions requires pressing the release button on the shift lever and/or depressing the brake pedal.



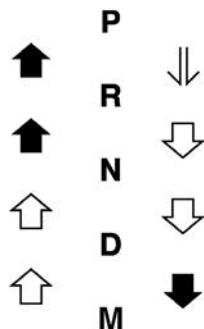

Follow the descriptions as indicated by the arrows when moving the shift lever.



Press the release button to select a gear.




Depress the brake pedal and press the release button to select a gear.



Shift freely to select a gear.

### Manual mode

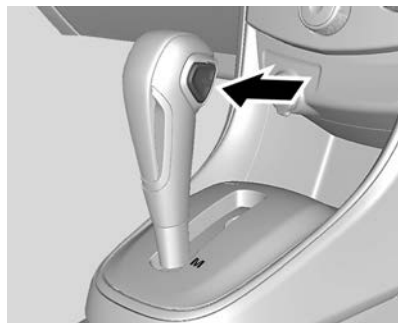

1. Move the shift lever to position **M**.
2. Press the gear shift button on the side of the shift lever:

**+**: shift up gear

**-**: shift down gear

### Note

- To maintain the required levels of vehicle performance and safety, certain gearshifts may not occur when in manual mode.
- Downward shifts are made automatically when the vehicle slows down.
- When the vehicle stops, first gear is automatically selected.

### Engine braking

To utilise the engine braking effect, select a lower gear when driving downhill.

### Warning

Do not downshift by two or more gear positions at one time.


### Note

Use of engine compression during long mountainous descents may prolong the life of your brakes.



**Parking**

1. Press the brake pedal.
2. Select position **P**.
3. Pull the park brake lever up firmly.
4. Remove the ignition key.

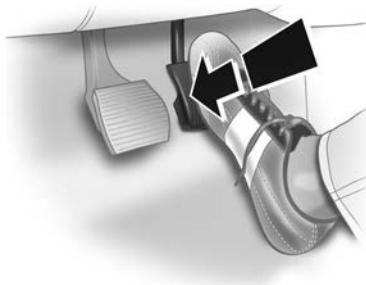**Kickdown**

For faster acceleration:

1. Press the accelerator pedal all the way down and hold.  
The transmission shifts to a lower gear depending on the engine speed.

**Neutral idle control**


The vehicle may have neutral idle control.

This feature is designed to reduce fuel consumption when idling and stationary.

When idling in a forward gear while the brake pedal is pressed, the transmission switches into neutral.

When the brake pedal is released, the transmission switches back to the selected forward gear.

**Fault**

In the event of a fault,  illuminates. The transmission no longer shifts automatically or manually because it is locked in a certain gear.

Contact a Holden Dealer.

**Interruption of power supply**

If the power supply is interrupted, the shift lever cannot be moved out of position **P**.

If the battery is discharged, start the vehicle using jump leads.

*Jump starting* ⇨ 210

If the battery is not the cause of the fault, release the shift lever.



### Release shift lever

Before shifting out of **P**:


1. Turn the ignition on.
2. Press the brake pedal to the floor.

If you cannot shift out of **P** with the ignition on and the brake pedal pressed:

3. Turn the ignition off.
4. Press and hold the brake pedal.
5. Pull up on the park brake lever.




6. Remove the cap on the centre console with a thin object such as a flat-blade screwdriver.

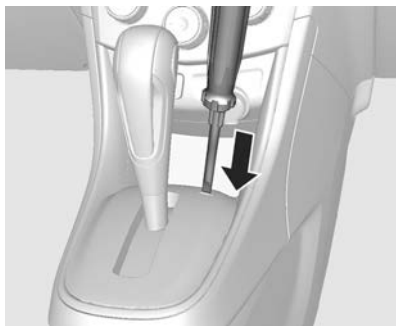

7. Press the screwdriver into the slot. The ignition key can if a screwdriver is not available.
8. Move the shift lever to **N**.
9. Remove the screwdriver from the slot.
10. Replace the cap.
11. Have the vehicle repaired by a Holden Dealer as soon as possible.

### Manual transmission

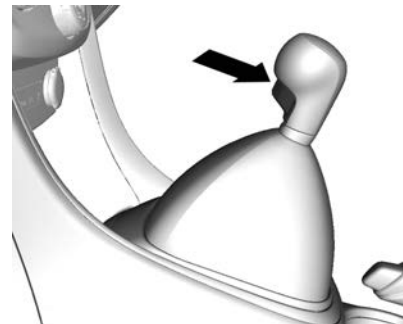

Select reverse gear while the vehicle is stationary:

1. Press the clutch pedal to the floor.
  2. Wait 3 seconds.
  3. Pull the button of the front of the shift lever up.
  4. Move the shift lever to position **R**.
- If the gear does not engage:

1. Return the shift lever to neutral.
2. Release the clutch pedal.
3. Push the clutch pedal again and repeat gear selection.



- Do not engage reverse gear while the vehicle is moving.
- Ensure the clutch pedal is completely pushed to the floor.
- Do not use the pedal as a foot rest.

**Caution**

Do not drive with your hand resting on the shift lever.

**Brakes**

The brake system comprises two independent brake circuits.

If one brake circuit fails, the vehicle can still be braked using the other brake circuit. However, braking effect is achieved only when the brake pedal is pressed firmly. Considerably more force is needed for this.

The braking distance is extended. Contact a Holden Dealer.

**Caution**

Do not drive with your foot resting on the brake pedal. This will accelerate wear of the brake components and cause the brakes to become overheated.

**⚠ Warning**

After driving through deep water, washing the vehicle or using the brakes excessively such as when descending a steep hill, the brakes can temporarily lose their stopping power. This may be due to wet brake components or overheating.

Shift to a lower gear when going down hills. Do not continuously apply the brakes.

To dry out the brakes:

- Ensure there is a clear area ahead.
- Lightly apply the brakes.
- Maintain a slow forward speed until performance returns to normal.



## Antilock Brake System (ABS)

The ABS:

- Continuously monitors the vehicle's braking system preventing the wheels from locking up.
- Allows maximum braking effort while full steering control is retained, even in the event of panic braking.

### Warning

Do not let this special safety feature tempt you into taking risks when driving. Traffic safety can only be achieved by adopting a responsible driving style. You should always adjust the vehicle's speed to suit road and traffic conditions. Always maintain an adequate distance to the vehicle in front of you.

## Operation

ABS operation is noticeable by pulsing of the brake pedal and the noise of the regulation process.

The initial self-check may also be audible.


Keep the brake pedal fully pressed throughout the braking process, without pumping it.

### Caution

If there is a malfunction with the ABS, the vehicle's brake system remains operational, but without ABS assistance. Have a Holden Dealer check the system as soon as possible.

*Antilock Brake System (ABS)  
warning light ⇨ 69*

## Park brake

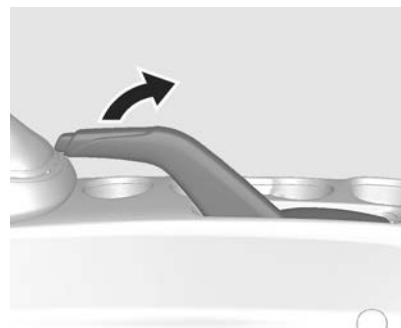

Applying the park brake:

1. Pull the lever straight up firmly, without pushing the release button.

Releasing the park brake:

1. Pull the lever slightly upwards.
2. Push in the release button on the top of the lever and lower the lever all the way down.

### Warning

Never drive the vehicle with the park brake applied.



## Brake assist

If the brake pedal is pressed quickly and forcefully, maximum brake force is automatically applied (full braking).

Maintain steady pressure on the brake pedal for as long as full braking is required. Maximum brake force is automatically reduced when the brake pedal is released.

## Hill Start Assist (HSA)

The HSA system assists in preventing rollback when driving off, while on an incline.

1. Release the brake pedal.
2. Press the accelerator pedal.

The brakes remain on for approximately 2 seconds.

## Ride control systems

### Traction Control System (TCS)

TCS improves driving stability when necessary, regardless of the type of road surface or tyre grip, by preventing the driving wheels from spinning.

As soon as the driving wheels start to spin, engine output is reduced and the wheels are braked individually. This considerably improves the driving stability of the vehicle on slippery road surfaces.

TCS is activated as soon as the ignition is turned on.

#### Warning

Do not let this special safety feature tempt you into taking risks when driving.

Adapt speed to the road conditions.

## Operation




TCS can be deactivated when spinning of drive wheels is required:

1. Press 

 illuminates

To reactivate TCS:

1. Press  again

TCS is also reactivated the next time the ignition is turned on.

*Traction Control System (TCS)  
off light ⇨ 70*



## Electronic Stability Control (ESC)


The ESC:

- Improves driving stability in any driving situation.
- Assists in maintaining vehicle stability when the vehicle's grip level is exceeded such as a sudden lane change, slippery or unexpected road conditions.
- Alters engine power and/or braking on specific wheels, improving the vehicle's steering control and power delivery, on wet or slippery roads, particularly on snow and ice.

### Warning

Do not let this special safety feature tempt you into taking risks when driving. Traffic safety can only be achieved by adopting a responsible driving style. The vehicle's speed should always be adjusted to suit road and traffic conditions.

### Activation

- The ESC is automatically switched on each time the engine is started.
- When ESC is active  illuminates.


*Electronic Stability Control (ESC) light* ⇄ 70


### Deactivation



In certain circumstances, it may be helpful to deactivate ESC.

1. Press  for several seconds.

 illuminates on the instrument cluster.

ESC is reactivated by pressing  again.

### Note

ESC may only be deactivated below approximately 50 km/h. If deactivated, ESC will reactivate above approximately 50 km/h.





## Descent Control System (DCS)

The DCS system:

- Is only for driving down steep grades.
- Works in conjunction with the ABS to maintain the slow speed descent of the vehicle.
- Is designed for off road driving when moving over steep gradients.
- May malfunction if used unnecessarily - do not use DCS when driving on normal roads.
- When activated, causes strong vibrations and noise from the brake system.

### Activation



- Press  below 40 km/h.  
 illuminates green on the instrument cluster indicating DCS is ready for use.



### Operation

DCS operates,  flashes, when :

- The vehicle speed is between 6 and 35 km/h.
- The vehicle is on a steep gradient.
- The accelerator and brake pedals are NOT pressed.


### Deactivation

DCS deactivates when:

-  is pressed and  extinguishes on the instrument cluster.
- The vehicle exceeds 60 km/h.



## Cruise control

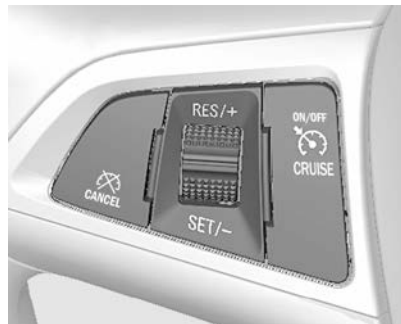

The cruise control:

- Maintains the vehicle's speed without pressure on the accelerator pedal.
- Will only operate at speeds above approximately 40 km/h.
- Controls are located on the passenger's side of the steering wheel.




### Warning

Do not use the cruise control when road or driving conditions require varying speeds. A consistent speed isn't practical in heavy, varying traffic or on winding, slippery or rough roads.

The cruise control does not apply the vehicle's brakes. Therefore the vehicle may gain speed when going down steep hills.

When climbing steep hills it is possible for the vehicle to lose speed. You may need to switch off the cruise control and use the accelerator pedal.

## Setting cruise control

1. Press .  
 illuminates white.
2. Accelerate to the desired speed (above 40 km/h).
3. Rotate the wheel towards **SET/-** and release.  
 illuminates green.
4. Take your foot off the accelerator pedal.

## Increasing set speed

1. Rotate the wheel towards **RES/+** and hold it.  
The vehicle will accelerate.
2. Release the wheel at the desired speed.
3. Rotate the wheel towards **RES/+** and release it immediately.  
The speed will increase by 1-2 km/h.



### Decreasing set speed

1. Rotate the wheel towards **SET/-** and hold it.  
The vehicle will decelerate.
2. Release the wheel at the desired speed.
3. Rotate the wheel towards **SET/-** and release it immediately.  
The speed will decrease by 1-2 km/h.

### To temporarily accelerate

When the cruise control is on:

1. Press the accelerator pedal.

#### Note


Increasing speed will not interfere with cruise control operation or change the set speed.

To return to the set speed:

1. Take your foot off the accelerator pedal.

### Temporary deactivation

Do one of the following:

- Press .
- Reduce vehicle speed below approximately 40 km/h.
- Press the brake pedal or press the clutch pedal.

 illuminates white.



### Resume stored speed

When the cruise control has a desired speed previously set:

1. Press **RES/+**.


The most recently set speed will automatically resume.

### Deactivation

1. Press .
-  extinguishes.

## Object detection systems

### Park Assist (PA)

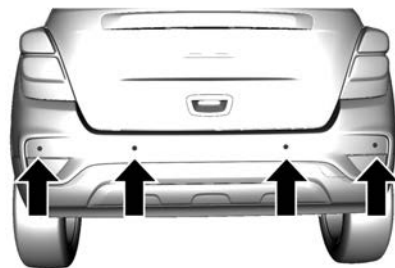

The PA system is able to detect and indicate obstacles at the rear of the vehicle when reversing.

The system consists of four sensors on the rear bumper.



**⚠ Warning**

The driver is always responsible for taking care and attention while manoeuvring the vehicle. The PA is only an aid and is neither intended to, nor able to take over any responsibility.

The park sensors may not be able to detect all objects under every condition e.g. objects too close to the vehicle, objects above or below the sensors, or objects with a surface that absorbs ultrasonic waves. Additionally, some ambient conditions like ultrasonic waves or heavy rain can cause disruptive reflections from an object's surface. Such objects may not be detected.

Always manoeuvre the vehicle slowly to allow yourself sufficient time to react. The warning tones may not sound if the vehicle's speed is above 10 km/h.

**Activation**

The system is activated automatically when:

- The ignition is turned on.
- Reverse gear is selected.

**Alarm tones**

- Alarm tones sound when an object is detected.
- The interval between the alarm tones becomes shorter as the vehicle gets closer to an object.
- When the distance is less than 40 cm, the alarm tones sound continuously.
- If the vehicle stops, the alarm tones will stop after approximately 3 seconds.

**Deactivation**

The PA is deactivated automatically when:

- Reverse gear is deselected.
- A fault occurs in the system.

The PA can also be deactivated by adjusting the collision/detection settings for use with a tow bar and trailer.

To adjust the collision/detection settings.

- Park Assist - Off - PA is deactivated at all times.
- Park Assist - On - PA is deactivated automatically if a trailer lighting plug is connected.
- Park Assist - On with Towbar - The PA has an allowance for a fitted tow bar. The alarm tones will sound earlier when reversing towards objects. The PA is deactivated automatically if a trailer lighting plug is connected.

*Vehicle personalisation* ⇨ 86



**Fault**

If a fault occurs, **P**  illuminates:

- Move the vehicle with care.
- Check and clean the sensors.

**Notes on operation**

- The alarm tones differ depending on the objects detected.
- If the sensors receive other ultrasonic signals e.g. metallic sounds or exhaust brake noise from heavy commercial vehicles, the system may not work properly.
- The system may not activate if the sensors are frozen or covered with dirt.
- Clean dirty sensors with a soft sponge and clean water.
- Do not push or scratch the surface of the sensors.
- Do not hit or direct high pressure water directly at the sensors as they may be damaged.

- The system may not recognise sharp objects, thick clothes or other materials which absorb ultrasonic waves.
- The system may not operate correctly when the vehicle is driven over uneven surfaces.

**Rear Vision Camera (RVC)**

The rear vision camera (RVC) system is designed to assist the driver when reversing by displaying a view of the area behind the vehicle.

The RVC cannot display objects:

- Close to the corners of the vehicle.
- Forward of the camera.
- Higher than the camera.

**Note**

- The distance of the objects seen on the display differs from the actual distance.
- The area displayed depends on the road condition and vehicle orientation.



### Warning

Never rely solely on the rear vision camera when reversing the vehicle. There are blind spots that cannot be sensed by the camera.

The rear vision camera is not intended to replace the driver's judgment or attention toward the rear of the vehicle when reversing.

Before entering the vehicle, always check the area around the vehicle is clear of obstacles and people.

Always perform head checks and use the vehicle's mirrors when reversing.


If the vehicle sustains any damage in the area of the rear vision camera, the camera may become misaligned. Contact a Holden Dealer.

### Activation

When the ignition key is in the ON position and the vehicle is shifted into R (Reverse), the rear vision camera image is displayed on the infotainment display.



Once the vehicle is shifted out of R, the infotainment system display returns to the previous screen.
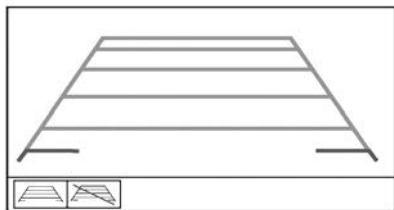
### Guidelines



When the camera image is displayed, dynamic guidelines are also displayed to assist with reversing the vehicle.

The trajectory lane of the vehicle is shown in accordance with the steering angle.

- Touch  to hide the guidelines.
- Touch  to show the guidelines.

### Warning

The driver is always responsible for taking care and attention while manoeuvring the vehicle. The camera display and guidelines are only an aid and are neither intended to, nor able to take over any responsibility.

Guidelines and PA symbols can also be turned on or off; *Settings* ⇨ 132

### Rear Cross Traffic Alert (RCTA)

On vehicles with RCTA, a triangle with an arrow may display on the screen to warn of traffic coming from either direction.

RCTA detects objects approaching from up to 20 metres from the left or right side, behind the vehicle.



When an object is detected, three beeps sound from the left or right side, depending on the direction of the detected vehicle.

**Note**

The PA and RCTA symbols appear and may cover an object when viewing the infotainment screen when an object is detected by the PA or RCTA system.

RCTA can be turned on or off.

*Vehicle personalisation* ⇨ 86

**Camera location**

The camera is located on the tailgate.

**Cleaning**

The lens requires regular cleaning to ensure optimum performance.

Use only a soft cloth, mild soap and water.

**⚠ Warning**

Do not use abrasive cleaners or scouring pads as they could scratch the lens, impairing the systems performance.

Always keep the camera lens free from dirt, snow or ice. Only use mild soap and water with a soft cloth to clean the lens.

**If the system does not operate properly**

The rear view camera may not operate properly or display a clear image if:

- The rear view camera or the guidelines are turned off.

*Settings* ⇨ 132

- It is dark.
- The sun or headlight beams are shining directly into the camera lens.
- Ice, snow, mud, or anything else covers the camera lens.
- There are extreme temperature changes.
- The rear of the vehicle is damaged. The position and mounting angle of the camera can change or the camera can be affected. Have the camera and its position and mounting angle checked at a Holden Dealer.



## Side Blind Zone Alert (SBZA)

The vehicle may have Side Blind Zone Alert (SBZA).

SBZA is a lane-changing aid that assists drivers avoiding crashes that occur with moving vehicles in the side blind zone (or spot) areas.


The SBZA warning display will light up in the corresponding outside side mirror and will flash if the turn signal is on.

### Warning

SBZA does not alert the driver to vehicles rapidly approaching outside of the side blind zones, pedestrians, bicyclists, or animals. It may not provide alerts when changing lanes under all driving conditions.

Failure to use proper care when changing lanes may result in injury, death, or vehicle damage. Before making a lane change, always check mirrors, glance over your shoulder, and use the turn signals.

### SBZA detection zones

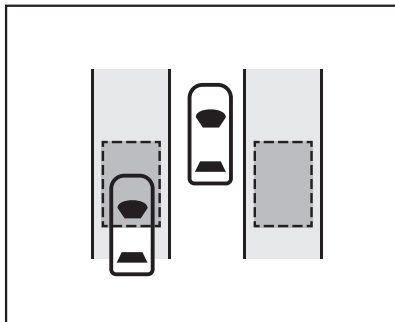

The SBZA sensor covers a zone of approximately one lane over from each side of the vehicle, or 3.5 metres. The height of the zone is approximately between 0.5 metre and 2 metres from the ground.

The zone starts at approximately the middle of the vehicle and continues rearward 5 metres.



### How the system works

The SBZA symbol illuminates in the side mirrors when the system detects a moving vehicle in the next lane that is in the side blind zone.

This indicates it may be unsafe to change lanes.

Before making a lane change, check the SBZA display, check mirrors, glance over your shoulder, and use the turn signals.

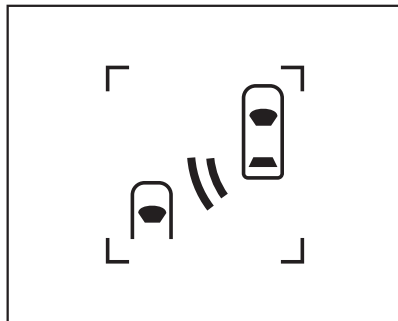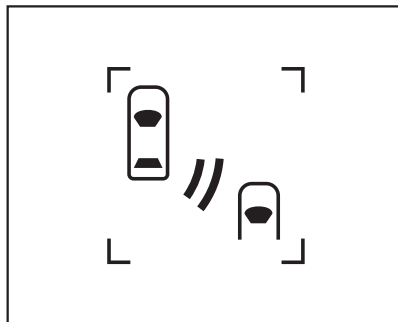

**Left Side Mirror Display****Right Side Mirror Display**

When the engine is started, both outside mirror SBZA displays will briefly illuminate to indicate the system is operating.

When the vehicle is in a forward gear, the left or right side mirror display will light up if a moving vehicle is detected in that blind zone. If the turn signal is activated in the same direction as a detected vehicle, this display will flash as an extra warning not to change lanes.

SBZA can be disabled.

*Vehicle personalisation* ⇨ 86

If SBZA is disabled by the driver, the SBZA mirror displays will not illuminate.

**When the system does not seem to work properly**

SBZA displays may not come on when passing a vehicle quickly, for a stopped vehicle, or when towing a trailer. The SBZA detection zones that extend back from the side of the vehicle do not move further back when a trailer is towed.

Use caution while changing lanes when towing a trailer.

SBZA may alert to objects attached to the vehicle, such as a trailer, bicycle, or object extending out to either side of the vehicle. This is normal system operation.

SBZA may not always alert the driver to vehicles in the side blind zone, especially in wet conditions. The system does not need to be serviced.

The system may light up due to guardrails, signs, trees, shrubs, and other non-moving objects. This is normal system operation.

SBZA may not operate when the SBZA sensors in the left or right corners of the rear bumper are covered with mud, dirt, snow, ice, or slush, or in heavy rainstorms.

*Appearance care* ⇨ 216



If the DIC displays a system unavailable message after cleaning the rear corners of the vehicle, contact a Holden Dealer.

If the SBZA displays do not light up when vehicles are in the blind zone and the system is clean, the system may need service. Contact a Holden Dealer.

When SBZA is disabled for any reason other than the driver turning it off, the Side Blind Zone Alert On option will not be available on the personalisation menu.

*Vehicle personalisation* ⇨ 86

## Fuel

### Danger

#### EXHAUST WARNING – CARBON MONOXIDE POISONING

Exhaust gases can produce carbon monoxide, a dangerous gas, which can cause unconsciousness and even death to both humans and animals.

Gases could be inhaled if the exhaust system on your vehicle is faulty.

To protect against exhaust gases entering the vehicle, the exhaust system and body should be inspected:

- Each time the vehicle is serviced.
- Whenever a change is noticed in the sound of the exhaust system.
- Whenever the exhaust system, underbody or rear of the vehicle is damaged.

Take the vehicle to a Holden Dealer if you think the vehicle needs inspecting for any of the above reasons.

Do not sit (or leave children or pets) in a parked vehicle for any extended period of time with the engine running. Do not run the engine in an enclosed area (such as the garage) any longer than is needed to move the vehicle.

Driving with the tailgate open is not recommended. If you must travel with the tailgate open, close all windows, ensure the climate controls are set to outside (rather than recirculate) with air directed to the face and the fan on the highest speed. Do not exceed 50 km/h.



**⚠ Warning****FUEL**

Fuel is extremely flammable and highly explosive.

Always switch off the engine of the vehicle and any mobile phones when refuelling.

Do not smoke or allow open flames or sparks near the vehicle when refuelling.

If fuel fumes are detected while driving, the cause should be found and corrected without delay by a Holden Dealer.

**Caution****FUEL ADDITIVES**

Various additives are used in the formulation of good quality fuel and the use of supplementary additives in fuel is not required unless specified by Holden.

Under no circumstances should fuel containing the manganese additive known as MMT (methyl cyclopentadienyl manganese tricarbonyl) be used, as this additive is known to cause contamination of catalytic converters, spark plugs and the malfunction of On-Board-Diagnostic (OBD) systems. The use of fuel additives that are not recommended by Holden may affect your New Vehicle Voluntary Warranty to the extent that Holden considers the additives affect the specifications and quality of the vehicle.

**Caution****USE OF FUEL  
CONTAINING ETHANOL**

When purchasing such fuel, we recommend the vehicle be operated on fuel containing no more than 10% ethanol.

Under no circumstances should fuel containing more than 10% ethanol be used. Use of such fuels may result in engine malfunction, starting and operating difficulties and materials degradation. These adverse effects could result in permanent damage to the vehicle and personal injury. It is also important to note that when ethanol blends are used, fuel consumption can be expected to increase due to the lower energy content of ethanol.



The use of fuel containing more than 10% ethanol may also affect your New Vehicle Warranty to the extent that Holden considers the fuel affects the specifications and quality of your vehicle.

The use of any fuel, other than the fuel specified below, may seriously damage the vehicle and may void the warranty. Only clean fuel of good quality should be used.

### Fuel type

Use clean, unleaded petrol of regular 91 Research Octane Number (RON) rating or higher.

Use of Premium unleaded petrol (95 RON or higher) on the 1.8 L engine, may provide a small improvement in engine response and fuel economy.

Use of Premium unleaded petrol (95 RON or higher) on the 1.4 L engine will provide noticeable improvement to engine response especially during high ambient temperatures.

Purchasing your fuel from a reputable fuel retailer may reduce the risk of purchasing fuel which contains abnormal fuel properties.

### Caution

Use of fuel with too low an octane rating could lead to uncontrolled combustion and engine damage.

Equivalent standardised fuels with an ethanol content of max. 10% by volume may be used.




## Refuelling

Always fill the fuel tank at the intermediate or fast fill rate. Do not add any more fuel after the fuel filler first clicks off or fuel blows back. This allows room for the fuel to expand inside the tank.

Wipe off any overflowing fuel immediately from the vehicle.


Replace the fuel cap and close the fuel opening then spray or splash with water.

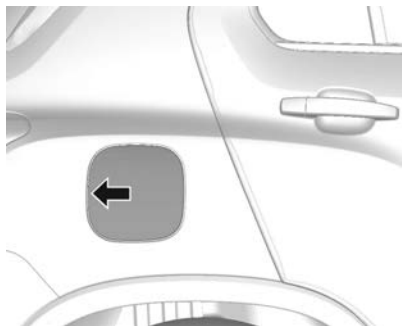


The fuel filler door is located on the driver's side of vehicle, at the rear.

1. Stop the engine.



2. Press .
3. Press on the rear edge of the fuel filler door and open the door.
4. Rotate the fuel filler cap slowly, anticlockwise.

If a hissing sound is heard, wait for it to stop before completely unscrewing the cap.

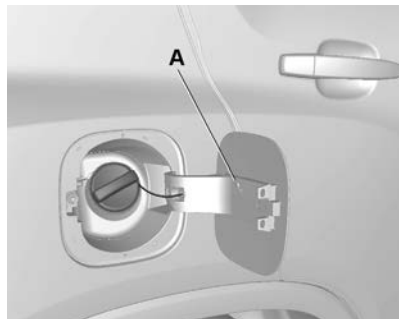

5. Remove the cap.  
The cap is tethered to the hinge.
6. Hook the cap over (A) while refuelling.
7. After refuelling, close cap.
8. Rotate the cap clockwise until it clicks.
9. Push the fuel filler door closed until it latches.

### Note

If in cold weather the fuel filler door does not open, tap the door lightly.



## Towing

### Trailer towing

The word trailer is used throughout this section and includes all types of towed vehicles, such as caravans, boat trailers or any other special purpose trailer.

### Towing

Handling, durability and economy may be affected by towing a trailer.

For recommended and mandatory towing equipment; *Towing and loading equipment* ⇨ 173

A Holden Dealer will assist with supply and installation of towing equipment.

### Maximum towing capacities (kg) – braked trailer

	Automatic	Manual
	1,200	1,200

**Note** The maximum unbraked towing capacity for all vehicles is 500 kg.

### Overloading

Never exceed the loads given for the towing equipment fitted to the vehicle.


All mandatory equipment must be fitted, otherwise you may void the New Vehicle Warranty, to the extent that Holden considers the overloading or missing equipment to have affected the specifications or quality of the vehicle.

*Towing and loading equipment*  
⇨ 173




**⚠ Warning**

Holden towing equipment is recommended where it is available. Where it is not available, no recommendation is made as to the make of equipment which should be used. Holden will not accept liability for defects occurring in towing equipment not marketed by Holden or for defects in the vehicle arising from the use of such equipment or for loss or injury caused by use of such equipment. The use of such equipment may void your New Vehicle Voluntary Warranty, to the extent that Holden considers the non-recommended equipment affects the specifications or quality of your Holden vehicle. It is inadvisable to mix and match different brands of towing equipment, as equipment is usually designed as an integrated package.

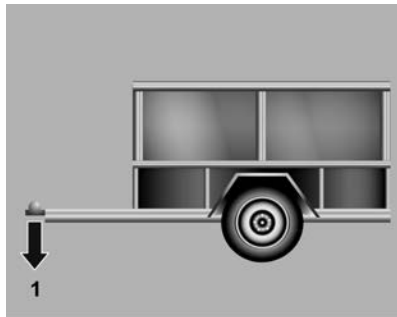**Trailer recommendations**

A trailer hitched to a vehicle places a weight on the tow bar. This weight is called the tow bar ball weight or tow ball load (1).

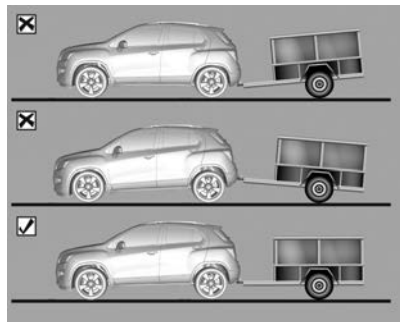

- For single axle trailers, the tow ball load should be 10% of the loaded trailer weight. For heavy trailers with more than one axle, the tow ball load should be 5 % - 10 % of the loaded trailer weight.
- Adjust by moving items forwards or backwards within the trailer, to change the balance.
- Check the tow ball load before coupling the trailer to the towing vehicle.



- Axle loads must not be exceeded when the tow ball load is included.

*Axle loads* ⇨ 225

- If maximum axle loads are exceeded, weight should be removed from the rear of the vehicle and transferred onto the trailer.

- Do not exceed the maximum towing capacities specified.

*Maximum towing capacities (kg) – braked trailer* ⇨ 171

- Do not exceed the total front or rear axle loads specified.

*Axle loads* ⇨ 225

## Towing and loading equipment

Tow load	Mandatory equipment
Up to 1,200 kg	Holden 1,200 kg rated tow bar
	Holden trailer wiring harness
	Brakes on the trailer if the aggregate trailer mass (ATM) is more than 500 kg

## Towing precautions

- When heavily loading the vehicle or when towing, inflate tyres to the maximum recommended pressure.  
*Tyre placard* ⇨ 200
- Tighten the tow ball retaining nut to 140 Nm (Newton metres) and check the torque frequently.
- Vehicles handle differently when towing. Take a couple of short distance trips with the trailer before taking a long trip.

- Have the vehicle and trailer correctly maintained and serviced, with particular attention given to the brakes, tyres, suspension, wheel bearings, towing coupling and lighting.
- Use an extended-arm mirror on both sides of the vehicle if necessary.
- Headlamps may need re-aiming after the loaded trailer has been hitched.
- Use a lower gear and the brakes, when descending steep hills.
- Ensure the tow bar does not obscure the rear number plate. Remove the tow bar tongue when not required for towing.



- If a tow bar is removed, have any mounting holes in the underbody sealed to prevent entry of exhaust fumes, dust and water.
- The Park Assist (PA) settings can be adjusted to automatically deactivate when a trailer lighting plug is connected to the vehicle.  
*Park Assist (PA)* ⇨ 160

### **Trailer brakes**

- Trailer brakes are mandatory on trailers weighing 500 kg and over when loaded.
- Consult the appropriate regulatory body in your State or Territory for the legal requirements of trailer brakes.

### **Running-in when towing**

It is recommended that a new vehicle be driven for at least 1,500 km before towing.

If towing is necessary before this, do not exceed 80 km/h. This also applies if the vehicle is fitted with a new or reconditioned engine, transmission or rear axle.

### **Vehicle maintenance**

More frequent vehicle maintenance is required when using the vehicle to tow. Refer to the Service & Warranty Booklet in the vehicle's glove box.



# Vehicle care

## General information ..... 176

Emission information ..... 176

Emission control system ..... 176

Vehicle storage ..... 177

## Vehicle checks ..... 177

Doing your own service work ... 177

Bonnet ..... 178

Engine compartment  
overview ..... 180

Engine oil ..... 182

Automatic transmission fluid .... 184

Engine air filter ..... 184

Engine coolant ..... 184

Washer fluid ..... 185

Brake/clutch fluid ..... 186

Battery ..... 187

## Bulb replacement ..... 188

Headlamps ..... 188

Front turn signal lamps ..... 190

Tail lamps, turn signals, stop  
lamps and reverse lamps ..... 190

Number plate lamp ..... 192

Interior lamps ..... 193

## Electrical system ..... 193

Fuses ..... 193

Engine compartment fuse  
box ..... 194

Auxiliary relay box ..... 195

Instrument panel fuse box ..... 196

Rear compartment fuse box .... 197

## Vehicle tools ..... 198

Tools ..... 198

## Wheels and tyres ..... 199

Tyre and rim condition ..... 199

Tyre pressure ..... 199

Tyre placard ..... 200

Tread depth ..... 200

Tyre rotation ..... 201

Buying new tyres ..... 201

Tyre chains ..... 202

Tyre sealant and  
compressor kit ..... 202

Tyre changing ..... 206

## Jump starting ..... 210

## Towing ..... 213

Towing the vehicle ..... 213

Towing another vehicle ..... 215

## Appearance care ..... 216

Exterior care ..... 216

Interior care ..... 218

Floor mats ..... 219



## General information

Where specified, use only Holden genuine parts and accessories.

## Emission information

The emission control systems are designed to reduce the amount of hydrocarbons (HC), carbon monoxide (CO), and oxides of nitrogen (NOx) that are emitted from the engine and fuel system into the atmosphere. HC and NOx, when exposed to sunlight under certain conditions, contribute to photochemical smog. In addition, CO is toxic when it becomes highly concentrated in the air.

## Emission control system

Major emission control systems the vehicle may have are:

1. Evaporative emission control system. This system is designed to prevent the escape of fuel vapour from the fuel system and

recycle the vapours through the normal combustion process.

2. Crankcase emission control system. This system is designed to prevent blow-by gases from escaping into the atmosphere and recycle them through the combustion process.
3. Exhaust emission control system. The various components of this system operate collectively to limit HC, CO and NOx emissions in the exhaust gas. The exhaust emission control system consists of components including electronic control of spark, fuel and idle speed. In addition vehicles have a catalytic converter and closed loop mixture control system.

It is recommended that service and repair to fuel or emission systems be carried out by a Holden Dealer.

## Owner responsibility

The engine, engine control system and exhaust system of the vehicle must NOT be modified in any way.

### Warning

Any person who removes, modifies or hinders any part of the emission control system may be contravening Australian Design Rules. It is also illegal to drive a vehicle modified in this way.

## Maintenance requirements

Have the vehicle serviced at the frequency shown in the Maintenance schedule, in the Service & Warranty Booklet.

It is recommended that servicing be carried out by a Holden Dealer who will maintain the vehicle's emission control system as per the Service & Warranty Booklet.



## Vehicle storage

If the vehicle is to be stored for several months:

- Wash and wax the vehicle.
- Clean and preserve rubber seals.
- Change engine oil.
- Drain the washer fluid reservoir.
- Check coolant and corrosion protection.
- Adjust the tyre pressure to the value specified for a full load.
- Park the vehicle in a dry, well ventilated place.
- Engage first or reverse gear to prevent the vehicle from moving.
- Do not apply the park brake.
- Open the bonnet, close all doors and lock the vehicle.

Disconnect the clamp from the negative terminal of the vehicle battery.


Close the bonnet.

Before returning the vehicle to the road:

- Connect the clamp to the negative terminal of the vehicle battery.  
Check the power windows operation.
- Check the tyre pressures.
- Fill the washer fluid reservoir.
- Check the engine oil level.
- Check the coolant level.

## Vehicle checks

### Doing your own service work

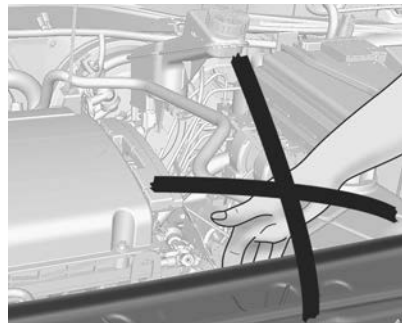

#### **Warning**

Do not touch engine compartment components when the ignition is on.

#### **Note**

The cooling fan may still operate when the ignition is off.



## Bonnet


### Opening



1. Pull the release lever rearwards.
2. Return the lever to its original position.



3. Push the safety catch towards the passenger's side and open the bonnet.

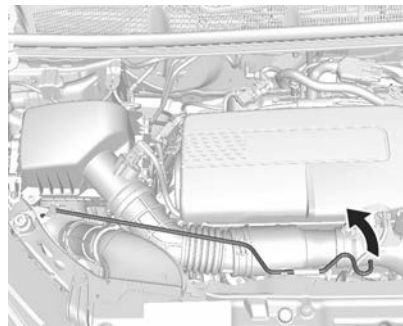

4. Pull up the support rod away from the holder.
5. Secure on the driver's side of the bonnet.



## Closing


### Warning

To avoid injury and/or damage to the vehicle, check each time, before the bonnet is closed, the contact area is unobstructed.

1. Place the support rod into the holder.
2. Lower the bonnet and allow it to drop into the catch.
3. Check the bonnet is engaged.

### Warning

If while driving you notice the bonnet has not been properly closed, pull the vehicle over to the side of the road at the earliest possible moment and close the bonnet correctly.

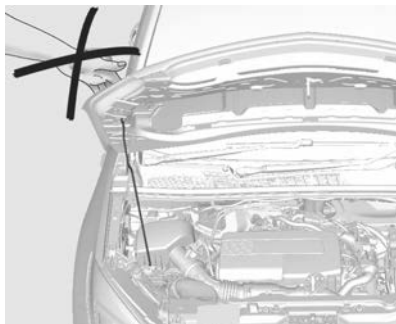


### Note

Do not pull down on the bonnet when the bonnet is supported by the rod.



## Engine compartment overview


### 1.4L engine

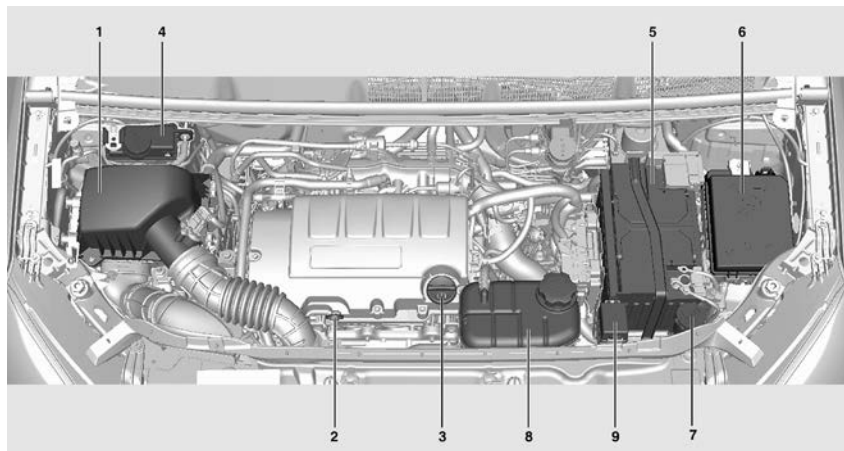

1. Engine air filter ⇨ 184
2. Engine oil dipstick.  
*Checking oil level* ⇨ 182
3. Engine oil filler cap.  
*Adding engine oil* ⇨ 183
4. Brake & clutch fluid reservoir.  
*Brake/clutch fluid* ⇨ 186
5. Battery ⇨ 187
6. Engine compartment fuse box.  
*Fuses* ⇨ 193
7. Windscreen washer fluid reservoir. *Washer fluid* ⇨ 185
8. Engine coolant reservoir.  
*Engine coolant* ⇨ 184
9. Auxiliary fuse box. *Fuses* ⇨ 193



## 1.8L engine

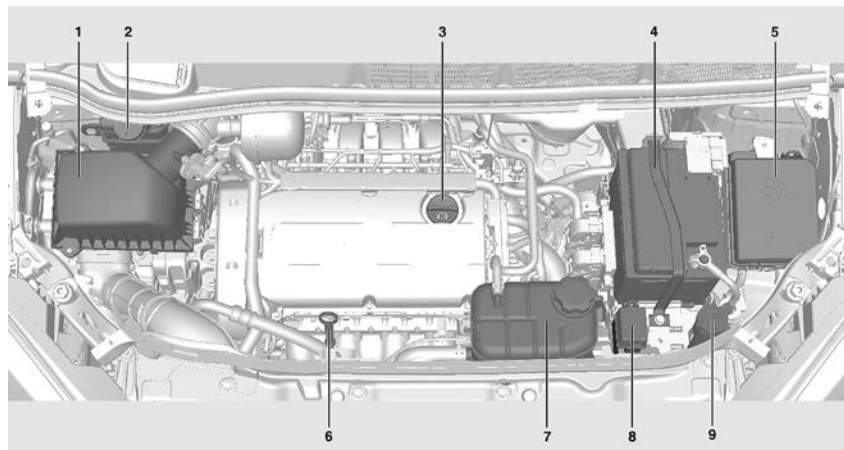


1. Engine air filter ⇨ 184
2. Brake & clutch fluid reservoir.  
*Brake/clutch fluid* ⇨ 186
3. Engine oil filler cap.  
*Adding engine oil* ⇨ 183
4. Battery ⇨ 187
5. Engine compartment fuse box.  
*Fuses* ⇨ 193
6. Engine oil dipstick.  
*Checking oil level* ⇨ 182
7. Engine coolant reservoir.  
*Engine coolant* ⇨ 184
8. Auxiliary fuse box. *Fuses* ⇨ 193
9. Windscreen washer fluid reservoir. *Washer fluid* ⇨ 185




## Engine oil

### Checking oil level

- Check the engine oil level before a long journey.
  - The engine must be at operating temperature and the ignition turned off for at least 10 minutes.
1. Park the vehicle on a level surface.
  2. Remove the dipstick and wipe clean.
  3. Insert the dipstick to the stop on the handle.

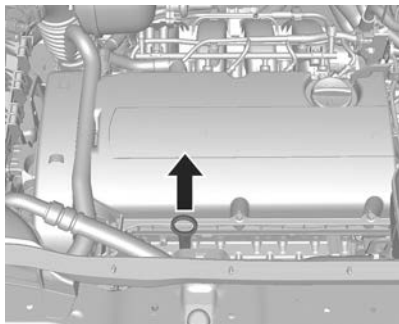

4. Remove and read the oil level.

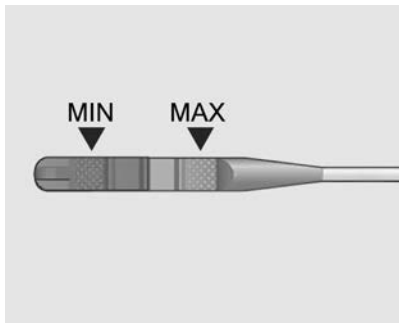

The level should be at the **MAX** mark. Add oil if the level is at the **MIN** mark.

5. Insert the dipstick to the stop on the handle.

### Note


The engine oil level must not exceed the **MAX** mark on the dipstick.

For correct engine oil specification, *Recommended fluids, lubricants and parts* ⇨ 221



## Adding engine oil

Capacities ⇨ 225

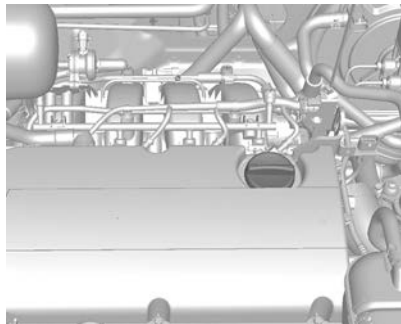

The engine oil filler cap is located on the top of the engine.

1. Rotate the engine oil filler cap anticlockwise and remove.
2. Add enough oil to reach below the **MAX** mark on the dipstick.
3. Check the level on the dipstick and add further oil if necessary.

The engine oil must not exceed the **MAX** mark on the dipstick.

### Caution

Overfilled engine oil must be drained or suctioned out.

4. Replace the engine oil filler cap tightly by rotating clockwise.

### Note

Non-detergent and other low quality oils, the use of break-in oil, tune up compounds, friction reducing compounds and other supplemental additives are not recommended.

### ⚠ Danger

Engine oil is an irritant and if ingested, can cause illness or death.

Keep out of reach of children.

Avoid repeated or prolonged contact with skin.

Wash exposed areas with soap and water or hand cleaner.

Be careful when draining the engine oil as it may be hot.

## Engine oil change intervals

Refer to the Service & Warranty Booklet and also refer to;


*Engine oil life system* ⇨ 220



## Automatic transmission fluid

Automatic transmission fluid does not normally require servicing unless the vehicle is operated under certain conditions. Refer to the Service & Warranty Booklet.

## Engine air filter

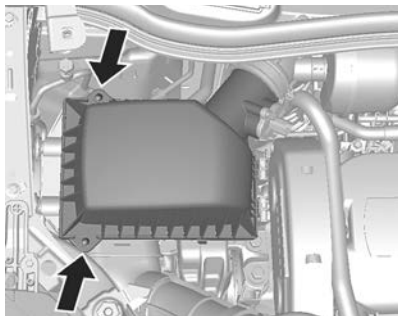

1. Unscrew both screws.
2. Loosen the cover hinges.
3. Open the cover.
4. Replace the air filter.
5. Lock the cover with the cover hinges and screws.

### Caution

Do not operate the vehicle without the air filter installed. Engine damage may occur.

**Note** The appearance may differ between engines.

## Engine coolant

### Engine coolant level


Check the coolant level at least once a week.

### Checking coolant level

#### Warning

Do not remove the radiator cap if the engine and radiator are still hot. Scalding fluid and steam can be blown out under pressure which could cause serious burns.



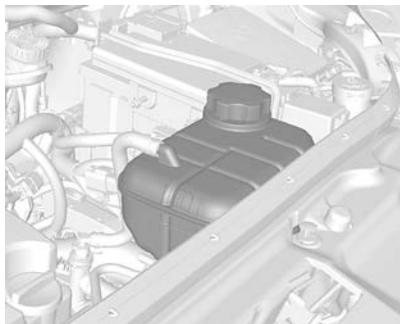

If the cooling system is cold, the coolant level should be above the line on the coolant reservoir.

### Adding coolant

#### Caution

If the coolant level is too low, engine damage may occur.

Do not spill coolant on the vehicle's exterior surfaces as it can damage the paintwork. If you do, wash it off immediately.

#### Note

Use only approved coolant.

*Recommended fluids, lubricants and parts ⇨ 221*

1. Turn the ignition off.
2. Remove the coolant reservoir cap.
3. Add the required amount of coolant.
4. Replace the cap securely.

If the coolant requires regular topping up, contact a Holden Dealer.


#### ⚠ Warning

Avoid repeated or prolonged contact with coolant.

Wash off with soap and water.

Keep out of reach of children.

### Washer fluid

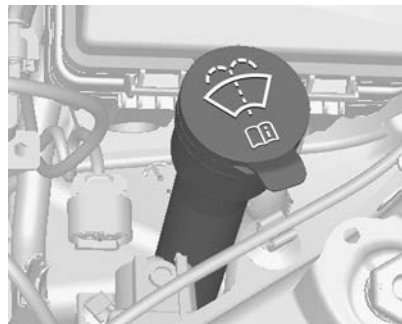

Check the fluid level weekly.

### Adding washer fluid

1. Lift the front of the cap up.

Use the correct amount of washer fluid additive. Refer to a Holden Dealer.

Do not use ordinary soap or detergent as they froth up and damage the wiper rubbers.

2. Secure the cap.



## Brake/clutch fluid


### Warning

Brake fluid is poisonous and corrosive and will damage the paint finish of the vehicle if spilt.

### Caution

Avoid contact with eyes and skin. Wash any affected area immediately.

## Checking fluid level

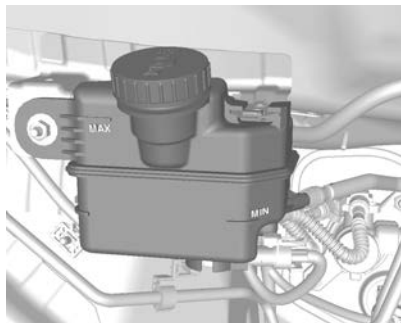

The level should be between the **MIN** and **MAX** area.

If the fluid level is correct, do not remove the reservoir cap, as brake fluid exposed to the atmosphere will quickly absorb moisture.

## Adding brake fluid

*Recommended fluids, lubricants and parts ⇨ 221*

1. Turn the ignition off.
2. Wipe the sides of the cap clean.
3. Rotate the brake/clutch fluid reservoir cap anticlockwise and remove.
4. Top up with the recommended brake fluid.

### Warning

Using brake fluid other than GM recommended brake fluid may cause corrosion to components of the braking system and reduced braking performance.

Use only new brake fluid. Use of old, used or inferior brake fluid may endanger the functioning of the brake system.

5. Secure the cap and clean up any spilt fluid.

If the brake/clutch fluid requires regular topping up, contact a Holden Dealer immediately.

### Caution

Do not dispose of used brake fluid with household waste. Use the local, authorised waste management facility.



## Battery

### Warning

Batteries emit an explosive gas mixture which may be ignited. Therefore, you should keep sparks and flames away from the battery at all times. Never smoke near a battery.

Batteries contain sulphuric acid. If acid contacts skin or clothing, flush immediately with plenty of water. In case of eye contact, flush with plenty of water and contact a doctor immediately. Battery acid also damages paint and fabrics. To minimise damage, wash off immediately.

Keep batteries out of the reach of children.

Take care with all metal objects and tools including items you may wear (for example jewellery, rings and metal watch bands) near battery terminals.

The vehicle battery is maintenance free.

### Battery replacement

For battery location; *Engine compartment overview* ⇨ 180

For replacement, refer to a Holden Dealer or authorised repairer.

### Caution

Do not dispose of batteries with household waste.

Use the local, authorised waste management facility.

### Battery disconnection

The battery may discharge if the vehicle is not used for approximately four weeks.

To disconnect the battery:

1. Turn the ignition off.
2. Disconnect the clamp from the negative terminal of the vehicle battery.

Ensure the ignition is turned off before reconnecting the vehicle battery.

For emergency starting when the battery is flat; *Jump starting* ⇨ 210



## Bulb replacement

Contact a trained service technician if unsure about the bulb replacement process.

When replacing bulbs:

- Turn the ignition off and remove the key.
- Turn off related switches.
- Fit bulbs of the specified wattage only.
- Do not touch bulbs or reflectors with bare hands.
- Clean stained bulbs with methylated spirits.


### Bulbs to be changed by a Holden Dealer

- Side turn signal lamps.
- Centre High Mounted Stop Lamp (CHMSL).
- Fog lamps.
- LED Daytime running lamps.
- LED Tail lamps.

### Caution

Condensation may temporarily appear on the inside of exterior lamp lenses after rain or washing the vehicle. Condensation occurs when there is a temperature difference between the inside and outside of the lamp allowing a fine mist on the inside surface of the lamp lens. This condensation will disappear when the vehicle is in a dry environment or the lamp is on. If water does collect in the lamp contact a Holden Dealer.

## Headlamps

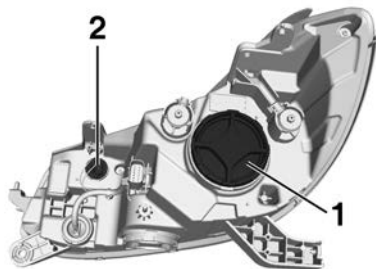


1. Low and high beam headlamp
2. Front turn signal lamp




## Low and high beam


1. Open the bonnet. *Bonnet* ⇨ 178

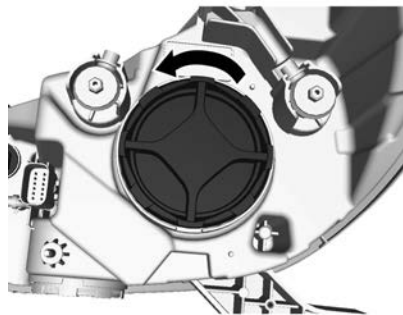

2. Remove the headlamp bulb cover by rotating anticlockwise.

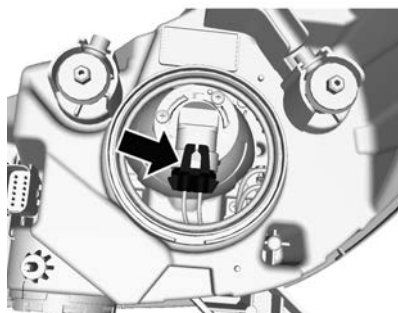

3. Disconnect the wiring harness connector from the bulb.

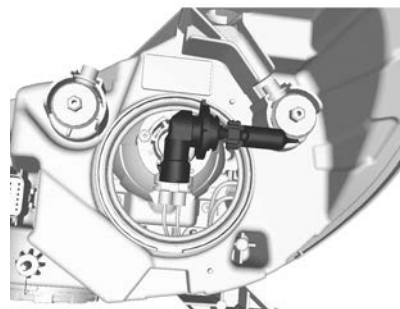


4. Turn the bulb anticlockwise and pull straight back from the headlamp.
5. Install a new bulb into the headlamp and rotate clockwise.
6. Reconnect the wiring harness connector.
7. Fit the headlamp bulb cover in position and close by rotating clockwise.
8. Check lamp operation.




## Front turn signal lamps

1. Open the bonnet. *Bonnet* ⇨ 178

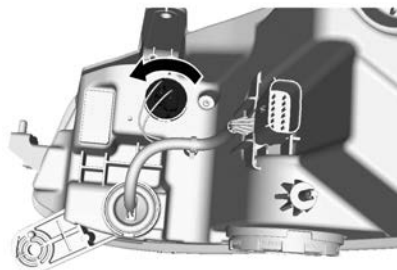


2. Remove the turn signal lamp bulb by rotating anticlockwise.

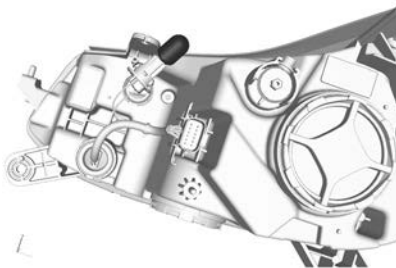

3. Remove the bulb from the bulb holder by pulling straight out.
4. Install a new bulb into the bulb holder.
5. Reinstall the bulb holder into the headlamp assembly by rotating clockwise.
6. Check lamp operation.


## Tail lamps, turn signals, stop lamps and reverse lamps

### Type 1

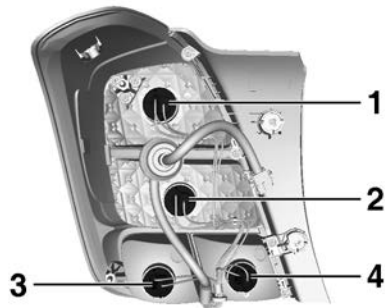

1. Tail / stop lamp
2. Tail lamp
3. Rear turn signal lamp
4. Reverse lamp

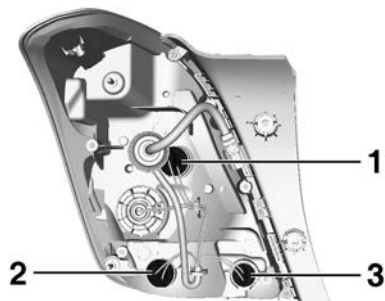

**Type 2**

1. Stop lamp
2. Rear turn signal lamp
3. Reverse lamp


**Note**

Tail lamp is LED, see a Holden Dealer.

1. Open the tailgate.




2. Disengage the two screw covers and remove the two screws securing the tail lamp assembly.
3. Remove the tail lamp assembly by pulling it straight back until the two lugs disengage from their grommets.

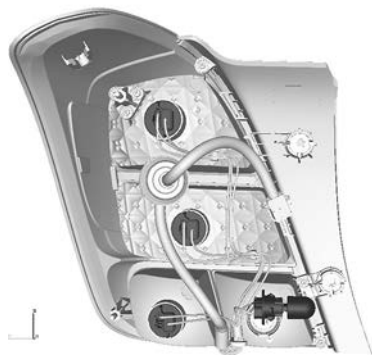**Type 1**




## Type 2

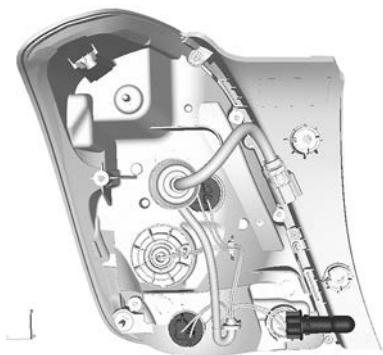

4. Remove the desired bulb holder by rotating anticlockwise.
5. Remove the bulb from the bulb holder and replace the bulb.
6. Reinstall the bulb holder into the tail lamp assembly by rotating clockwise.
7. Install the tail lamp assembly, tighten the screws and fit the screw covers.
5. Check operation of all lamps.

## Number plate lamp

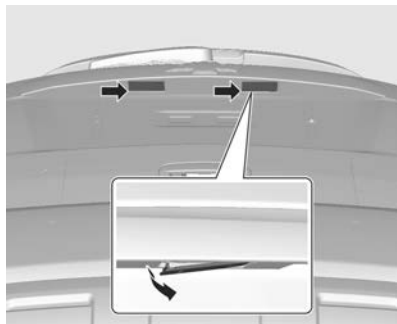

1. Using a flat-blade screwdriver, prise the lamp housing downwards.
2. Remove the lamp housing by pulling downwards.  
Do not pull on the cable.
3. Rotate the bulb holder anticlockwise to disengage.
4. Remove the bulb from the bulb holder and replace the bulb.
5. Insert the bulb holder into the lamp housing and rotate clockwise.

6. Reinstall the lamp housing and secure.
7. Check lamp operation.



## Interior lamps


### Courtesy lamps

1. To remove the lamp, carefully prise the opposite side of the lamp to the switch using a flat-blade screwdriver.

**Note** Be careful not to scratch the lamp.

2. Remove the bulb and replace.
3. Reinstall the lamp assembly.
4. Check lamp operation.

### Load compartment lamp

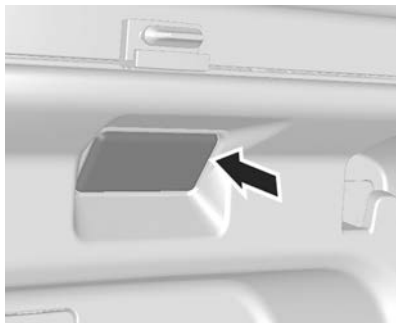

1. Using a flat-blade screwdriver, prise the lamp assembly outwards.
2. Remove the bulb and replace.
3. Reinstall the lamp assembly firmly into place.
4. Check lamp operation.

## Electrical system

### Fuses

#### **Warning**

Turn off the ignition (LOCK position) and any electrical equipment before changing a fuse.

- Replace blown fuses promptly.
- A blown fuse can be recognised by its melted wire.
- Do not replace the fuse until the cause of the fault has been remedied.
- Some functions are protected by several fuses.



## Fuse extractor

A fuse extractor is located in the fuse box in the engine compartment.

Place the fuse extractor on the top or side of the fuse to extract the fuse.

Replace the fuse cover securely after use.


### Warning

When replacing a fuse be sure to use a fuse of the specified amperage.

Never install a wire or similar as it could damage electrical components and cause a fire.


Any improper alterations to the electrical system may cause a fire hazard and engine damage. To maintain your own safety and that of the vehicle, have any work involving the electrical system or the replacement of high current fuses or relays carried out by a Holden Dealer.

## Engine compartment fuse box

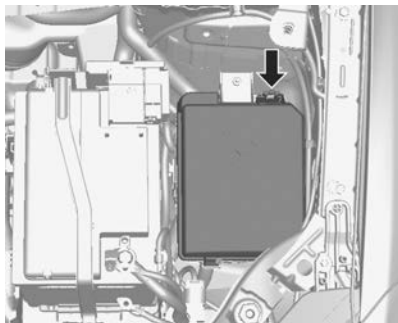

The fuse box is located in the engine compartment.

To disengage the cover, lift upwards and remove.

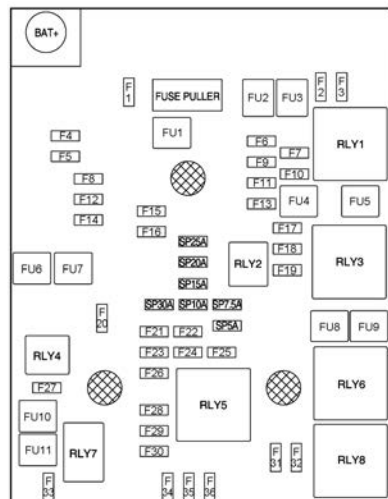

### Note

Not all fuse box descriptions may apply to your vehicle.



## Fuses


F1	Sunroof
F2	OSRVM SW, Rain Sensor, PWR Window Driver
F3	Canister Vent Solenoid
F4	–
F5	EBCM Valve
F6	IBS
F7	ESCL
F8	TCM FICM
F9	AOS Module
F10	HDLP Leveling SW, HDLP Leveling MTR LH/RH, Rear Vision Camera ISRVM
F11	Rear Wiper
F12	RR WDW Defog
F13	PWR Lumbar
F14	OSRVM Heat
F15	FSCM
F16	Heated Seat Module
F17	Compass Module, TIM DC/DC Converter FSCM R/C
F18	ECM R/C, TCM R/C, FICM R/C
F19	Fuel Pump
F20	–
F21	Fan RLY (AUX BEC)
F22	–
F23	Ignition Coil, Injector Coil
F24	Washer Pump
F25	HPLP Levelling Auto LH/RH
F26	EMS Var-1
F27	–

F28	–
F29	ECM PT IGN-1, IGN-2
F30	EMS Var-2
F31	High Beam LH
F32	High Beam RH
F33	ECM B+
F34	Horn
F35	A/C Clutch
F36	Front Fog Lamp
FU1	EBCM Pump
FU2	FRT Wiper
FU3	Blower
FU4	IEC R/C
FU5	–
FU6	–
FU7	–
FU8	Cooling Fan Low/Mid
FU9	Cooling Fan High
FU10	EVP
FU11	Starter SOL
SP	Spare Fuses

## Relays

1. Run Crank
2. Fuel Pump
3. Cooling Fan Mid
4. –
5. PT Relay
6. Cooling Fan High
7. Starter
8. Cooling Fan Low

## Auxiliary relay box

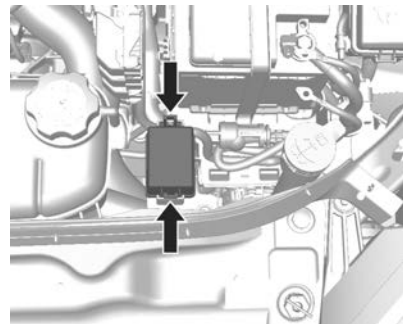


The auxiliary relay box is located in the engine compartment.

To disengage the cover, lift upwards and remove.


### Note

Not all relay box descriptions may apply to your vehicle.

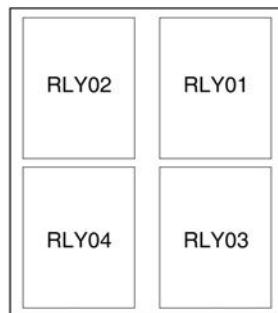

**Relays**

- |    |                      |
|----|----------------------|
| 01 | Electric Vacuum Pump |
| 02 | Cooling Fan 1        |
| 03 | Cooling Fan 2        |
| 04 | —                    |

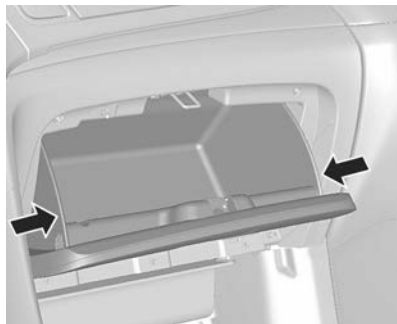**Instrument panel fuse box**

The instrument panel fuse box is located behind the glove box.


To access the fuse box:

1. Open the glove box.
2. Squeeze the top outer edges of the glove box towards the centre and lower downwards.
3. Release the damper on the left side of the glovebox.

To replace the glove box:

1. Connect the damper on the left side of the glovebox.

2. Raise the glove box and push upwards to secure.
3. Close the glove box.

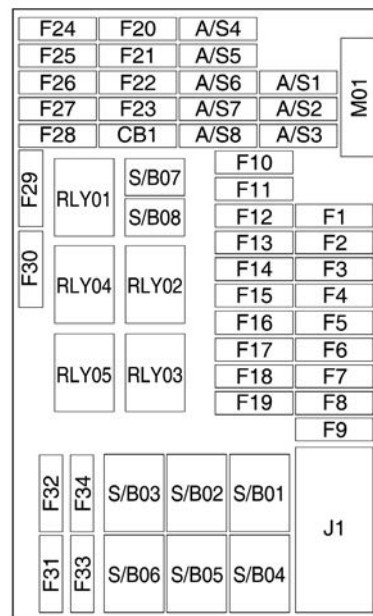



**Note**

Not all fuse box descriptions may apply to your vehicle.


**Fuses**

F1	BCM 1
F2	BCM 2
F3	BCM 3
F4	BCM 4
F5	BCM 5
F6	BCM 6
F7	BCM 7
F8	BCM 8
F9	DLIS
F10	SDM B+
F11	DLC
F12	HVAC MDL
F13	L/GATE RLY
F14	CGM
F15	LDW Gentex
F16	—
F17	ESCL
F18	PAS/SBZA
F19	BCM RVC
F20	Clock Spring
F21	APO AC/PRNDL
F22	APO DC FRT
F23	—
F24	—
F25	OnStar
F26	EVP
F27	IPC PTC RLAD

F28	TRLR Feed2
F29	—
F30	DC/DC
F31	IPC B+
F32	Audio/Nav
F33	TRLR Feed1
F34	PEPS Module
S/B01	PTC 1
S/B02	PTC 2
S/B03	PWR WNDW FRT
S/B04	PWR WNDW Rear
S/B05	Logistic Mode RLY
S/B06	PWR Seat DR
S/B07	—
S/B08	Trailer Interface Module

**Relays**


RLY1	ACC/RAP
RLY2	L/GATE
RLY3	Spare
RLY4	Blower
RLY5	Logistic Mode

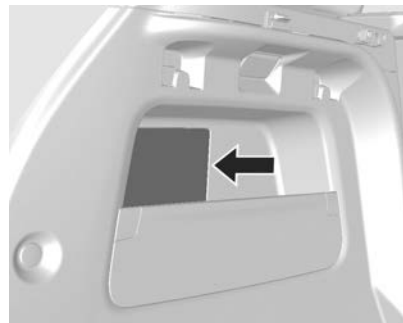**Rear compartment fuse box**

The rear compartment fuse box is located in the passenger's side of the rear compartment.

To remove the cover, pull the front edge outwards.

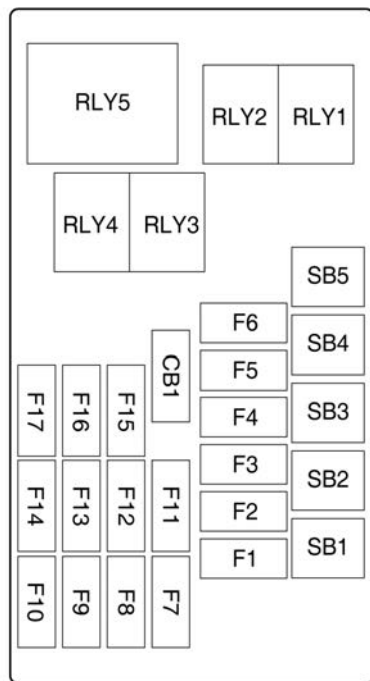

**Note**

Not all fuse box descriptions may apply to your vehicle.

**Fuses**

F1	Amplifier
F2	RDCM
F3	—
F4	NOX Soot
F5	NOX Soot/Heater Pipe
F6	SCRPM
F7	SCRPM
F8	—
F9	—
F10	—
F11	—
F12	—
F13	—
F14	—
F15	—
F16	—
F17	—
SB1	DC/DC
SB2	DC/DC
SB3	DC/AC Inverter
SB4	NOX Heater Pipe
SB5	—

**Relays**


RLY1	—
RLY2	—
RLY3	ECM/NOX Soot
RLY4	ECM/NOX Heater Pipe
RLY5	—

## Vehicle tools

### Tools

#### Tyre repair kit

The vehicle may have a tyre repair kit in place of a spare tyre.

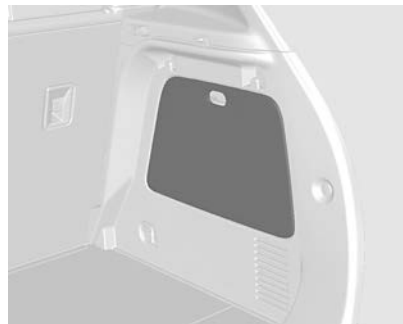


The tools and tyre repair kit are located in the load compartment on the driver's side.

*Tyre sealant and compressor kit*

⇒ 202



## Spare wheel

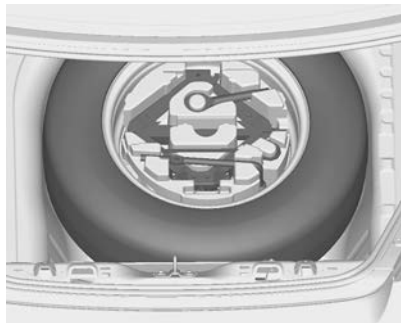

The jack and tools are located above the spare wheel, in the load compartment.

*Tyre changing* ⇨ 206

## Wheels and tyres

### Tyre and rim condition

- To avoid tyre and rim damage and possible tyre blowout, do not drive over sharp edges.
- Drive over edges slowly and at right angles, if possible.
- When parking, ensure the tyres are not pressed against the edge of the kerb.
- Check the tyres regularly for damage, stones, punctures, cuts, cracks, bulges etc. Check the rims for damage. Contact a Holden Dealer, if in doubt.

### Tyre pressure

Keep the tyres at the recommended pressures to avoid increased fuel consumption, uneven and premature tyre wear.

The correct pressures are shown on the tyre placard and in the tyre pressure table.

*Tyre pressure* ⇨ 226

- Tyre pressure should be checked when cold as tyre pressure will increase as the tyres warm up.
- Check the air pressure of tyres (including the spare) weekly, to ensure occupant safety, as well as reducing fuel consumption and increasing the life of the tyres.
- Replace any valve dust caps or extensions.



## Tyre placard



The correct pressures for tyres are shown on the tyre placard in the passenger's door frame.

Always inflate the spare tyre to the pressure specified for maximum load.

## Tread depth

Check tread depth at regular intervals.



- Replace the tyres when:  
They are worn to the point where the tread wear indicators (TWI) appear.  
The tyres originally fitted to the vehicle have built in TWI. These show as plain bars across the tread pattern at regular intervals across the tyre.

- If there is more wear on the front tyres than on the rear, swap the front and rear wheels.

Ensure the direction of rotation of the wheels is the same as it was previously.

- Tyres age, even if they are not used. Replacement of tyres every six years is recommended.

### **Warning**


Do not attempt to drive on a flat tyre more than is necessary to stop safely. Driving even a short distance can damage the tyre and wheel beyond repair. Tyres which have been repaired or retreaded are not capable of being driven safely at high speeds. Therefore, their use is not recommended.



## Tyre rotation

It is recommended that you rotate tyres at every scheduled maintenance service.

Driving conditions, driving techniques, vehicle loading and weather may warrant more frequent tyre checks and rotation.

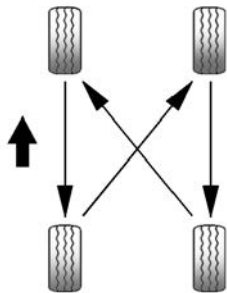

Front and rear tyres can wear differently depending on:

- Types of roads driven on.
- Driving habits.
- Tyre pressures.
- Wheel alignment and balance.

New tyres should be fitted in pairs to the front. If replacing only one tyre, pair it on the same axle with the least worn of the other three.

## Buying new tyres

Refer to the tyre placard on the vehicle for tyre size and load rating.

Using a different size or type of tyre may affect:

- Ride.
- Handling.
- Speedometer accuracy.
- Vehicle ground clearance.
- Tyre clearance.
- Snow chain clearance.



**⚠ Warning**

Do not use different sizes or types of tyres and wheels than those originally fitted to the vehicle. Safety and performance of the vehicle may be affected. It may also affect handling and lead to serious injury.

When replacing tyres, install all four tyres and wheels of the same size, type, tread, brand and load-carrying capacity.

**Tyre chains****⚠ Warning**


Holden does not recommend fitment of tyre chains.

Due to limited tyre clearances, tyre chains may cause damage to your vehicle. Fitment of tyre chains is at the risk of the owner.

If you choose to fit tyre chains you should:

- observe all local regulations and advice regarding the use of tyre chains
- use a correctly sized, well fitted, diamond pattern tyre chain
- not exceed speed of 30 km/h
- stop the vehicle in the event of any unusual noise
- check the tyres are inflated to the correct pressure. *Tyre pressure* ⇨ 226

Whenever tyre chains are fitted, switch off the ESC. *Electronic Stability Control (ESC)* ⇨ 157.

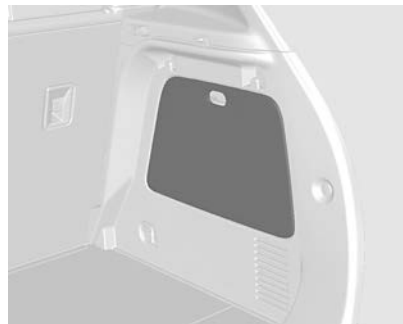**Tyre sealant and compressor kit**

The vehicle may have an emergency tyre sealant and compressor kit, in place of a spare tyre. It is located in the load compartment on the driver's side.

The repair kit:

- Repairs minor damage to the tyre tread or sidewall.

**Note**

Do not remove any objects that have penetrated the tyre.



- Repairs damage up to 4 mm in the tread area of the tyre.
- Does not repair damage at the tyre's side wall, near the rim.

Take the vehicle to a Holden Dealer to have the tyre repaired or replaced as soon as possible.

### Warning

Do not drive faster than 80 km/h.  
Do not drive on the repaired tyre for an extended time. Steering and handling may be affected.


### Note

- If unusual noises are heard or the compressor becomes hot, turn the compressor off for at least 30 minutes.
- Check the expiry date on the tyre sealant canister before use. The tyre sealant canister must be replaced before its expiry date.

- The compressor and sealant can be used from approximately  $-30^{\circ}\text{C}$  to  $70^{\circ}\text{C}$ .


### Temporary puncture repair

- Apply the park brake.
- Place manual transmissions into first or reverse gear.  
Place automatic transmissions into position **P**.

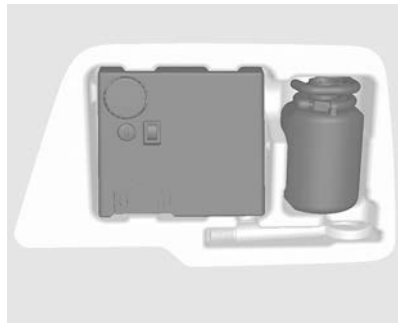

- Remove the tyre repair kit from behind the cover in the load compartment, on the driver's side.

- Remove the compressor and sealant bottle.

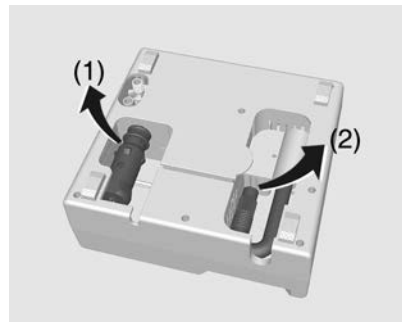

- Remove the electrical connection cable (1) and air hose (2) from the underside of the compressor.





6. Place the switch on the compressor to **O**.
7. Screw the compressor air hose to the connection on the sealant bottle.
8. Connect the compressor plug to the accessory socket (power outlet).
9. Start the engine and let it idle to ensure the battery does not run down.

#### Note


If running the engine ensure neutral or **P** is selected.

#### ⚠ Warning


Do not run the engine in an enclosed area or with passengers in the vehicle.

*Fuel* ⇄ 167

10. Place the compressor near the tyre so the sealant bottle is upright.

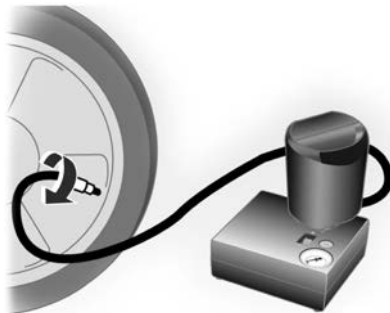

11. Unscrew the valve cap from the defective tyre.
12. Screw the filler hose to the tyre valve.

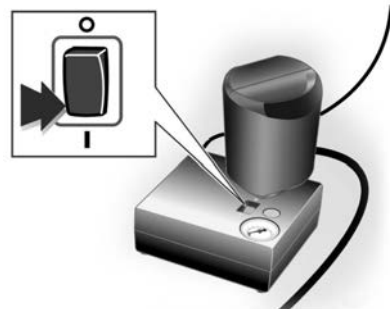

13. Press the switch on the compressor to **I**.  
The tyre fills with sealant.  
The compressor pressure gauge briefly indicates up to 6 bar while the sealant bottle is emptying (approx. 30 seconds).  
The pressure starts to drop.  
Once the sealant is pumped into the tyre, the tyre is inflated.  
The prescribed tyre pressure (approximately 2.4 bar) should be obtained within 10 minutes.





14. When the correct pressure is obtained, switch off the compressor.

**⚠ Warning**

Do not over inflate tyres due to risk of injury or damage to the tyre.

15. If the tyre pressure is not obtained within 10 minutes, remove the tyre repair kit.
16. Move the vehicle one tyre rotation.

17. Reattach the tyre repair kit and continue the filling procedure for 10 minutes.

**⚠ Warning**

If the recommended pressure cannot be reached after approximately 10 minutes, the vehicle should not be driven. The tyre is too severely damaged and the tyre repair kit cannot inflate the tyre. Disconnect and stow the tyre repair kit back in its original position. Contact a Holden Dealer.

18. Drain excess tyre pressure with the button over the pressure indicator.

Do not run the compressor longer than 10 minutes.

19. Detach the tyre repair kit.
20. Push the catch on the bracket to remove the sealant bottle from the bracket.

21. Screw the tyre inflation hose to free the connection of the sealant bottle. This prevents sealant from escaping.

22. Stow the tyre repair kit in the load compartment.

**⚠ Warning**


Always stow the tyre repair kit in its original position. Unsecured loads increase the risk of injury during heavy braking, sudden avoidance manoeuvres or a collision.

23. Remove any excess sealant using a cloth.

24. After inflating the tyre, remove the maximum speed label and place it in a visible location.
- It reminds you to drive cautiously and not to exceed 80 km/h until the damaged tyre is replaced or repaired.



25. Continue driving immediately so that sealant is evenly distributed in the tyre.
26. After driving approximately 10 km (but no more than 10 minutes), stop at a safe location to check the tyre pressure.

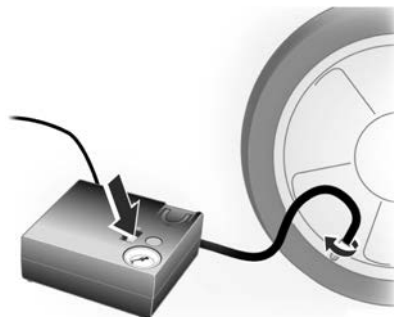

27. Screw the compressor air hose directly onto the tyre valve and compressor to check the tyre pressure.
28. If the tyre pressure is more than 1.3 bar, set it to the correct value (approx. 2.4 bar).

29. Repeat the procedure from Step 25 until there is no more loss of pressure.

If the tyre pressure has fallen below 1.3 bar, do not continue driving. Contact a Holden Dealer.

30. Dispose of the used tyre sealant canister at a Holden Dealer or in accordance with local and State codes and practices. Replace with a new canister.
31. Stow the tyre repair kit behind the cover on the driver's side, in the load compartment.

This is a temporary puncture repair. Take the vehicle to a Holden Dealer to have the tyre repaired or replaced as soon as possible.

## Tyre changing

The vehicle may have a spare tyre.

### Warning


Failure to observe the following preparations and instructions may result in damage or injury:

- Passengers must be out of the vehicle when it is being jacked.
- Do not jack a vehicle with a trailer attached. Remove the trailer first.
- Only jack the vehicle on hard, level surfaces.
- Ensure moving parts of the jack are adequately lubricated before use.
- Use the jack only at the designated lifting points. Use in other locations may result in the vehicle falling off the jack, or damage to the vehicle.
- Do not start or run the engine while the vehicle is supported by the jack.



- Use the jack only for lifting the vehicle when changing wheels.
- Do not get under a vehicle that is supported by a jack. No person should place any portion of their body under a vehicle that is supported by a jack.
- Vehicles with alloy wheels may have a steel spare wheel. Drive carefully and do not exceed 80 km/h if the tyre size or tread pattern of the spare tyre is different to the other tyres on the vehicle. Although the spare tyre was fully inflated when the vehicle was new, it can lose air over time. Check the inflation pressure regularly.
- After installing the spare tyre on the vehicle, stop as soon as possible to check the inflation pressure is correct. Have the flat tyre repaired or replaced and installed back on the vehicle as soon as possible.

### Removing the spare tyre

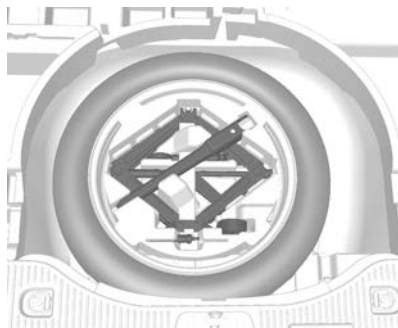

The spare tyre is located in the load compartment beneath the floor cover.


1. Park on a hard, level surface, in a safe location.
2. Apply the park brake firmly.
3. Place manual transmissions in first or reverse gear.  
Place automatic transmissions in position **P**.
4. Switch the hazard warning flashers on.
5. Turn off the engine and remove the key.

6. Chock the wheel diagonally opposite the flat tyre with a suitable solid object.

#### **Note**


Do not change more than one wheel at one time.

7. Remove the tools from the load compartment.
8. Remove the spare wheel from the load compartment.

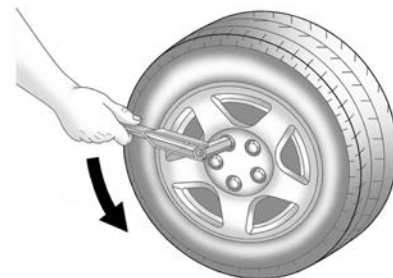

9. Place the wheel wrench over the wheel nuts and loosen by half a turn, but do not remove the wheel nuts.



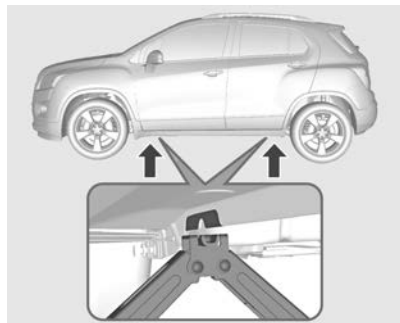

10. Position the jack beneath the jack location closest to the wheel being changed.

The locations are identified by half circles in the underside of the door sill.


11. Wind the jack up by hand until it engages with the jacking point. Ensure the jack is not tilted and the base is resting squarely on the ground.

### **Warning**

Failure to position the jack as described could cause the vehicle to slip off the jack.

Do not get under a vehicle that is supported by a jack. No person should place any portion of their body under a vehicle that is supported by a jack.


12. Attach the wheel wrench to the jack.

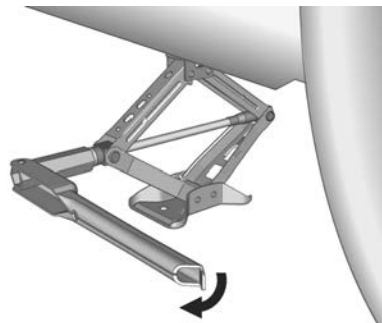

13. Rotate the wrench checking the correct position of the jack, until the wheel is clear of the ground.
14. Unscrew the wheel nuts and place in a clean, dry place.
15. Exchange the wheel on the vehicle with the spare wheel.
16. Clean the wheel nuts and thread before replacing, then lightly tighten with the wrench.
17. Lower the vehicle by reversing the jacking procedure.



18. Remove the jack from under the vehicle.

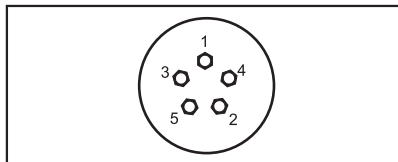


19. With the wheel on the ground, use the wrench to tighten the wheel nuts in the sequence shown.
20. Replace the flat tyre and tools in the load compartment and have the flat tyre renewed or repaired.

**Note**

When stowing a damaged 18" wheel and tyre follow the procedure below:

21. Replace the tools in the load compartment beneath the floor covering.

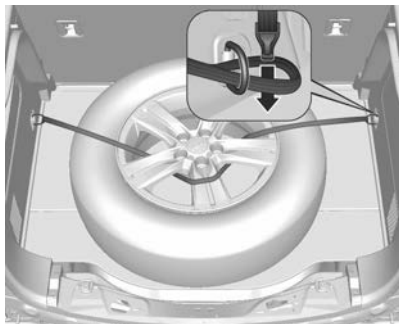**Note**

The damaged wheel should be stowed face up in the load compartment secured with the supplied strap.

22. Position the wheel face up in the middle of the load compartment.
23. Place the loop end of the strap through the front lashing eye on one side.
24. Place the hook end of the strap through the loop and pull it until the strap is fastened securely to the lashing eye.

25. Insert the strap through the spokes of the wheel as shown in the illustration.
26. Mount the hook to the front lashing eye on the opposite side.
27. Tighten the strap and secure it using the buckle.

**⚠ Danger**

Always drive with folded up and engaged rear seat backrests when stowing a damaged full size wheel in the load compartment.

28. Have the flat tyre renewed or repaired.
29. Replace and secure the renewed or repaired tyre and tools back in the load compartment under the floor covering.



**⚠ Warning**

As soon as possible after changing a wheel, have the wheel nuts tightened with a torque wrench to 140 Nm (Newton metres). Wheel nuts must be tightened evenly to the correct torque, as wheel nuts which have not been tightened properly could eventually allow the wheel to come off while the vehicle is moving.

**Jump starting**

Read the following warnings and procedure in full before attempting to jump start the vehicle.

If you are still unsure about jump starting, Holden strongly recommends for your safety and that of the vehicle that you seek the assistance of a suitably trained service technician.

**⚠ Warning**

Do not push start or tow start the vehicle. If unburnt fuel were to reach the catalytic converter and ignite, the converter could overheat or be destroyed by backfire. Therefore, if the battery is flat, jump start, but do not push start the vehicle.

Batteries produce explosive gases, contain corrosive acids and supply levels of electrical current high enough to cause burns. Therefore, adhere to the following when working near a battery:

- Do not attempt jump starting directly from the battery in the engine compartment.
- Do not let the jumper lead clamps touch each other or other metal parts.
- Do not allow the jumper leads to contact any rotating engine components.




- Do not use open flames or sparks near the battery.
- Do not smoke near the battery.
- Never use a quick charger to start the engine.
- The battery must be removed from the vehicle for recharging.
- Wear eye protection such as safety glasses and avoid leaning over the battery.
- Battery acid is corrosive. If it gets on your skin, wash with plenty of water immediately. If it gets in your eyes you should not only flush with lots of water, but should also seek medical help. Battery acid also damages paint and fabrics. To minimise damage, wash it off immediately.
- Remove rings, metal watch bands and other metal jewellery before working around the battery.

- If a permanently connected hands free telephone kit is fitted to the vehicle, remove the fuse for the telephone kit before jump starting. Remember to replace the fuse afterwards.

- A discharged battery can freeze at temperatures of 0°C. Defrost the frozen battery before connecting jumper leads.
- Use a booster battery with the same voltage (12 volts). Its capacity (Ah) must not be much less than that of the discharged battery.
- Use jumper leads with insulated terminals and a cross section of at least 16 mm<sup>2</sup>.
- Do not disconnect the discharged battery from the vehicle.
- Switch off all unnecessary electrical devices.
- The vehicles must not come into contact with each other during the jump starting process.

1. Position the two vehicles so they are not touching.
2. Apply the park brakes.
3. For manual transmissions, place the shift lever in neutral. For automatic transmissions, place the shift lever in **P**.
4. Turn the ignition off.
5. Turn off all lamps and accessories in both vehicles, except the hazard warning flashers or any lights needed for the work area.



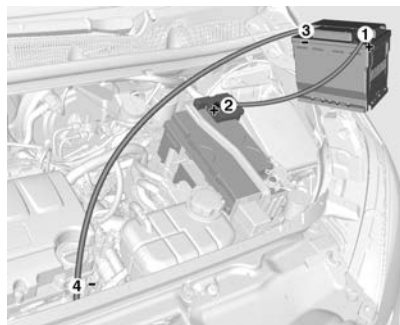

6. Connect one end of the RED lead to the positive terminal of the booster battery (1).
7. Connect the other end of the RED lead to the positive terminal of the discharged battery (2).
8. Connect the BLACK lead to the negative terminal of the booster battery (3).

9. Connect the other end of the black lead to a vehicle grounding point, such as the engine block or an engine mounting bolt (4).

Connect as far away from the discharged battery as possible (at least 60 cm).

**Note**

Route the leads so they cannot catch on rotating parts within the engine compartment.

10. Start the engine of the vehicle providing the jump start and allow to idle for at least 5 minutes.
11. Start the engine of the vehicle with the flat battery.  
Start attempts should be made for no longer than 15 seconds at an interval of 1 minute.
12. Allow both engines to idle for approximately 3 minutes with the leads connected.

13. Switch on the headlamps and the heated rear window of the vehicle that received the jump start.

14. Leave the engines running while removing the BLACK negative jumper lead first, followed by the RED positive jumper lead.

**Note**


While removing each clamp, do not touch any other metal while the other end remains attached.



## Towing

### Towing the vehicle


#### Flat-bed tow truck

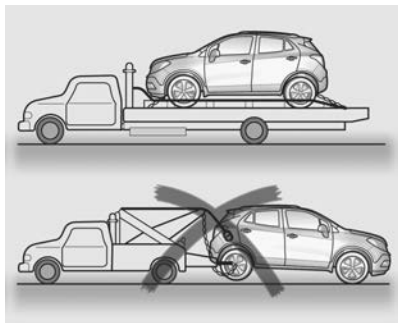


A flat-bed tow truck is the best method of towing the vehicle to avoid damage.

#### Standard tow truck

If a flat-bed tow truck is not available:

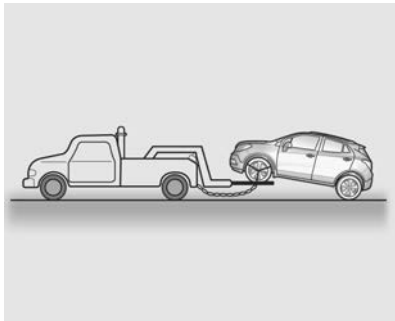

1. Use a standard tow truck, where the front wheels are raised and the rear wheels are in contact with the ground.

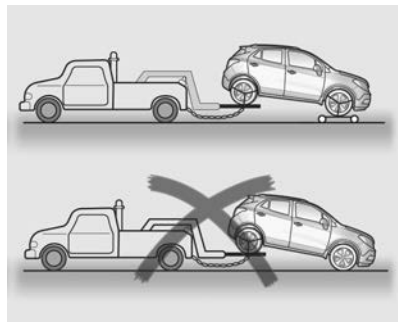

2. Alternatively, use a standard tow truck and a towing dolly to prevent the front wheels from contacting the road.

#### Caution

If the vehicle is towed with the front wheels contacting the road, the vehicle's drive system could be severely damaged.



**Towing the vehicle****Caution**


Automatic transmission: Do not tow the vehicle using the towing eye, the transmission may be severely damaged.

Manual transmission: The vehicle may be towed facing forward at a maximum speed of 80 km/h.

Proper lifting or towing equipment is necessary when lifting or towing the vehicle to prevent damage. State and local laws must be followed.

**Note**

- A driver must be in the vehicle to steer and operate the brakes.
- Release the park brake and place the shift lever in neutral.
- Drive slowly when towing.
- When the engine is not running, considerably more force is needed to brake and steer.

- To prevent the entry of exhaust fumes from the towing vehicle, close the windows and press .
- When the transmission is defective, the front axle must be raised off the ground.



1. Use a screwdriver to disengage and remove the cap.
2. Remove the towing eye from the load compartment.

*Tools* ⇨ 198



3. Screw in the towing eye anticlockwise until it stops in a horizontal position.
4. Fit the towing equipment to the front towing eye.

**Note**

The towing eye must only be used for towing and not for recovering the vehicle.

5. Turn the ignition on to release the steering column and to operate the brake lamps, horn and windscreen wipers.
6. Place the shift lever into neutral.




7. After towing, unscrew the towing eye and place back in the load compartment.
8. Reinstall the cap firmly.

## Towing another vehicle

### ⚠ Warning

To prevent damage, use only proper towing equipment.

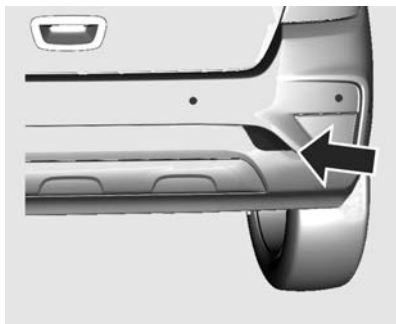

1. Use a screwdriver to carefully disengage and remove the cap.
2. Remove the towing eye from the load compartment.

*Tools ⇨ 198*



3. Screw in the towing eye anticlockwise until it stops in a horizontal position.
4. Fit the towing equipment to the towing eye.

### Note

The towing eye must only be used for towing and not for recovering the vehicle.

5. After towing, unscrew the towing eye and place back in the load compartment.
6. Reinstall the cap firmly.



## Appearance care

### Exterior care

#### Washing

The paintwork of the vehicle is exposed to environmental influences. Wash and wax regularly. When using automatic vehicle washes, select a programme that includes waxing.

Bird droppings, dead insects, resin, pollen and the like should be cleaned off immediately, as they contain aggressive constituents which can cause paint damage. Failure to do so may result in permanent damage, particularly in hot weather conditions.

Road bloom is a gradual build up of road and environmental grime. This should be removed with a paint cleaner once a year, in addition to normal washing.

If using a vehicle wash, comply with the vehicle wash manufacturer's instructions. Never use an automatic wash that requires anything touching the paint (other than water). The wipers must be switched off. Remove the antenna and external accessories.

If you wash your vehicle by hand, make sure the insides of the wheel housings are also thoroughly rinsed out.

Clean edges and folds on opened doors and the bonnet as well as the areas they cover.

Have the door hinges of all doors greased by a Holden Dealer.

#### Caution

Do not clean the engine compartment with a steam-jet or high-pressure jet cleaner.

Thoroughly rinse and chamois off the vehicle. Rinse chamois frequently. Use separate chamois for painted and glass surfaces: remnants of wax on the windows will impair vision.

Do not use hard objects to remove spots of tar. Use tar removal spray on painted surfaces.

#### Warning

Take care when moving the vehicle after washing, in case water has affected the brakes. Applying the brakes lightly will indicate whether they have been affected. To dry them quickly, lightly apply the brakes while maintaining a slow forward speed with a clear area ahead, until brake performance returns to normal.



### Exterior lamps

Headlamp and other lamp covers are made of plastic. Do not use any abrasive, solvent based cleaners or caustic agents and do not dry-clean them.

### Air intakes

Clear debris from the air intakes, between the bonnet and windscreen and below the front bumper, when washing the vehicle.

### Polishing and waxing

Wax the vehicle regularly (at the latest when water no longer beads).

Polishing is necessary only if the paint has become dull or if solid deposits have become attached to it.

Paintwork polish with silicone forms a protective film, making waxing unnecessary.

Plastic body parts must not be treated with wax or polishing agents.

### Windows and windscreen wiper blades

Use a soft lint-free cloth or chamois leather together with window cleaner and insect remover.

- Never use abrasive cleaners to clean glass.
- Refer to a Holden Dealer for windscreen washer additive.
- Old wiper blades can cause windscreen scratching. Regularly inspect and replace them.

Caution
Do not operate the wiper blades by hand as this damages the wiper drive mechanism.

When cleaning the rear window, make sure the heating element inside is not damaged.

Clean smearing wiper blades with a soft cloth and window cleaner.

### Wheels and tyres

Do not use high-pressure jet cleaners.

- Remove oil and grease with soap and water or detergent.
- Do not use petrol to clean tyres.
- Use a good quality tyre and bumper shine if required.
- A good quality wheel cleaner can be used for cleaning alloy wheels.
- Do not use abrasive cleaners.



### Paintwork damage

Rectify minor paintwork damage with a touch-up pen before rust forms.

Have more extensive damage or rust areas repaired by a Holden Dealer.

#### Caution

Do not spill coolant on the vehicle's exterior surfaces as it can damage the paint work. If you do, wash it off immediately.

### Underbody

Substances can cause rust under the vehicle.

- Hose the underbody with clean water whenever the vehicle is washed.
- Where the vehicle is exposed to heavy concentrations of corrosive materials, inspect and wash the complete underbody at least once each year, preferably after winter exposure.

### Interior care

#### Warning

Many cleaning products are toxic, flammable or may damage the interior. When cleaning the interior, avoid volatile cleaners such as acetone, lacquer thinners, enamel reducers, nail polish removers, or cleaners such as laundry soaps, bleaches or reducing agents. Never use carbon tetrachloride, petrol or naphtha for any cleaning purpose. Ensure the vehicle is well ventilated while using any cleaners and always follow the cleaning product manufacturer's recommendations. Water based cleaners, rather than solvent based cleaners, are recommended.

Steam cleaning of seats is not recommended.

### Interior and upholstery

Only clean the vehicle interior, including the instrument panel fascia and panelling, with a dry cloth or interior cleaner.

The instrument panel should only be cleaned using a soft damp cloth.

Clean fabric upholstery with a vacuum cleaner and brush. Remove stains with an upholstery cleaner.

Clean seat belts with a mild, non-abrasive soap and lukewarm water.

After washing, thoroughly, sponge the solution out of the belts.

#### Caution

Close Velcro fasteners as open Velcro fasteners on clothing could damage seat upholstery.



## Plastic and rubber parts

Plastic and rubber parts can be cleaned with the same cleaner as used to clean the body. Use interior cleaner if necessary. Do not use any other agent. Avoid solvents and petrol in particular. Do not use high pressure jet cleaners.

## Floor mats

Original equipment and Genuine Holden Accessory floor mats are designed for your vehicle. If the floor mats need replacing, it is recommended that Holden approved floor mats be purchased.

### Warning

If a floor mat is the wrong size or is not properly installed, it can interfere with the accelerator pedal and/or brake pedal.

Interference with the pedals can cause unintended acceleration and/or increased stopping distance which can cause a crash and injury.

- Pull up the small peg at the corner to remove the mat.
- Push the mat down onto the peg to replace.

Non-genuine floor mats may not fit properly and may interfere with the accelerator or brake pedal.

Always check the floor mats do not interfere with the pedals.

- Use the floor mat with the correct side up. Do not turn it over.
- Do not place anything on top of the driver side floor mat.
- Use only a single floor mat on the driver's side.
- Do not place one floor mat on top of another.



## Service and maintenance

### General information ..... 220

Service information ..... 220

Engine oil life system ..... 220

### Recommended fluids, lubricants and parts ..... 221

## General information

### Service information

In order to ensure economical and safe vehicle operation and to maintain the value of your vehicle, it is of vital importance that all maintenance work is carried out at the proper intervals as specified.

See your Service & Warranty Booklet for the service schedules and for more information.

## Engine oil life system

The vehicle has a computer system that lets you know when to change the engine oil and filter.

The frequency of the oil change depends on driving patterns, engine RPM and engine temperature.



When the system has calculated the oil life has diminished, **Code 82** or **Change** (change engine oil soon) will appear in the Driver Information Centre (DIC).

When **Code 82** or **Change** is displayed, have the engine oil and filter changed as soon as possible, within the next 1,000 km.

It is possible that if you are driving under the best conditions, the oil life system may not indicate an oil change is necessary for a longer period than that shown in the Maintenance schedule. However, the engine oil and filter must be changed in accordance with the Maintenance schedule outlined in the Service & Warranty Booklet.



## Recommended fluids, lubricants and parts

Engine type	1.4L petrol	1.8L petrol
Engine oil specification	SAE 5W-30;  (dexos 1)	SAE 5W-30;  (dexos 1)
Coolant specification	50% clean fresh water and 50% Dexcool® anti-freeze coolant	
Manual transmission fluid	GM Part number 93165694 (BOT 303, low viscosity 70W)	SAE 75W-90
Automatic transmission fluid	Dexron® VI	
Brake/clutch fluid	DOT 4 Hydraulic brake fluid, conforming to specification number GMW3356	
Battery	12 volts, 60 amp hours	



## Technical data

### Vehicle identification..... 222


Vehicle Identification Number (VIN) .....	222
Identification plate .....	222
Built date .....	223
Engine number .....	223

### Vehicle data..... 224

Engine data .....	224
Vehicle weight .....	224
Axle loads.....	225
Dimensions .....	225
Capacities .....	225
Tyre pressure .....	226


## Vehicle identification

### Vehicle Identification Number (VIN)

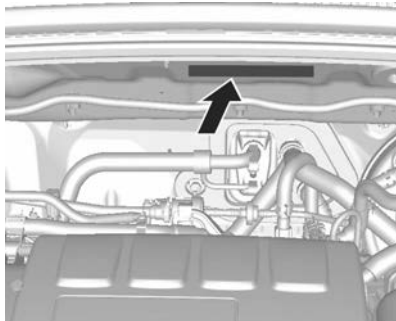

The Vehicle Identification Number (VIN), is engraved in the centre of the firewall and also on a plate on the passenger's side at the lower edge of the front windscreen.

## Identification plate

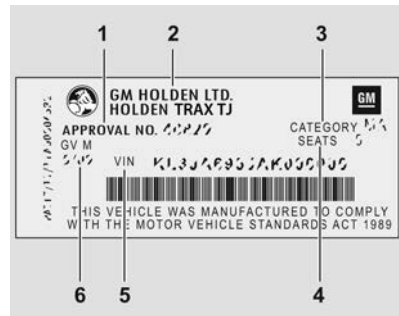


An identification label is located on the front passenger's door frame.

The label shows:

- 1 = Approval number
- 2 = Manufacturer
- 3 = Category
- 4 = Number of seats
- 5 = Vehicle identification number
- 6 = Compliance date



## Built date

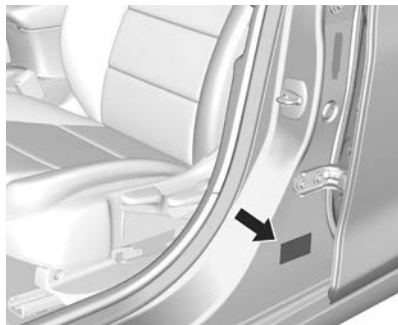


An identification label is located on the lower portion of the front passenger's door frame.

The label shows the vehicle Built Date and VIN.

## Engine number

### 1.4L engine

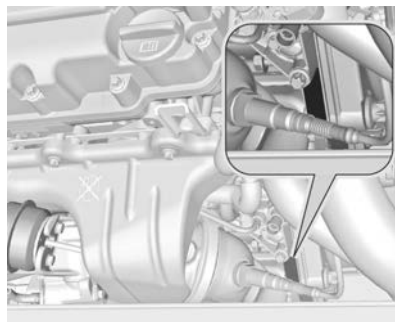

The engine serial number is located in the front part of the engine compartment.

### 1.8L engine



The engine serial number is located next to the oil filter.



## Vehicle data

### Engine data

Engine type	1.4 L Turbo DOHC Petrol	1.8 L DOHC Petrol
Number of cylinders	4	4
Engine	1364	1796 cc
Engine power	Please refer to holden.com.au	
Engine torque	Please refer to holden.com.au	
Octane rating (RON)		
Minimum	91	91
Recommended	95	91
Ethanol compatibility	E10	

### Vehicle weight

Overloading is a safety hazard and could also shorten the life of the vehicle.

#### Maximum vehicle payloads

Occupants (average 68 kg each)	Luggage	Total load
5	68 kg	408 kg



## Axle loads

### Maximum front and rear axle loads

Do not exceed the maximum axle loads, including the weight of any options or accessories fitted to the vehicle. Weigh at a weighbridge if unsure.

Front axle load	Rear axle load
1065 kg	995 kg

## Dimensions

Length	Width (excl. mirrors)	Width (inc. mirrors)	Height	Wheel base
4257 mm	1776 mm	2038 mm	1764 mm*	2555 mm

The above figures are based on the design dimensions.

\*: With 18" wheels and roof rails

## Capacities

Engine type	1.4 L Turbo DOHC Petrol	1.8 L DOHC Petrol
Refill engine oil including filter (approximately)	4.0 L	4.5 L
Coolant (approximately)	7.35 L	6.6 L
Fuel tank	53.0 L	53.0 L



**Tyre pressure**

Tyre size	Wheel size	Recommended pressure					
		Front		Rear		Spare	
		kPa	PSI	kPa	PSI	kPa	PSI
205/70 R16 97H	16x6.5J	240	35	240	35	240	35
215/55 R18 95H	18x7.0J	240	35	240	35	-	-



## Customer information

### Customer Information ..... 227

Trademarks and licence agreements ..... 227

Owner Assistance ..... 227

## Customer Information

### Trademarks and licence agreements



- Bluetooth®, the Bluetooth® word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Inc.

Made for



iPod



iPhone

- iPod® and iPhone® are registered trademarks of Apple Inc.
- Apple CarPlay™ is a trademark of Apple Inc.
- Android™, Android Auto™ and Google Play™ are trademarks of Google Inc.



- Dexos® and its associated logos are trademarks of General Motors, LLC.
- Dexron® and Dexcool® and their associated logos are registered trademarks of General Motors, LLC.

## Owner Assistance

### Holden Customer Care

At Holden, we want you to be completely satisfied with your ownership experience. This applies to your vehicle and any Holden representative you may deal with. Refer below for two options for seeking assistance with your query.



### Holden Dealerships

Holden encourages you to seek assistance from a Holden Dealer. Each Holden Dealership is equipped to manage any sales, servicing, parts or technical query.

In the instance that you wish to escalate a query to a higher level of staff, further options are available to you.

As a first step, Holden suggests you discuss any concern with the relevant Department Manager (Sales Manager or Service Manager).

Alternatively, the Dealership General Manager or Dealer Principal will also be happy to assist you.

### Holden Customer Care Office

Should you wish to speak to a Holden representative, you are welcome to contact the Holden Customer Care team. Refer below for operating hours and various methods of communication.

#### Operating Hours

Weekdays: 8am – 7pm AEST

Saturday: 9am – 1pm AEST

#### Telephone

Holden Customer Care can be telephoned from anywhere within Australia for only the cost of a local call.

The contact number is:

**1800 033 349**

#### Email

Alternatively, you may prefer to email Holden at:

**holdencustomer care@gm.com**

### Written Correspondence

You can also write to Holden at the address below:

**The Manager  
Holden Customer Care Centre  
GPO Box 1714  
Melbourne 3001**

Your written correspondence should clearly outline your concern or query and include:

- Your name and address.
- Telephone numbers, both private and business.
- Servicing dealer's name and address.
- Vehicle model.
- Vehicle identification number (I.S.O.V.I.N.), refer to the inside front cover of the Service & Warranty Booklet in your vehicle's glove box.
- Date of purchase.
- Current odometer reading.



Most of this information will be found on the Vehicle Identification Certificate, located inside the front cover of the Service & Warranty Booklet in your vehicle's glove box.

Before you write however, remember the telephone is the quicker and more efficient means of communication.

### **New Zealand**

The information in this Owner's Manual applies primarily to Australian Holden vehicles and there may be some differences to the Warranty and Owner Assistance provisions for New Zealand.

Applicable details for New Zealand are set out in the Holden Warranty and Owner Assistance Information booklet enclosed in the New Zealand glove box wallet.

New Zealand Assistance can be reached on:

**0800 HOLDEN (0800 465 336)**

This number provides access to New Zealand Roadside Assistance as well as New Zealand Customer Care.

Alternatively, you may prefer to email Holden at:

**holdencustomer@gm.com**

You can also write to Holden at the address below:

**The Manager  
Holden Customer Care Centre  
P.O. Box 11195  
Ellerslie  
Auckland 1542  
New Zealand**



# Index

## A

ABS .....	155
Accessories	
Power outlets .....	62
Active safety systems	
Antilock Brake System (ABS).....	155
Electronic Stability Control (ESC) .....	157
Airbags .....	49
Airbag fault warning .....	68
Airbags and child restraints.....	53
SRS warning light.....	68
Air compressor kit.....	202
Air conditioning .....	137
Air pressure, tyres .....	199, 226
Alarm system.....	27
Alternator warning light.....	68
Anchorage points, child restraints.....	56
Android Auto .....	130
Anti-freeze specification .....	221
Antilock Brake System (ABS) ....	155

Apple CarPlay.....	130
Assistance .....	227
Audio system.....	96
Automatic transmission .....	149
Fluid .....	221
Manual mode .....	151
Auxiliary devices.....	118
Axle loads.....	173, 225

## B

Battery .....	187, 221
Disconnection.....	187
Jump starting.....	210
Replacement .....	187
Specification.....	221
Battery power protection.....	95
Bonnet .....	178
Brakes .....	154
ABS .....	155
ABS warning lamp.....	69
Brake fluid level.....	186
Brake warnings .....	69
Park brake.....	155
Bulb replacement.....	188

## C

Capacities, fluid .....	225
Caravan, towing.....	171
Carbon monoxide, warning.....	167
Car key .....	16
Central locking system .....	21
Changing a flat tyre .....	198, 206
Child restraints.....	53
Anchor points .....	56
Types of restraint.....	53
Child safety locks.....	25
Child safety switch.....	31
Cleaning .....	216
Exterior.....	216
Interior .....	218
Climate control.....	137
Clutch .....	12
Clutch fluid level.....	186
Compass .....	75
Console .....	35
Coolant	
Capacities .....	225
Cooling system message .....	71
Engine coolant .....	184
Specification.....	221



Cruise control ..... 159  
Cup holders ..... 35

## D

Dashboard layout ..... 8  
Daytime Running Lamps (DRL)... 92  
Demister, windscreen ..... 138  
Descent Control System  
(DCS)..... 158  
Dimensions..... 225  
Dimmer, instrument lighting ..... 93  
Dipping headlamps..... 9, 91  
Dipstick  
    Engine oil ..... 182  
Display information ..... 64, 73  
Door ajar light ..... 72  
Doors ..... 25  
    Child safety locks ..... 25  
    Key ..... 16  
    Locking and unlocking..... 25  
Driver Information Centre (DIC)... 73  
Driving  
    Parking ..... 147  
    Running-in..... 143  
    Safety ..... 148

Starting the engine ..... 145  
Driving precautions..... 142

## E

Electrical system..... 193  
Electric mirrors..... 28  
Electric windows ..... 30  
Electronic Stability Control  
(ESC)..... 157  
    Warnings ..... 70  
Emergencies  
    Bulb replacement ..... 188  
    Changing a flat tyre ..... 206  
    Customer assistance..... 227  
    Engine overheating ..... 184  
    Flat battery ..... 210  
    Flat tyre ..... 206  
    Fuse replacement ..... 193  
    Towing ..... 213  
Emissions ..... 176  
Engine  
    Adding oil ..... 183  
    Air filter ..... 184  
    Compartment ..... 180  
    Cooling system..... 184

Number location ..... 223  
Oil life system..... 220  
Overheating..... 184  
Specifications ..... 224  
Starting ..... 14, 145  
    Temperature warning ..... 71  
Engine compartment ..... 180  
Engine oil ..... 182  
    Capacities ..... 225  
    Change interval..... 183  
    Dipstick..... 182  
    Engine oil life system ..... 220  
    Low oil pressure warning ..... 71  
Engine oil life system  
    How to reset ..... 74  
Ethanol ..... 168, 224  
Exhaust fumes warning ..... 167  
Exterior lighting ..... 90  
Exterior mirrors ..... 28

## F

Fan, climate control ..... 137  
Flat battery..... 210



Flat tyre.....	198
Changing a flat tyre.....	198, 206
Tyre sealant.....	202
Floor mats.....	219
Fluid levels	
Brake/clutch .....	186
Coolant.....	184
Engine oil .....	182
Windscreen washer.....	185
Fog lamps.....	93
Fuel.....	167
Additives.....	168
Ethanol .....	168
Fuel cap .....	170
Fuel filler door .....	170
Fuel type .....	169
Fumes warning.....	168
Gauge .....	66
Low fuel warning .....	71
Octane rating.....	169, 224
Precautions .....	167
Refuelling .....	170
Tank capacity .....	225
Fuses and relays .....	193

## **G**

Gauges.....	64
Fuel .....	66
Information displays .....	64
Odometer .....	66
Speedometer.....	65
Tachometer .....	66
Glove box .....	34

## **H**

Hand brake .....	155
Hands-free phone.....	128
Hazard warning .....	9, 92
Headlamps .....	188
Headlamp range adjustment....	91
High beam indicator lamp .....	91
Operation .....	90
Head restraints .....	6, 38
Heated front seats .....	43
Heated rear window.....	31
Heating and ventilation .....	137
High beam .....	9, 72, 91
Hill Start Assist (HSA).....	156
Horn.....	58

## **I**

Identification label.....	222
Identification number .....	222
Ignition switch/lock.....	143
Immobiliser .....	28, 71
Indicators/warning lamps.....	64
Infant and child restraints .....	53
Inflation, tyres .....	199, 226
Information displays.....	64, 73
Infotainment system .....	96
AM-FM radio .....	105
Android Auto, Apple CarPlay..	130
Audio .....	105
Auxiliary devices .....	118
Bluetooth music.....	119
Bluetooth phone .....	125
DAB radio.....	108
Gallery.....	122
Hands-free phone .....	128
Projection .....	130
Settings .....	132
USB port.....	111
Instrument cluster.....	64
Instrument panel layout .....	8



Interior lamps ..... 93  
 Interior mirrors ..... 29

## **J**

Jack  
     Jacking locations ..... 208  
     Operation ..... 208  
     Storage ..... 199  
 Jump starting ..... 210

## **K**

Keys  
     Ignition key ..... 4, 17

## **L**

Lighting ..... 90  
     Automatic light control ..... 90  
     Battery power protection ..... 95  
     Bulb replacement ..... 188  
     Courtesy lamps ..... 94  
     Daytime Running Lamps (DRL) ..... 92  
     Exit lighting ..... 95  
     Fog lamps ..... 93  
     Hazard lamps ..... 9, 92  
     Headlamp range adjustment .... 91

Headlamps ..... 90  
 High/low beam ..... 91  
 Instrument panel ..... 93  
 Interior lamps ..... 93  
 Lamp control ..... 90  
 Reversing lamps ..... 93  
 Sun visor lamps ..... 94  
 Turn signals ..... 92  
 Vehicle locator lights ..... 95  
 Loading capacity ..... 224, 225  
 Loading the vehicle ..... 36, 224  
 Locks  
     Bonnet lock ..... 178  
     Child safety locks ..... 25  
     Door locks ..... 25  
     Ignition switch/lock ..... 14  
     Locking and unlocking ..... 16, 143  
     Tailgate lock ..... 26

## **M**

Maintenance ..... 176  
 Manual door locks ..... 25  
 Manual transmission ..... 153  
     Fluid ..... 221  
 Messages ..... 78

## **Mirrors**

    Exterior ..... 28  
     Interior ..... 29

## **N**

New vehicle running-in ..... 143  
 Number location (engine) ..... 223

## **O**

Object detection system ..... 160  
 Octane rating ..... 169, 224  
 Odometer ..... 65

## **Oil**

    Adding oil ..... 183  
     Change interval ..... 183  
     Checking oil level ..... 182  
     Dipstick ..... 182  
     Low pressure warning ..... 71  
     Oil life system ..... 220  
 Overheating ..... 184  
     Engine temperature warning .... 71

## **P**

Park assist ..... 160  
 Park brake ..... 155  
     Park brake warning ..... 69



Parking ..... 15, 147  
 Parking lamps..... 190  
 Petrol ..... 169, 224  
 Polishing..... 217  
 Pollen/dust filter ..... 141, 184  
 Power mirrors ..... 28  
 Power outlet..... 62  
 Power windows..... 30  
 Puncture ..... 198  
 Push/tow start warnings ..... 210

## R

Radiator cap ..... 184  
 Rear view mirror ..... 29  
 Rear vision camera..... 162  
 Rear Vision Camera (RVC) ..... 162  
 Rear window demister ..... 31  
 Refuelling..... 170  
 Relays..... 194  
 Restraints ..... 38  
     Child restraints ..... 53  
     Infant restraints ..... 54  
 Ride control systems ..... 156  
 Roof  
     Sunroof..... 32

Roof rack loads..... 37  
 Running-in a new vehicle ..... 143

## S

Seat belts  
     Force limiters..... 46  
     Seat belt warning ..... 68  
     Tensioners..... 46  
 Seats ..... 38  
     Adjustment ..... 5, 40  
     Child restraints ..... 53  
     Front seats ..... 40  
     Head restraints..... 6, 39  
     Heated seats ..... 43  
     Rear seats..... 43  
 Security  
     Immobiliser..... 28, 71  
 Servicing..... 220  
 Settings..... 86  
 Side Blind Zone Alert (SBZA) .... 165  
 Snow chains ..... 202  
 Spare tyre ..... 198  
 Specifications ..... 221, 224  
     Axle loads..... 225  
     Capacities ..... 225

Dimensions ..... 225  
 Engine ..... 224  
 Loading ..... 224  
 Towing capacity..... 171  
 Tyre pressure ..... 226  
 Speedometer..... 65  
 Stability control ..... 157  
 Starting ..... 143  
     Flat battery ..... 210  
     Normal..... 145  
 Starting the engine  
     With a low transmitter  
         battery ..... 146  
 Steering ..... 58  
     Tilt ..... 7, 58  
 Steering wheel adjustment ..... 7, 58  
 Storage compartments ..... 34  
 Sunglasses holder ..... 35  
 Sunroof ..... 32  
 Sun visors..... 32  
 Supplemental Restraint System  
 (SRS)..... 50



**T**

Tachometer.....	66
Tailgate .....	26
Tank capacity.....	225
Technical data.....	222
Temperature warning.....	71
Tilt steering.....	58
Tools .....	198
Towing .....	171, 213
Caravan/trailer.....	171
Equipment.....	173
Loading .....	171
Precautions .....	173
Traction Control System (TCS).....	156
Warning.....	70
Trailer towing .....	171
Transmission	
Automatic .....	149
Fluid .....	221
Manual .....	153
Trip computer .....	84
Turn signals.....	92
Tyre pressure.....	199, 226

**Tyres**

Chains.....	202
Changing.....	206
Placard.....	200
Repair kit.....	202
Replacement.....	200
Rotation.....	200, 201
Tread depth.....	200
Tyre sealant and compressor kit	202

**U**

USB port.....	111
---------------	-----

**V**

Vanity mirror .....	32
Vehicle care .....	175
Vehicle data.....	224
Vehicle Identification Number (VIN) .....	222
Vehicle loading .....	224, 225
Vehicle personalisation.....	86
Vehicle storage.....	177
Ventilation system.....	137
Vents.....	140

**W**

Warning lights.....	64
Washer fluid.....	185
Washing the vehicle .....	216
Wheels and tyres.....	199
Windows.....	30
Windscreen demister.....	138
Windscreen washer fluid .....	185
Wiper blades.....	217
Wipers and washers.....	59



















